

BSP 220/221

Steam oven

Table of contents

Important safety information	3	Basic settings	20
Causes of damage	4		
Environmental protection	5	Cleaning and maintenance	22
Environmental protection	5	Cleaning agents	22
Tips for saving energy	5	Cleaning programme	23
		Descaling programme	23
		Removing slide-in rails	24
Getting to know the appliance	6		
Steam oven	6	Trouble shooting	25
Display and operating controls	7	Power cut	26
Symbols	7	Demo mode	26
Colours and display	8	Replacing the oven light	26
Additional information i and i [®]	8		
Cooling fan	8	After-sales service	26
Function selector positions	9		
Accessories	10	Settings table and tips	27
Special accessories	10	Vegetables	27
		Vegetables – slow steaming	28
Before using for the first time	10	Fish – steaming	28
Setting the language	10	Fish – slow steaming	29
Setting the time format	10	Meat/poultry – low-temperature steaming	30
Setting the clock	11	Meat/sausages – heating up	30
Setting the date format	11	Poultry – Steaming	31
Setting the date	11	Side dishes	31
Setting the water hardness	11	Desserts	31
Ending initial set-up	11	Miscellaneous	32
Calibration	12	Regenerating (reheating)	32
Cleaning accessories	12	Raising dough	32
		Defrosting	33
Activating the appliance	13	Preserving	34
Standby	13	Extracting juice (soft fruit)	34
Activating the appliance	13	Preparing yoghurt	35
		Preparing bulky food	35
Operating the appliance	13		
Filling the water tank	13		
Cooking compartment	14		
Inserting accessories	14		
Switching on	15		
After every use	15		
Safety shut-off	15		
Timer functions	16		
Calling up the timer menu	16		
Timer	16		
Stopwatch	16		
Cooking time	17		
End of cooking time	18		
Long-term timer	19		
Setting the long-term timer	19		
Child lock	19		
Activate the child lock	19		
Deactivating the child lock	19		

Additional information on products, accessories, replacement parts and services can be found at www.gaggenau.com and in the online shop www.gaggenau-eshop.com

⚠ Important safety information

Read these instructions carefully. Only then will you be able to operate your appliance safely and correctly. Retain the instruction manual and installation instructions for future use or for subsequent owners.

This appliance is only intended to be fully fitted in a kitchen. Observe the special installation instructions.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under warranty.

This appliance is intended for domestic use only. The appliance must only be used for the preparation of food and drink. The appliance must be supervised during operation. Only use this appliance indoors.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised. Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

Always slide accessories into the cooking compartment correctly. See description of accessories in the instruction manual.

Risk of fire!

Combustible items stored in the cooking compartment may catch fire. Never store combustible items in the cooking compartment. Never open the appliance door if there is smoke inside. Switch off the appliance and unplug it from the mains or switch off the circuit breaker in the fuse box.

Risk of burns!

- The appliance becomes very hot. Never touch the interior surfaces of the cooking compartment or the heating elements. Always allow the appliance to cool down. Keep children at a safe distance.
- Accessories and ovenware become very hot. Always use oven gloves to remove accessories or ovenware from the cooking compartment.
- Hot steam may escape during operation. Do not touch the ventilation openings. Keep children away.

Risk of scalding!

- When you open the appliance door, hot steam can escape. Steam may not be visible, depending on its temperature. When opening, do not stand too close to the appliance. Open the appliance door carefully. Keep children away.
- The water in the evaporator dish is still hot even after the appliance has been switched off. Do not empty the evaporator dish immediately after switching off the appliance. Allow the appliance to cool down before cleaning it.
- Hot liquid may spill over the sides of cooking containers when they are removed from the cooking compartment. Remove hot cooking containers with care and always wear oven gloves.

Risk of electric shock!

- Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers. If the appliance is faulty, unplug the mains plug or switch off the fuse in the fuse box. Contact the after-sales service.
- The cable insulation on electrical appliances may melt when touching hot parts of the appliance. Never bring electrical appliance cables into contact with hot parts of the appliance.
- Penetrating moisture may cause an electric shock. Do not use any high-pressure cleaners or steam cleaners.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.

Causes of damage

Caution!

- Do not place anything on the cooking compartment floor. Do not cover it with aluminium foil. A build-up of heat could damage the appliance.
The cooking compartment floor and the evaporator dish must always be kept clear. Always place ovenware in a perforated cooking container or on a wire rack.
- Aluminium foil in the cooking compartment must not come into contact with the door panel. This could cause permanent discolouration of the door panel.
- We recommend you use a mineral water low in chloride and without added carbonic acid if your tap water contains large amounts of chloride (>40 mg/l). You can inquire with your local water supply company to obtain information about your tap water.
- Ovenware must be heat and steam resistant. Silicone baking tins are not suitable for combined operation with steam.
- Use only original accessories in the cooking compartment. Rusting material (such as serving platters or knives and forks) can cause corrosion in the oven interior.
- Use original small parts (e.g. knurled nuts) only. Order small parts from our after-sales service if these should be lost.
- When steaming with a perforated cooking container, always insert the baking tray or the solid cooking container underneath. Dripping liquid is caught.
- Do not store moist food in the closed cooking compartment for long periods. It can lead to corrosion in the cooking compartment.
- Salt, spicy sauces (e.g. ketchup or mustard) or salted dishes (e.g. cured roast) contain chloride and acids. These corrode the surfaces of stainless steel. Always remove residues immediately.
- Fruit juice may leave stains in the cooking compartment. Always remove fruit juice immediately and wipe the cooking compartment with a moist and dry cloth.
- The cooking compartment in your appliance is made of high grade stainless steel. Improper care can lead to corrosion in the cooking compartment. Refer to the care and cleaning instructions in the instruction manual. After every use, clean the cooking compartment after the appliance has cooled down. After cleaning, dry the cooking compartment with the drying program.

- Do not detach the door seal. The appliance door will no longer close properly if the door seal is damaged. The fronts of adjacent units could be damaged. Have the door seal replaced.
- Do not carry or hold the appliance by the door handle. The door handle cannot support the weight of the appliance, and could break.

Environmental protection

Unpack the appliance and dispose of the packaging in an environmentally-responsible manner.

Environmental protection



This appliance is labelled in accordance with the European Directive 2012/19/EU concerning used electrical and electronic appliances (WEEE – waste electrical and electronic equipment). The guideline determines the framework for the return and recycling of used appliances as applicable.


Tips for saving energy

- Open the appliance door as little as possible while cooking.
- For longer cooking times, you can switch off the steam oven 10 minutes before the end of the cooking time and you can use the residual heat to finish cooking.
- When steaming, you can cook simultaneously on several levels. If dishes require different cooking times, insert the dishes that require the longest time first.

Getting to know the appliance

Use this section to familiarise yourself with your new appliance. The control panel and the individual operating controls are explained. You will find information on the cooking compartment and the accessories.

Steam oven

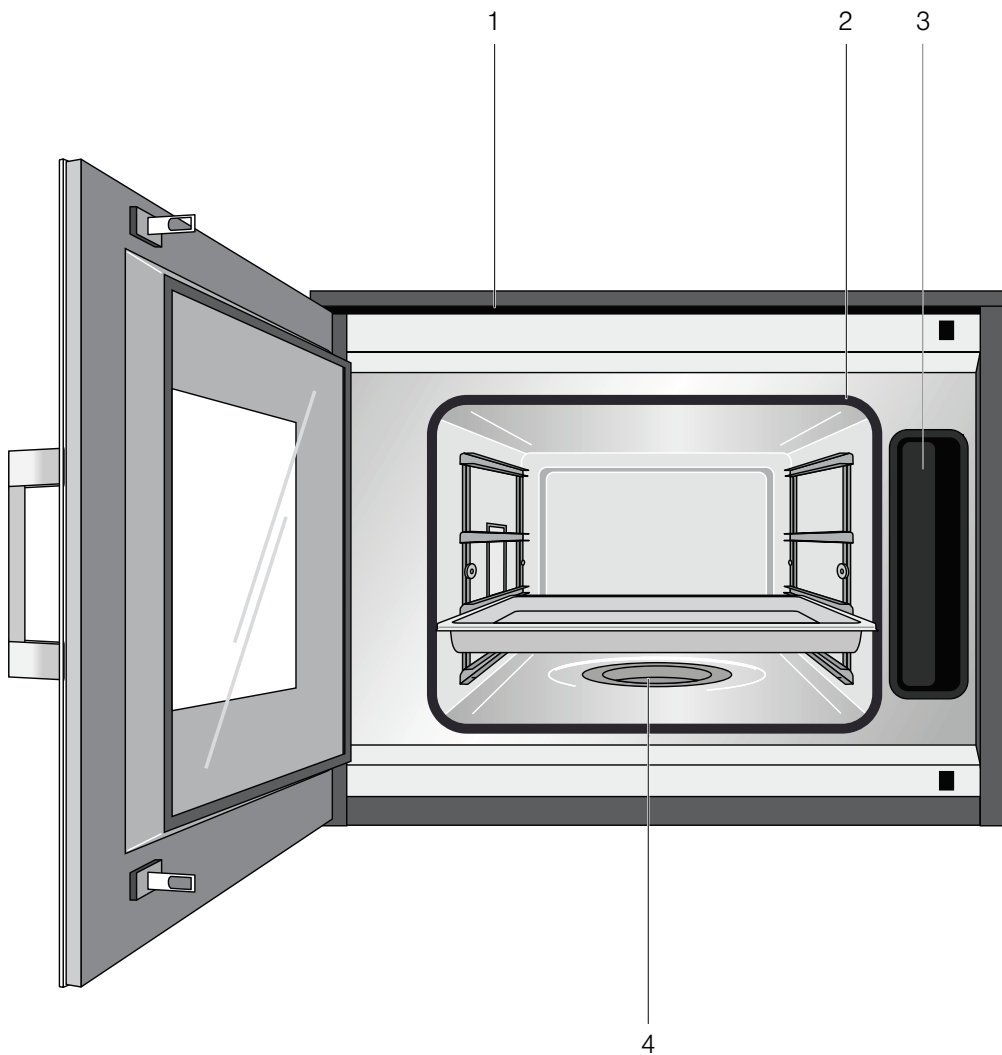

1 Ventilation opening

2 Door seal


3 Water tank

4 Evaporating dish

Display and operating controls

These instructions are valid for different versions of the appliance. There may be minor differences depending on the appliance model.

All versions of the appliance are operated in an identical manner.

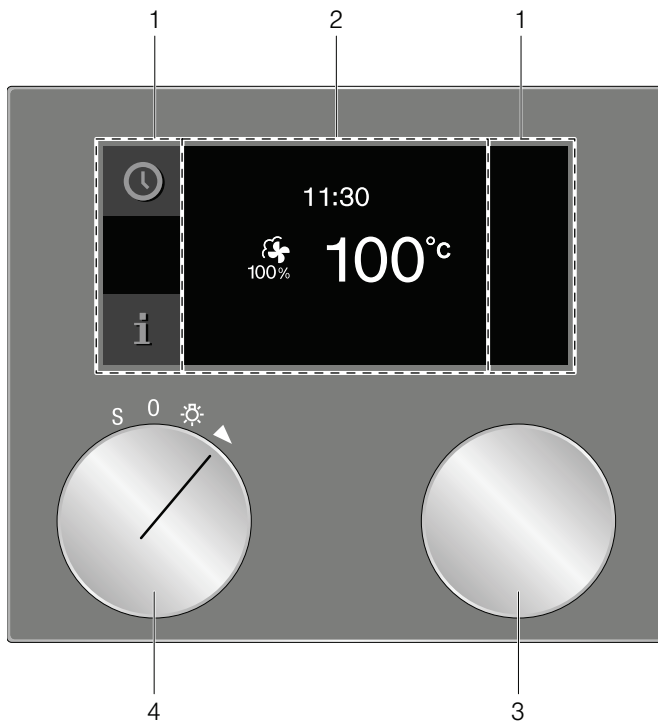

1	Control panel	These areas are touch sensitive. Touch a symbol to select the corresponding function.
2	Display	The display shows, for example, current settings and options.
3	Rotary selector	You can use the rotary selector to set the temperature and to make further settings.
4	Function selector	The function selector is used to select the type of heating, the cleaning programme or the basic settings.

Symbols

Symbol	Function
▶	Start
■	Stop
	Pause/End
✕	Cancel
C	Delete
✓	Confirm/save settings
>	Selection arrow
i	Call up additional information
⤴	Heating up with status indicator
↘	Edit settings
🔒	Child lock
🕒	Call up timer menu
🕒	Call up long-term timer
🚧	Demo mode

Colours and display

Colours


The different colours are used to guide the user in the relevant setting situations.

Orange	Initial settings Main functions
Blue	Basic settings Cleaning
White	Values which can be set

Display

The appearance of the symbols, values or the entire display changes depending on the situation.

Zoom	The setting which is currently being changed is displayed in an enlarged format. A cooking time that is coming to an end is shown in an enlarged format shortly before running out (e.g. the last 60 seconds of the timer).
Reduced display	After a short time, the display is reduced and only the most important information is displayed. This function is preset and can be changed in the basic settings.

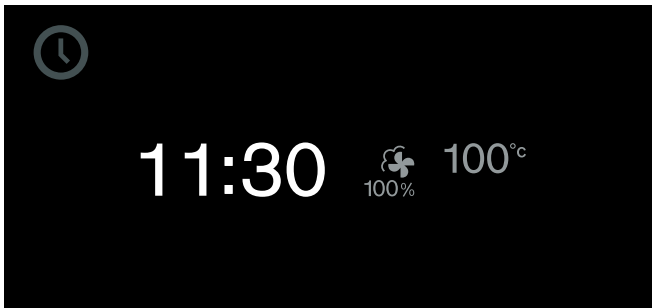

Additional information i and i[Ⓞ]

By touching the **i** symbol, you can call up additional information.

The **i[Ⓞ]** symbol appears for important information and indicates that an action is required. Important information on safety and operation mode are also intermittently shown automatically. These messages disappear automatically after several seconds or must be confirmed with **✓**.

Before starting, you are shown information, for example, on the type of heating which has been set. This allows you to check if the current setting is suitable for your meal.

During operation, you are shown information, for example, on the elapsed and remaining time and/or on the current cooking compartment temperature.

Note: Once the oven has heated up, slight deviations in temperature are normal during continuous operation.


Cooling fan







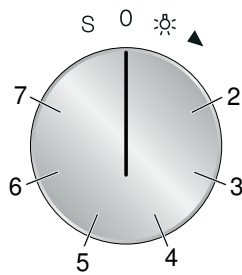


Your appliance has a cooling fan. The cooling fan switches on during operation. Depending on the appliance version, the hot air escapes above or under the door.

After removing cooked food, keep the door closed until the appliance cools down. The appliance door must not be left ajar, as adjoining kitchen furniture may be damaged. The cooling fan continues to run for a certain time after operation and then switches off automatically.

Caution! Do not cover the ventilation slots. Otherwise, the appliance will overheat.

 Function selector positions



Position	Function/heating function	Temperature	Application
0	OFF position		
☁	Light		
2	 100% humidity	30 - 100 °C Default temperature 100 °C	Steaming at 70 °C - 100 °C: for vegetables, fish and side dishes. Meals are surrounded entirely by steam
3	 Slow steaming	30 - 100 °C Default temperature 80 °C	Gentle steaming: for vegetables and fish.
4	 Dough proofing	30 - 50 °C Default temperature 38 °C	Raising: for yeast and sour dough. The dough rises much faster than at room temperature. Hot air and steam are combined to ensure the dough surface does not dry out. The optimum temperature setting for yeast dough is 38 °C.
5	 Defrosting	40 - 60 °C Default temperature 45 °C	For vegetables, meat, fish and fruit. Thanks to the moisture, heat is transferred to meals evenly. Meals do not dry out and do not lose their shape.
6	 Regenerating	60 - 100 °C Default temperature 100 °C	For cooked and baked food. Pre-cooked food is gently heated up again. The moisture keeps the food from drying out.
7	 Low-temperature steaming	70 - 90 °C Default temperature 70 °C	Low-temperature cooking for meat. Gentle, slow cooking for a particularly tender result.
S	 Basic settings		Your appliance can be individually adjusted in the basic settings.
	 Cleaning programme		The cleaning program removes soiling with steam.
	 Descaling programme		With the descaling programme you remove limescale from the oven interior.

 
Accessories

Use only the accessories supplied with the product or available from the after-sales service. They are specially designed for your appliance. Ensure that you always insert the accessories into the cooking compartment the right way round.


Your appliance is equipped with the following accessories:



Wire rack
for cookware, cake tins and casseroles and for roasts



 Stainless steel cooking container, unperforated, GN 2/3, 40 mm deep
for cooking rice, pulses and cereals, for baking cake baked on trays and for collecting dripping liquid during steaming



Stainless steel cooking container, perforated, GN 2/3, 40 mm deep
for steaming vegetables or fish, for extracting juice and for defrosting

Special accessories

You can order the following special accessories from your specialist dealer:

- GN 114 130 Stainless steel cooking container GN 1/3, perforated, 40 mm deep, 1.5 l
- GN 114 230 Stainless steel cooking container GN 2/3, unperforated, 40 mm deep, 3 l
- GN 124 130 Stainless steel cooking container GN 1/3, perforated, 40 mm deep, 1.5 l
- GN 124 230 Stainless steel cooking container GN 2/3, perforated, 40 mm deep, 3 l
- GN 340 230 Cast aluminium roaster GN 2/3, 165 mm high, non-stick coated
- GN 410 130 Stainless steel lid, GN 1/3
- GN 410 230 Stainless steel lid, GN 2/3
- GR 220 046 Wire rack, chrome-plated, with feet

Only use the accessories as specified. The manufacturer accepts no liability if these accessories are used incorrectly.

Before using for the first time

Here you will find everything you need to do before using the appliance to prepare food for the first time. First read the section on *Important safety information*.

After connection to the mains, the "Initial settings" menu appears in the display. You can now make settings for your new appliance.

- Language
- Time format
- Time
- Date format
- Date
- Water hardness

The appliance must be fully installed and connected to the mains.


Notes

- The "Initial settings" menu appears only when the appliance is switched on for the first time after being connected to the mains or when the appliance has been without electricity for several days.
After the appliance is connected to the mains, the GAGGENAU logo is displayed for approx. 30 seconds before the "Initial settings" menu is automatically displayed.
- You may change the settings at any time (refer to the *Basic settings* section).

Setting the language

The preset language appears in the display.

- 1 Turn the rotary selector to select the required display language.
- 2 Confirm with ✓.

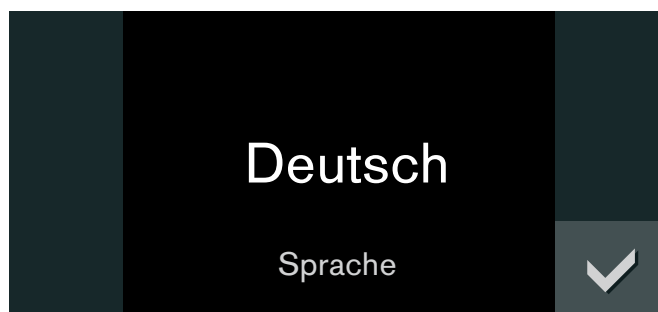


Setting the time format

The two possible formats 24h and AM/PM appear in the display. The default is the 24h format.

- 1 Use the rotary selector to select the desired format.


- 2 Confirm with ✓.

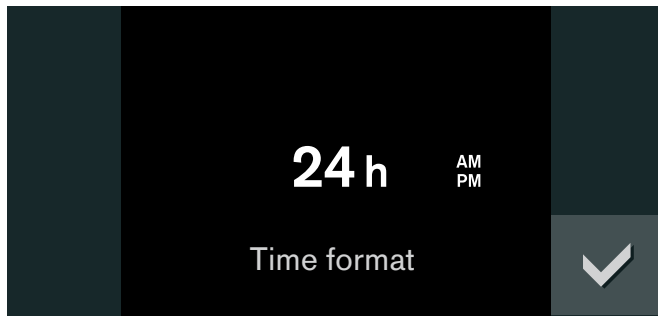

Setting the clock

The time is shown in the display.


- 1 Set the desired time using the rotary selector.
- 2 Confirm with ✓.

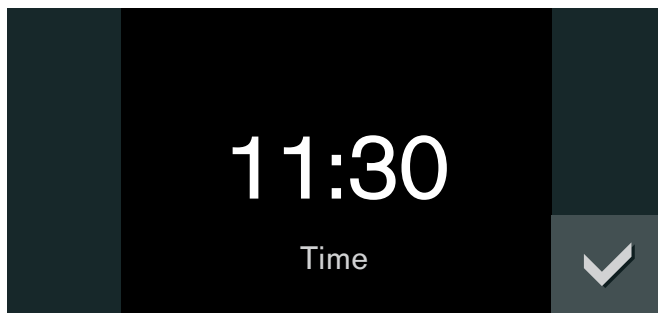

Setting the date format

The three possible formats D.M.Y, D/M/Y and Y/M/D appear in the display. The default is the D.M.Y format.

- 1 Use the rotary selector to select the desired format.
- 2 Confirm with ✓.

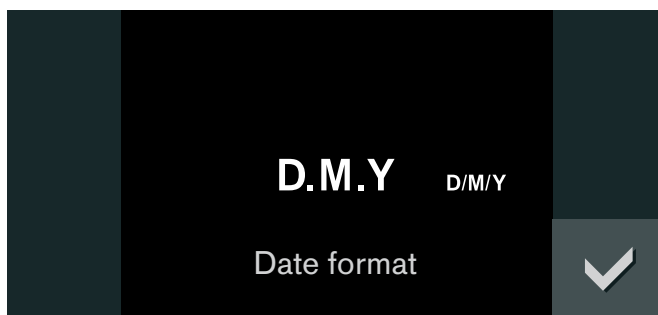


Setting the date

The preset date appears in the display. The day setting is already active.

- 1 Set the day using the rotary selector.
- 2 Touch the > symbol to switch to the month setting.
- 3 Set the month using the rotary selector.
- 4 Touch the > symbol to switch to the year setting.

- 5 Set the year using the rotary selector.


- 6 Confirm with ✓.

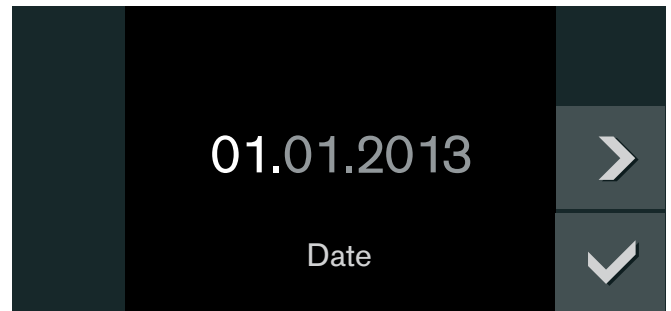

Setting the water hardness

"Water hardness" appears in the display.


- 1 Check the mains water with the included carbonate hardness test: fill the small measurement tube with mains water up to the 5 ml mark.
- 2 Add drops of indicator solution until the color changes from purple to yellow.
Important: count the drops and carefully swing the measurement tube after every drop until the liquids have mixed thoroughly. The number of drops corresponds to the water hardness.
- 3 Use the rotary selector to set the measured water hardness. The value 12 is set by default.
- 4 Confirm with ✓.

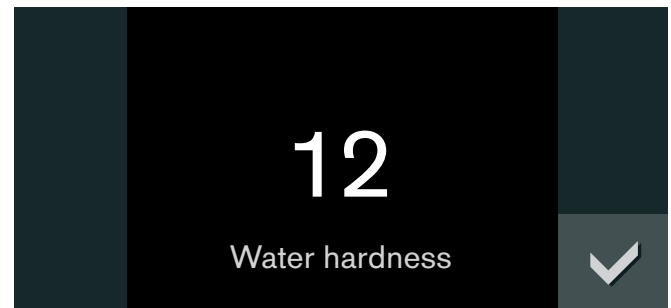

Ending initial set-up

"Initial set-up complete" appears in the display.

Confirm with ✓.

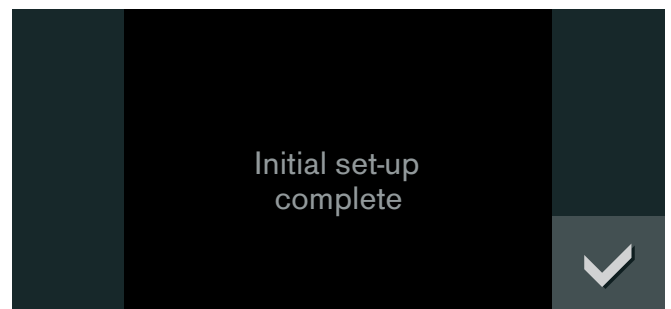

The appliance enters standby mode and the standby screen appears. The appliance is now ready for operation.

Calibrate the appliance before steaming for the first time. The appliance sets the boiling point.


Calibration

The boiling point of water depends on barometric pressure. As air pressure drops with increasing elevation, the boiling point drops as well. During calibration, the appliance sets the boiling point to the pressure conditions at the place where it is installed.


It is important that the appliance steams without interruption for 20 minutes at 100°C. Do not open the appliance door during this time.

Notes

- Calibrate the appliance only when it is cold.
 - During calibration, the appliance generates more steam than it normally would do.
- 1 Turn the function selector to **S**.
 - 2 Select "Basic settings" using the rotary selector.
 - 3 Touch the ✓ symbol.
 - 4 Select "Calibration" using the rotary selector.
 - 5 Touch the _ symbol.
 - 6 Fill the water tank with cold water and touch the ✓ symbol.
 - 7 Remove all accessories from the oven interior and touch the ✓ symbol.
 - 8 The duration of 20.00 minutes appears. Touch ▶ to start calibration.

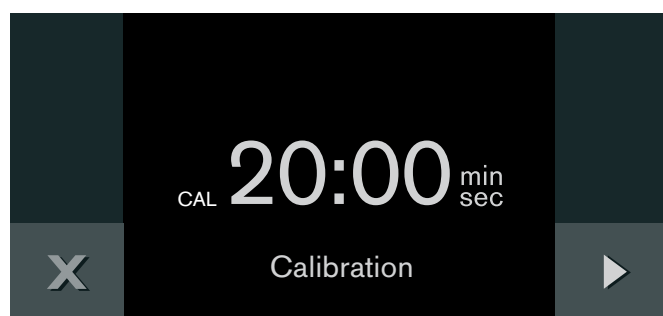

Calibration begins. The elapsing time is shown on the display.

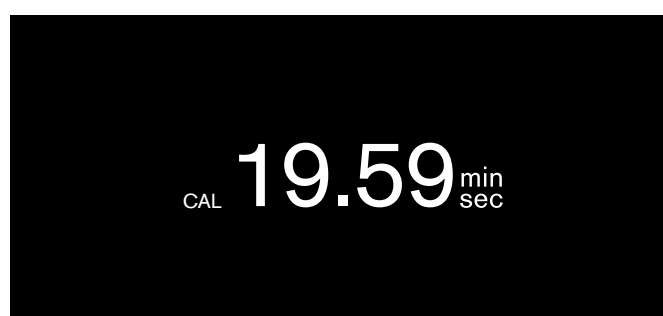

Note: Do not interrupt calibration. Do not turn the function selector. Do not open the appliance door.

A message appears in the display once calibration has ended. Touch ✓ to confirm and turn the function selector to **0**.

After moving house

Repeat calibration so that the appliance will automatically adjust itself to the new location.

After a power cut

The appliance saves the calibration settings even in the event of a power cut or disconnection from the mains. Recalibration is not necessary.

Cleaning accessories


Before using the accessories for the first time, clean them thoroughly using hot detergent solution and a soft cloth.

Activating the appliance

Standby

The appliance goes into standby mode if no function has been set or the child lock is activated.

The brightness of the control panel is dimmed in standby mode.

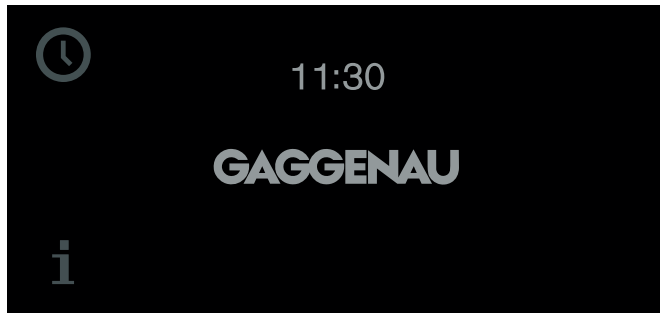

Notes

- Different displays are available for standby mode. The default setting is the GAGGENAU logo and the clock. To change the display, refer to the *Basic settings* section.
- The brightness of the display depends on the vertical viewing angle. You can adjust the display using the "Brightness" setting in the basic settings.

Activating the appliance

To exit standby mode, you can either:

- turn the function selector,
- touch a control panel,
- or open or close the door.

You can now set the required function. Please refer to the corresponding sections for information on how to set functions.

Notes

- If no settings are implemented for a long period of time after activation, the standby screen will reappear.
- When the door is open, the interior lighting goes out after a short time.

Operating the appliance

Filling the water tank

When you open the appliance door, you will see the water tank on the side.


Caution! Use of unsuitable liquids may damage the appliance

- Only use fresh tap water, softened water or uncarbonated mineral water.
- If your tap water is very hard, we recommend that you use softened water.
- Do not use distilled water, highly chlorinated tap water (> 40 mg/l) or other liquids.


You can obtain information about your tap water from your water supplier. The water hardness can be checked with the test set enclosed.

Fill the water tank before every operation (except for "Hot air + 30% humidity", "Hot air + 0% humidity" and "Drying program"):

- 1 Open the appliance door and take out the water tank (fig. A).
- 2 Fill the water tank with cold water up to the "max" mark (fig. B).

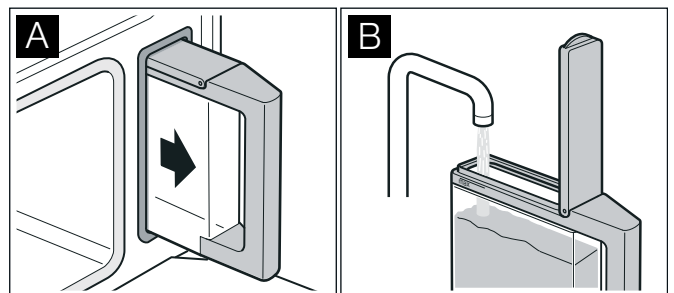

- 3 Close the tank cover until you feel it engage.
- 4 Slide in the water tank all the way (fig. C).

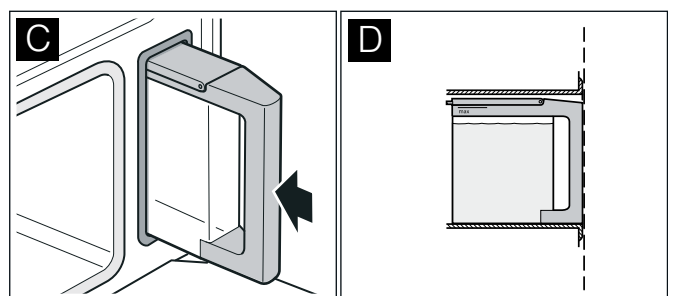


The tank must be flush with the water tank recess (fig. D).

Cooking compartment

The cooking compartment has four shelf positions. The shelf positions are counted from the bottom up.

Note: You can use up to three insertion levels at the same time (levels 2, 3 and 4).

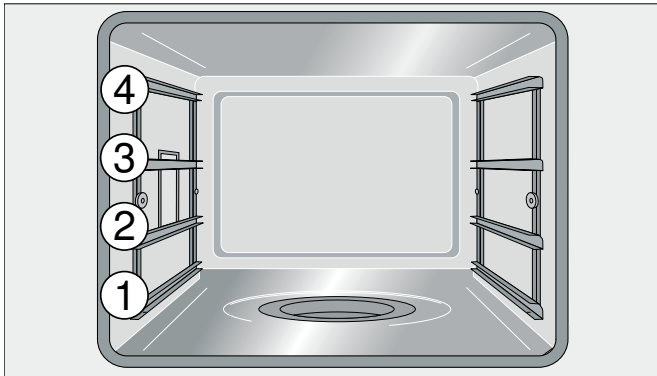

Caution!

- Do not place anything on the cooking compartment floor. Do not cover it with aluminium foil. A build-up of heat could damage the appliance. The cooking compartment floor and the evaporator dish must always be kept clear. Always place ovenware in a perforated cooking container or on a wire rack.
- Do not slide any accessories between the shelf positions, or they may tip.


Always fully open the appliance door to the stop. In this position, the open door will not swing back by itself.

Inserting accessories


The wire rack and the unperforated cooking container feature a locking function. The locking function prevents the accessories from tilting when they are pulled out. The accessories must be inserted into the cooking compartment correctly for the tilt protection to work properly. When removing accessories, you must raise them slightly.

When inserting the wire rack, check

- that the engaging lug (a) is pointing upward
- that the safety bar on the wire rack is at the back and facing upwards.

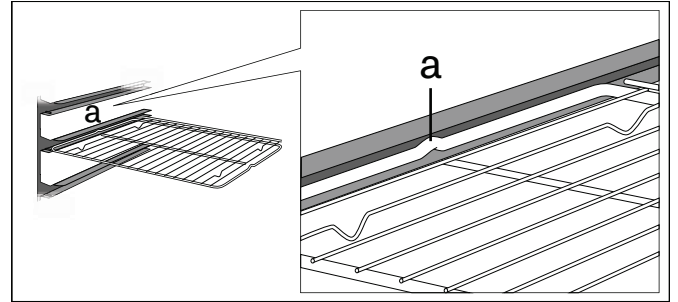
 


When pushing in the unperforated cooking container, make sure that the recess (a) is pointing to the side.

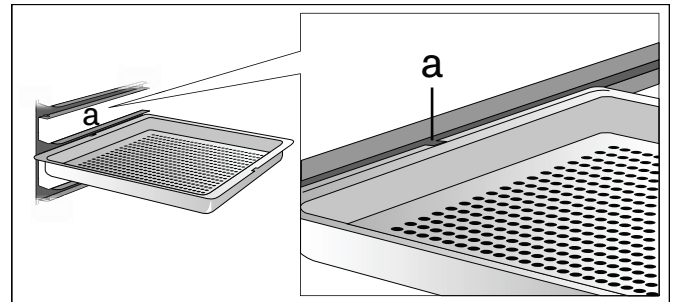

Switching on

- 1 Set the required heating mode using the function selector. The chosen heating mode and the default temperature are displayed.
- 2 If you want to change the default temperature: set the required temperature with the rotary selector.

The preheating symbol  appears on the display. The bar continuously shows the preheating status. When the set temperature is reached, a signal sounds and the preheating symbol  goes off.

Note: The oven interior lighting stays switched off at a temperature setting below 70°C

Topping up water:

A message appears in the display when the water tank is empty. Fill the water tank up to the "max" mark and insert it again.

Switching off:

Turn the function selector to **0**.

After every use

Emptying the water tank.

- 1 Open the appliance door carefully. Hot steam will escape.
- 2 Remove and clean the water tank.
- 3 Thoroughly dry the seal in the tank cover and the tank recess in the appliance.

Caution! Do not dry the water tank in the hot cooking compartment. This will damage the water tank.

Drying the cooking compartment

Risk of scalding!

The water in the evaporator dish may still be hot. Let it cool down before emptying it.


- 1 Remove soiling from the cooking compartment as soon as it has cooled down. Burnt-on remains will be much harder to remove later.
- 2 Empty the evaporator dish with the included cleaning sponge.
- 3 Once it has cooled down, wipe out the cooking compartment and the evaporator dish with the enclosed cleaning sponge and dry well with a soft cloth.
- 4 Wipe kitchen units or handles if condensation has formed on them.

Safety shut-off

For your protection, the appliance is equipped with an automatic safety shut-off. Any heating process is switched off after 12 hours if the oven is not operated in this time. A message appears in the display.

Exception:

The long-term timer has been programmed.

Confirm the message with  and set the function selector to **0**, then the appliance can be operated again as usual.

Timer functions


You use the timer menu to make the following settings:

- ⌘ Short-term timer
- ⌚ Stopwatch
- 🕒 Cooking time (not in standby mode)
- 🕒 Cooking time end (not in standby mode)

Calling up the timer menu

You can call up the timer menu from any mode. Only from the basic settings, function selector is set to **S**, the timer menu is not available.

Touch the 🕒 symbol.

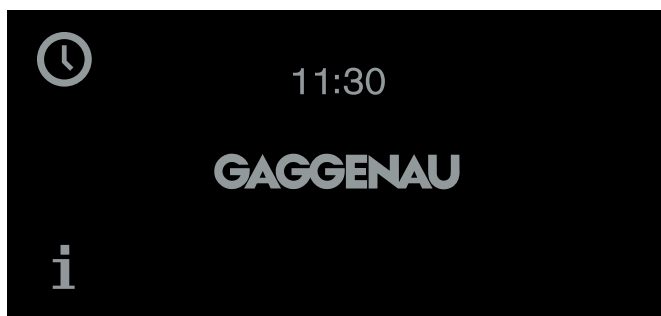


The timer menu is displayed.

Timer

The timer runs independently of the other appliance functions. You can enter a maximum of 90 minutes.


Setting the timer

- 1 Call up the timer menu.
The ⌘ "Timer" function is displayed.
- 2 Turn the rotary selector to set the desired time.

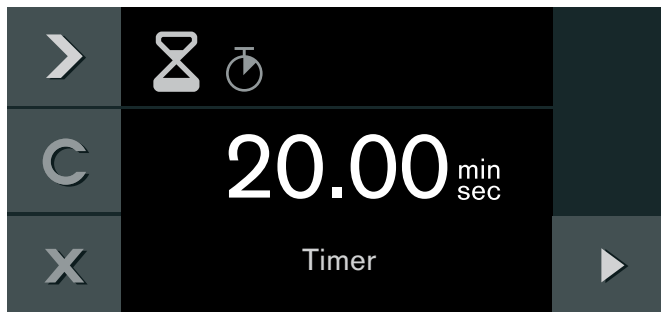

- 3 Touch ▶ to start.

The timer menu is closed and the timing begins. The ⌘ symbol and the elapsed time are shown in the display.

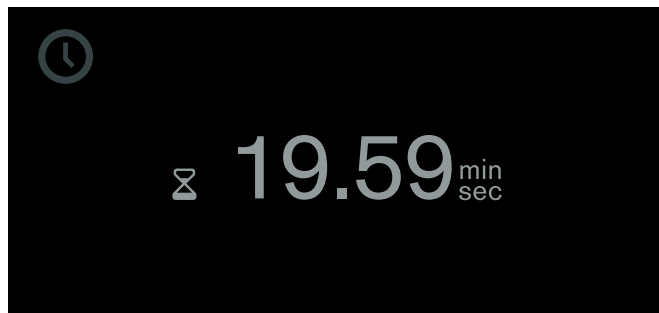

A signal sounds once the time has elapsed. The signal stops if you touch the ✓ symbol.

You can cancel all settings at any time by touching the ✕ symbol. The settings are lost when you do this.

To stop the timer:

Call up the timer menu. Touch ▶ to select the ⌘ "Timer" function and touch the || symbol. To continue the timer counting down, touch the ▶ symbol.

To switch off the timer before it has finished:

Call up the timer menu. Touch ▶ to select the ⌘ "Timer" function and touch the C symbol.

Stopwatch


The stopwatch runs independently of the other appliance functions.

The stopwatch counts from 0 seconds up to 90 minutes.


It also has a pause function, which enables you to temporarily stop the clock.


Starting the stopwatch

- 1 Call up the timer menu.
- 2 Touch ▶ to select the ⌚ "Stopwatch" function.

 
 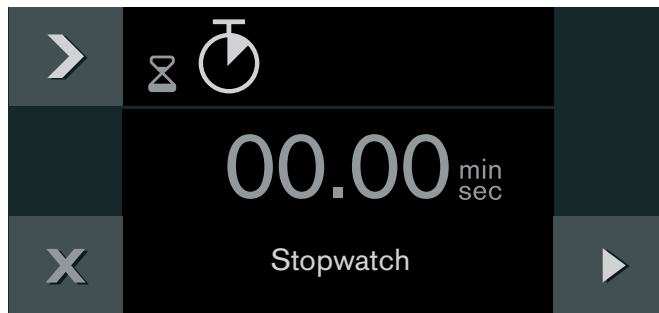



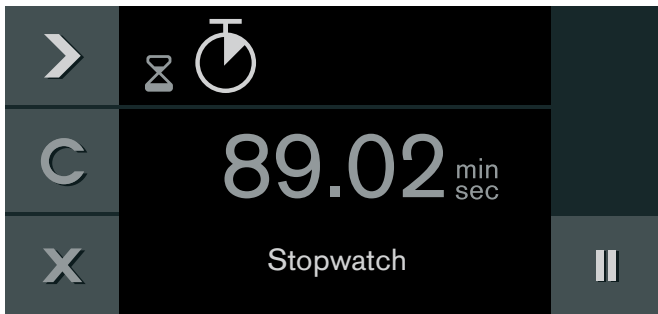
- 3 Touch ▶ to start.


The timer menu is closed and the timing begins. The  symbol and the elapsed time are shown in the display.

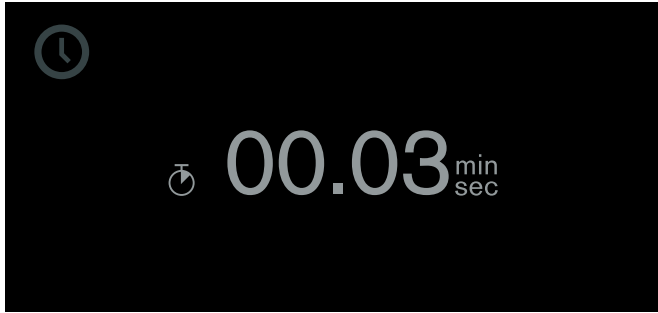

 
 
Pausing and restarting the stopwatch

- 1 Call up the timer menu.
- 2 Touch  to select the  "Stopwatch" function.
- 3 Touch the  symbol.






The time stops. The symbol changes to  Start.

- 4 Touch  to start.

The time continues to run. When 90 minutes is reached, the display pulsates and signal sounds. The signal stops when you touch the  symbol. The  symbol on the display goes out. The process has finished.

 To switch off the stopwatch:

Call up the timer menu. Touch  to select the  "Stopwatch" function and touch the .




Cooking time


If you set a cooking time for your meal, the appliance switches off heating automatically after the selected time.

You can set a cooking time from 1 minute to 23 hours 59 minutes.

Setting a cooking time


You have set the heating mode and temperature and you have placed your dish in the oven.

- 1 Touch the  symbol.
- 2 Use  to select the  "Cooking time" function.
- 3 Set the desired cooking time using the rotary selector.

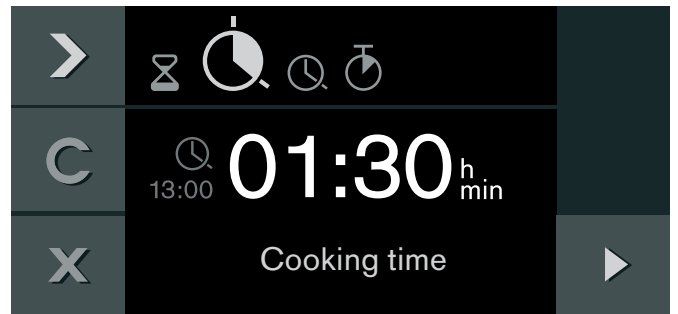




- 4 Press  to start.

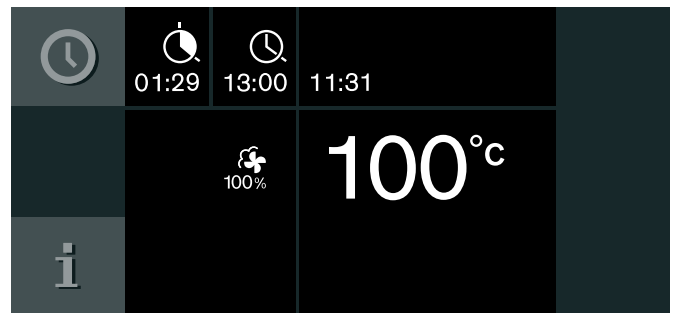The appliance starts. The timer menu is closed. The settings for temperature, heating mode, elapsing time and cooking time end are shown in the display.

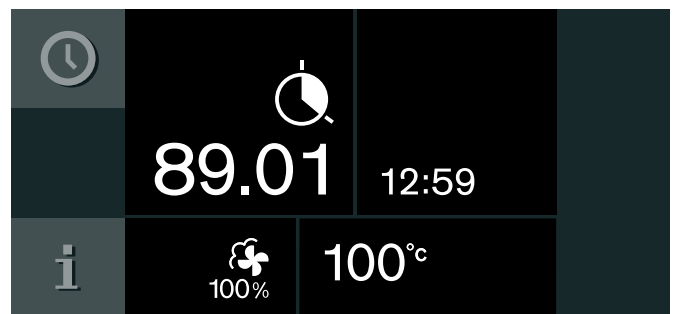


During the last minute of the cooking time the remaining time is displayed in an enlarged format.




The appliance switches off after the cooking time has elapsed. The  symbol flashes and a signal sounds. The signal stops when you touch the  symbol, open the appliance door, or switch the function selector to **0**.

Changing the cooking time:

Call up the timer menu. Use **>** to select the  "Cooking time" function. Change the cooking time using the rotary selector. Press **▶** to start.

Clearing the cooking time:

Call up the timer menu. Use **>** to select the  "Cooking time" function. Clear the cooking time with **C**. Return to normal operation with **X**.

Cancelling the entire operation:

Set the function selector to **0**.

Note: You can also change the heating mode and temperature during the cooking time.

End of cooking time

You can delay the cooking time end to a later time.



Example: it is 14:00. The dish requires a cooking time of 40 minutes. You want it to be ready at 15:30.


Enter the cooking time and delay the cooking time end until 15:30. The electronics system calculates the start time. The appliance starts automatically at 14:50 and switches off at 15:30.

Bear in mind that food which spoils easily should not be left in the cooking compartment for too long.


Delaying the cooking time end

You have set the heating mode, temperature and cooking time.


- 1 Touch the  symbol.
- 2 Use **>** to select the  "Cooking time end" function.

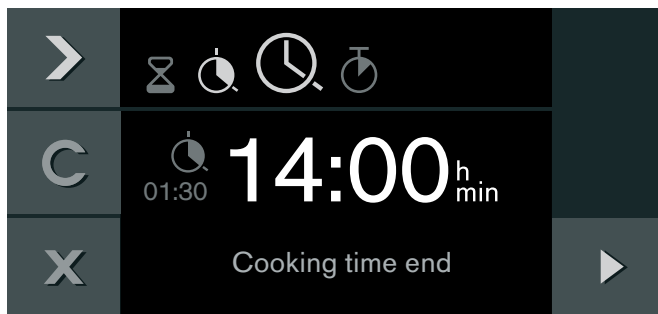

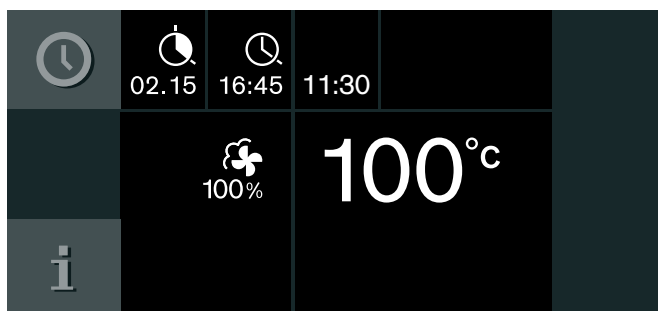

- 3 Set the desired cooking time end using the rotary selector.
- 4 Press **▶** to start.




The appliance switches to standby. The heating mode, temperature, cooking time and cooking time end appear in the display. The appliance starts at the calculated time and switches off automatically when the cooking time has elapsed.

Note: If the  symbol flashes: You have not set the cooking time. Always set the cooking time first.

Once the cooking time has elapsed, the appliance switches off. The  symbol flashes and an audible signal sounds. The signal stops early if you touch the  symbol, open the appliance door, or set the function selector to **0**.

To change the cooking time end:

Call up the timer menu. Use **>** to select the  "Cooking time end" function. Set the desired cooking time end using the rotary selector. Press **▶** to start.

To terminate the whole procedure:

Set the function selector to **0**.

Long-term timer

 


With this function, the appliance maintains a temperature between 50 and 230 °C with the "Hot air" heating function.


You can keep food warm for up to 74 hours without having to switch the appliance on or off.




 




Bear in mind that food which spoils easily should not be left in the oven for too long.


Note: You must set the long-term timer to "available" in the basic settings (refer to the *Basic settings* section).

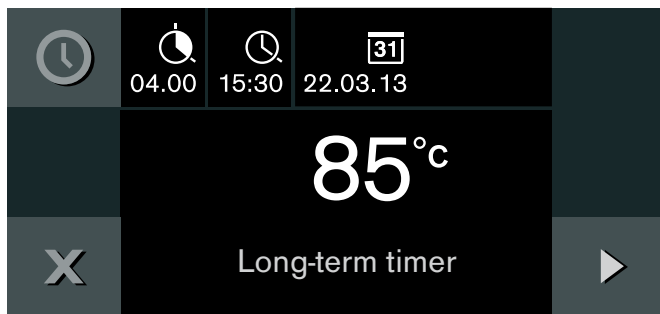Setting the long-term timer

  - 1 Set the function selector to .
- 2 Touch the  symbol.
The default value 24 hrs at 85 °C appears in the display. Press  to start
-or-
Change the cooking time, the cooking time end, the switch-off date and the temperature.



- 3 Changing the cooking time :
Touch the  symbol. Set the required cooking time using the rotary selector.
- 4 Changing the cooking time end :
Touch the  symbol. Set the required cooking time end using the rotary selector.
- 5 Changing the switch-off date :
Touch the  symbol. Set the required switch-off date with the rotary selector. Confirm with .
- 6 Changing the temperature:
Set the required temperature with the rotary selector.
- 7 Press  to start.

The appliance starts.  and the temperature appear in the display.

The oven and display lighting are switched off. The control panel is locked; no key tone sounds when you touch the touch keys.

Once the set time has elapsed, the appliance stops heating. Turn the function selector to 0.

Switching off:

To end the process, turn the function selector to 0.

Child lock

The appliance has a child lock to prevent children operating it accidentally.


Notes


- You must set the child lock to "Available" in the basic settings (refer to the *Basic settings* section).
- If there is a power cut when the child lock is active, the child lock may be deactivated when the power supply returns.


Activate the child lock

Prerequisite:


The function selector is set to 0.


Touch and hold the  symbol for at least 6 seconds.

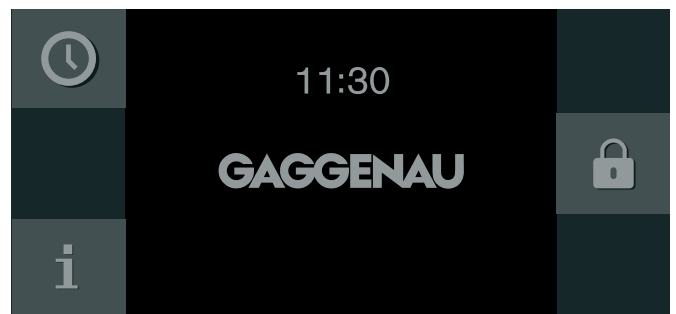

The child lock is activated. The standby screen appears. The  symbol is shown at the top of the display.

 Deactivating the child lock

Touch and hold the  symbol for at least 6 seconds.

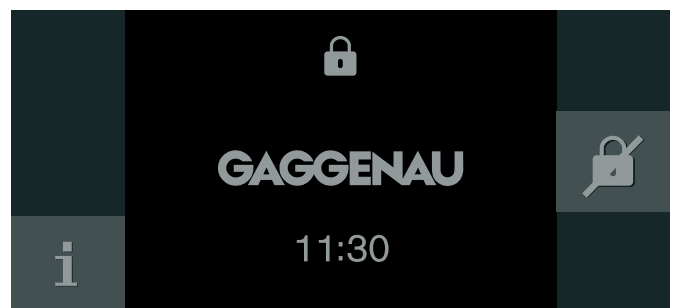





















The child lock is deactivated. You can set the appliance as usual.

Basic settings

Your appliance can be individually adjusted in the basic settings.

- 1 Turn the function selector to **S**.
 - 2 Select "Basic settings" using the rotary selector.
 - 3 Touch the ✓ symbol.
 - 4 Turn the rotary selector to select the required basic setting.
 - 5 Touch the ↘ symbol.
 - 6 Set the basic setting using the rotary selector.
 - 7 Save with ✓ or cancel with X and exit the current basic setting.
 - 8 Turn the function selector to **0** to exit the basic settings menu.
- The changes are saved.

	Basic setting	Permitted settings	Explanation
	Brightness	Level 1, 2, 3, 4, 5*, 6, 7, 8	Sets the display brightness
	Standby screen	On*/Off - Clock - Clock + GAGGENAU logo* - Date - Date + GAGGENAU logo - Clock + date - Clock + date + GAGGENAU logo	Appearance of the standby screen. Off: No display. Use this setting to reduce the standby consumption of your appliance. On: Several displays can be set, confirm "On" with ✓ and use the rotary selector to select the desired display. The selection is displayed.
	Display screen	Reduced* / Standard	If set to <i>Reduced</i> , after a brief period only the most important information is shown.
	Touch field colour	Grey* / White	Selects the colour of the symbols on the touch fields
	Touch field tone	Tone 1* / Tone 2 / Off	Selects an audible signal for when a touch field is touched
	Touch field tone volume	Level 1, 2, 3, 4, 5*, 6, 7, 8	Sets the volume of the touch field tone
	Preheating signal	On* / Off	The signal tone sounds when the cooking compartment has heated up to the required temperature.
	Signal volume	Level 1, 2, 3, 4, 5*, 6, 7, 8	Sets the volume of the audible signal
	Water hardness	1-18	Use the test kit included to test the water hardness of your mains water. Set the measured water hardness.
	Calibration	Calibrate the appliance	Adjusts the boiling point
	Time format	24 h* / AM/PM	Display the clock in 24 or 12-hour format
	Time	Current time	Setting the clock
	Clock change	Manual* / Automatic	Automatically changes the clock to daylight-savings time. If automatic: Setting the month, day and week for when the time should be changed over. To be set for both summer and winter time.

	Date format	D.M.Y* D/M/Y Y/M/D	Sets the date format
	Date	Current date	Sets the date. You can switch between year/month/day using the symbol >.
	Language	German* / French / Italian / Spanish / Portuguese / Dutch / Danish / Swedish / Norwegian / Finnish / Greek / Turkish / Russian / Polish / Czech / Slovenian / Slovakian / Arabic / Hebrew / Japanese / Korean / Thai / Chinese / English US / English	Selects the language for the text display
	Factory settings	Reset the appliance to the factory settings	Confirm the question "Delete all individual settings made and reset to factory settings" by pressing ✓ or cancel by pressing X.
	Demo mode	On / Off*	Only for presentation purposes. The appliance does not heat up in demo mode, all other functions are available. The "Off" setting must be activated for normal operation. The setting is only possible in the first 3 minutes after connecting the appliance to the mains.
	Long-term timer	Available / Not available*	Available: Long-term timer can be set; refer to the <i>Long-term timer</i> section.
	Child lock	Available / Not available*	Available: The child lock can be activated (refer to the <i>Child lock</i> section).

* Factory setting

Cleaning and maintenance

With thorough care and cleaning your appliance will retain its looks and remain in good order. We will explain here how you should care for and clean your appliance correctly.

Risk of burns!

The appliance becomes very hot. Never touch the interior surfaces of the cooking compartment or the heating elements. Always allow the appliance to cool down. Keep children at a safe distance.

Risk of electric shock!

Penetrating moisture may cause an electric shock. Do not use any high-pressure cleaners or steam cleaners.

Risk of injury!

Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.

Cleaning agents

Pay attention to the information in the table to avoid damaging the various surfaces by incorrect cleaning agents.

Do not use

- harsh or abrasive cleaning agents
- metal or glass scrapers to clean the glass on the appliance door
- metal or glass scrapers to clean the door seal
- hard abrasive pads or cleaning sponges

Thoroughly rinse out new sponge cloths before use.

Area	Cleaning agent
Door panels	Glass cleaner: clean with a dish cloth. Do not use any glass scrapers.
Display	Wipe off with a microfiber cloth or a slightly moistened cloth. Do not wipe it off wet.
Stainless steel	Hot soapy water: clean with a dish cloth and dry with a soft cloth. Always remove flecks of limescale, grease, starch and albumin (e.g. egg white) immediately. Corrosion can form under such stains. Special stainless steel cleaning agents can be obtained from the after-sales service or from specialist retailers.
Aluminium	Clean with a mild window cleaning agent. Using a window cleaning cloth or a lint-free microfiber cloth, wipe horizontally over surfaces without applying pressure.

Area	Cleaning agent
Stainless steel or enamel oven interior	Hot soapy water: clean with a dish cloth and dry with a soft cloth. Do not use oven spray or other aggressive oven cleaners or abrasive agents. Scourers, rough sponges and pot cleaners are also unsuitable. They scratch the surface. For regular care, use oven interior care agents in compliance with the manufacturer's specifications (order number 667027 from after-sales service or in the online shop). Caution! – Do not spray cleaner into the ventilation flap on the top of the oven interior! – Cleaner residues will create stains when heated up. Before drying the oven interior, thoroughly remove cleaner or care agent residues with clear water. Always dry the oven interior after cleaning (see Section entitled <i>Drying program</i>).
Extremely soiled stainless steel or enamel oven interior	Oven cleaner gel (order number 463582 from after-sales service or in the online shop). Please note: ● Must not penetrate into seals on the door, the lamp or the evaporator dish. ● Allow it to act for no more than 12 hours. ● Do not use on hot surfaces. ● Rinse thoroughly with water. ● Pay attention to manufacturers' specifications.
Glass cover of oven interior lamp	Hot soapy water: Clean with a dish cloth.
Grease filter	Dishwasher
Water tank	Hot soapy water. Do not clean in a dishwasher. Dry the seal in the cover well. Allow to dry with the cover open.
Tank slot	Rub dry after every use.
Door seal	Hot soapy water: clean with a dish cloth. Do not scrape. Do not use any metal or glass scrapers for cleaning.
Meat probe	Wipe off with a moist cloth. Do not clean in a dishwasher.
Cooking receptacle, rack	Dishwasher or hot soapy solution. Soak baked-in grime and clean with a brush.
Slide-in racks	Dishwasher or hot soapy solution. See Section entitled <i>Removing slide-in racks</i> .

Cleaning sponge

The enclosed cleaning sponge is very absorbent. Use the cleaning sponge only for cleaning the cooking compartment and for removing residual water from the evaporator dish.

Wash the cleaning sponge thoroughly before using for the first time. You can wash the cleaning sponge in the washing machine (hot wash).

Microfibre cloth




The honeycomb microfibre cloth is particularly suitable for cleaning sensitive surfaces such as glass, glass ceramic, stainless steel or aluminium (product no. 460770, also available from our online eShop). It removes liquid and greasy deposits in one go.


Cleaning programme


The cleaning programme loosens dirt in the cooking compartment and makes cleaning easy.


The cleaning programme consists of the steps of once cleaning and twice rinsing.


Starting the cleaning program

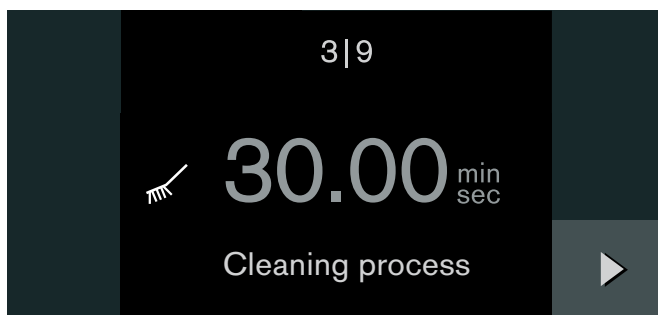

- 1 Set the function selector to **S**.
- 2 The  symbol is displayed. Confirm with .
- 3 Remove accessories and grease filters from the oven interior. Remove slide-in racks from the oven interior (see section entitled *Removing slide-in racks*). Wipe out the cooking compartment with cleaner.
- 4 Fill the water tank with cold water up to the "max" mark and slide it into the tank slot. Close the appliance door.
- 5 The cleaning time of 30 minutes appears. Touch  to start. The cleaning time elapses on the display. The lamp in the cooking compartment stays off.



- 6 A signal sounds after 30 minutes. A message appears in the display.
- 7 Wipe out the cooking compartment. Remove cleaner residues. Fill the water tank with fresh water. Touch  to confirm.

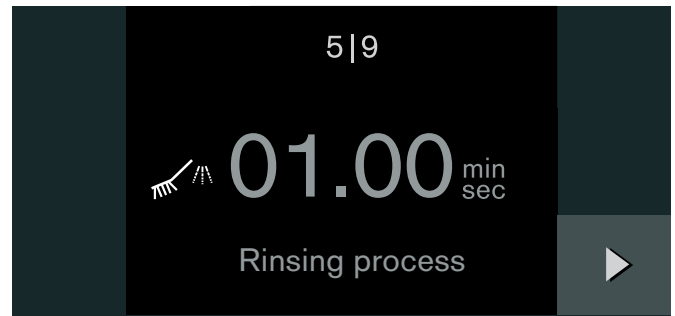- 8 The first rinsing operation appears. Touch  to start. The appliance rinses. The rinsing time elapses on the display.



- 9 A signal sounds after 1 minute. Empty the evaporator dish with the cleaning sponge. Touch  to confirm.
- 10 The second rinsing operation appears. Touch  to start. The appliance rinses. The rinsing time elapses on the display.

A signal sounds after 1 minute. Empty the evaporator dish with the cleaning sponge. Empty the water tank and allow it to dry with the cover open. Wipe the cooking compartment dry with a soft cloth and dry it completely with the drying program.

Note: Always allow the cleaning program to run fully. If the cleaning program has been cancelled prematurely, you must restart the rinsing operation before the next use.

Descaling programme

Your appliance must be descaled at regular intervals for it to remain operable. A reminder appears in the display.

The descaling programme consists of the steps of descaling and twice rinsing.



 
Descaler

For descaling, use only the liquid descaler recommended by after-sales service (order No. 311138 from after-sales service or in the online shop). Other descaling agents can cause damage to the appliance.


Caution! Surface damage: Wipe off descaler immediately with water if it reaches the door seal, the front or other sensitive surfaces.

Starting the descaling programme


The cooking compartment must have cooled down completely.

- 1 Mix 300 ml of water and 60 ml of liquid descaler to form a descaling solution.
- 2 Set the function selector to **S**. Select the descaling program with the rotary selector.
- 3 The  symbol is displayed. Touch  to confirm.
- 4 Fill the water tank with the descaling solution and slide it into the tank slot. Close the appliance door. Touch  to confirm.

- The descaling time of 30 minutes appears. Touch ▶ to start. The descaling time elapses on the display. The lamp in the cooking compartment stays off.

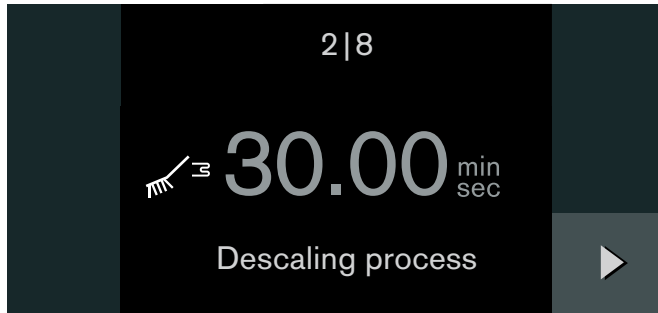

- A signal sounds after 30 minutes. A message appears in the display.
- Empty the evaporator dish with the cleaning sponge. Fill the water tank with cold water. Touch ✓ to confirm.
- The first rinsing operation appears. Touch ▶ to start. The appliance rinses. The rinsing time elapses on the display.

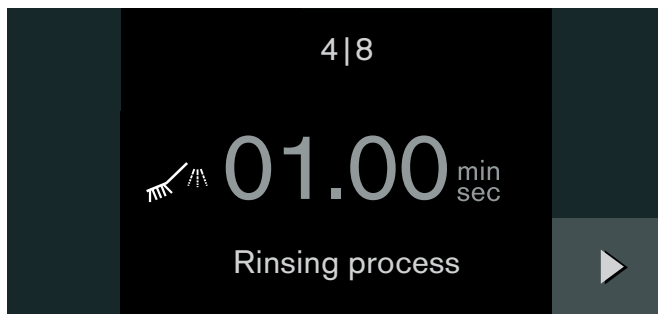

- A signal sounds after 1 minute. Empty the evaporator dish with the cleaning sponge. Touch ✓ to confirm.
- The second rinsing operation appears. Touch ▶ to start. The appliance rinses. The rinsing time elapses on the display.

A signal sounds after 1 minute. The descaling program has ended.

Empty the evaporator dish with the cleaning sponge. Empty the water tank and allow it to dry with the cover open. Wipe the cooking compartment dry with a soft cloth and dry it completely with the drying program.

Then clear the descaling hint from the display.

Clearing the descaling hint

- Set the function selector to **S**. Select "Delete descaling hint" with the rotary selector. Touch ✓ to confirm.
- A message appears. Touch ✓ to confirm.


Note: Always allow the descaling programme to run fully. If the descaling programme has been canceled prematurely, you must restart the rinsing operation before the next use.

Removing slide-in rails

You can remove the slide-in rails for cleaning.

Detaching the rails

- Place a dish cloth in the cooking compartment to protect the stainless steel against scratches.
- Undo the knurled nuts (Figure A).
- Pull away the slide-in rails slightly sideward from the screw and pull it out toward you (Figure B).

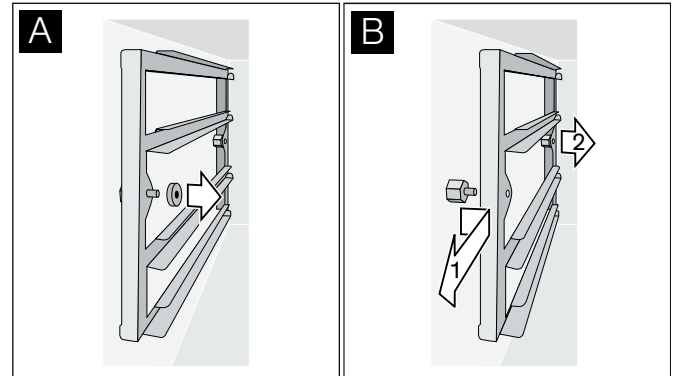

Clean the rails in the dishwasher.

Attaching the rails

- Position the slide-in rails correctly with the stopper at the back.
- Push the slide-in rails onto the bolt at the rear and then hook them in at the front.
- Tighten the knurled nuts.




Note: If you should lose a knurled nut, you can order it as a spare part from our after-sales service. Using knurled nuts other than the original ones will cause corrosion in the oven interior.

Trouble shooting

Malfunctions often have simple explanations. Please read the following notes before calling the after-sales service.

Risk of electric shock!

Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers. If the appliance is faulty, unplug the mains plug or switch off the fuse in the fuse box. Contact the after-sales service.

Disruption	Possible cause	Solution
Appliance not working, no display	Plug not inserted	Connect the appliance to the electricity mains
	Power failure	Check whether other kitchen appliances are working
	Fuse defective	Check in the fuse box whether the fuse for the appliance is in working order
	Operating error	Switch off the fuse for the appliance in the fuse box and switch it on again after about 60 seconds
Appliance cannot be started	Appliance door is not quite closed	Close appliance door
Appliance does not work, display does not respond.  appears in the display	Child lock activated	Deactivate the child lock (refer to <i>Child lock</i> section)
Appliance switches off on its own	Safety shut-off: the appliance has not been operated for longer than 12 hours	Confirm the message with  , switch off the appliance and set it again.
Appliance does not heat up,  appears in the display	Appliance is in demo mode	Deactivate the demo mode in the basic settings
The appliance cannot be started, the display shows an error message	The water tank is empty	Fill the water tank
A lot of steam escapes at the top of the door	Appliance is calibrating the boiling point or is preheating or the heating mode has been changed	This is normal
	The appliance has not yet been calibrated	Calibrate the appliance
A lot of steam escapes at the side of the door	Door seal soiled or loose	Clean the door seal and insert it in the groove
There is a "pop" noise during cooking	Cold/warm effect with frozen food, caused by the steam	This is normal
The appliance is not producing steam properly	Limescale has formed in the appliance	Start the descaling programme
Error message "Exxx"		If an error message is displayed, turn the function selector to 0 ; if the display goes out, there was a non-recurring problem. If the error occurs repeatedly or the display remains on, please contact the after-sales service and inform them of the error code.

Power cut

Your appliance can bridge a power cut of a few seconds. Operation continues.

If the power cut was for a longer period and the appliance was in operation, a message appears in the display. Operation is interrupted.

Set the function selector to **0**, then the appliance can be operated again as usual.

Demo mode

If the ✂ symbol appears in the display, the demo mode is activated. The appliance does not heat up.

Briefly disconnect the appliance from the mains (switch off the household fuse or the circuit breaker in the fuse box). Following this, deactivate the demo mode in the Basic settings within 3 minutes (refer to the *Basic settings* section).

Replacing the oven light

For technical reasons the lamp cover cannot be removed. Lamp must only be replaced by Gaggenau after-sales service.

Caution! Do not remove the lamp cover. This will damage the sealing.

If the lamp cover in the oven is damaged, it must be replaced. You can obtain covers from the after-sales service. Please supply your appliance's E number and FD number.

After-sales service

In the event of repairs please contact our after-sales service. We are committed to find the best solution also in order to avoid an unnecessary call-out.

Please quote the E number (product number) and the FD number (production number) of your appliance when contacting the after-sales service. The rating plate bearing these numbers can be found on the front side when you open the appliance door.

For future reference you can note the data of your appliance and the telephone number of our after-sales service below.

E-Nr.	FD-Nr.
-------	--------

After-sales service ☎

Please note that calling out an after-sales service technician is not free of charge, even within the warranty period, should the problem result from an operating error.

Please find the contact data of all countries in the enclosed customer service list.

To book an engineer visit and product advice

GB 0844 89289988

Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.

IE 01450 2655

AU 1300 727 421

NZ 09 477 0492

Trust the expertise of the manufacturer, and rest assured that the repair will be carried out by trained service technicians using original spare parts for your domestic appliance.

Settings table and tips

Notes

- The specified cooking times are only a recommendation. Actual cooking time is influenced by the quality and temperature of the food, its weight and its thickness.
- Always preheat the appliance. This ensures you achieve the best cooking results. (exception: do not preheat the oven when using the "slow steaming" (🌀) mode)
The specified cooking times apply to a preheated appliance. They are extended by about 5 minutes if you do not preheat the appliance.
- The data refers to average amounts for four persons. If you would like to prepare more, you should calculate a longer cooking time.
- Use the specified cookware. Cooking times may be lengthened or shortened if you use different cookware.
- Begin with the shortest specified time if you do not have much experience with a dish. If necessary, you can extend the cooking time.
- Pay attention to only opening the oven door of the preheated appliance briefly and to filling the appliance swiftly.
- When using only one cooking container, insert it in the second level from below.
- When using the perforated cooking container or the wire rack without additional cookware, always slide the unperforated cooking container into the first level from below to avoid soiling of the cooking compartment's bottom and the evaporating dish.
- You can use up to three insertion levels at the same time (levels 2, 3 and 4 from below). No taste is transferred. Thus, you can prepare fish, vegetables and desserts at the same time. However, the specified cooking times may be extended if you are cooking a large amount of food.
- The food being cooked must not come into contact with the sides of the cooking compartment or the rear plate.
- The oven door must close well. Therefore, always keep the sealing surfaces clean.
- Do not fill up racks and receptacles too densely. This ensures optimum steam circulation.

 
Vegetables







- Vegetables are prepared more gently in steam than in boiling water. Their taste, color and consistency are preserved better. Vitamins and ingredients that are soluble in water are not washed out. As the steam oven operates without pressure at only 100°C, food is prepared considerably more gently than in a pressure cooker, for example.
- All data refers to 1 kg of cleaned vegetables.
- Use the perforated cooking container to steam vegetables, sliding it into the second level from below. Insert the unperforated cooking container under it. This prevents soiling of the oven interior. You can collect the vegetable juice and use it as the base for a sauce or a vegetable broth.
- Blanch vegetables for up to four minutes in the preheated appliance. If vegetables or fruits are not served straight away, place them in ice water to prevent simmering in the residual heat.

Food	Cooking container	Temperature in °C	Humidity in %	Cooking time in min.	Remarks
Artichokes, large	Perforated	100	100	25 - 35	
Artichokes, small	Perforated	100	100	15 - 20	
Cauliflower, whole	Perforated	100	100	20 - 25	
Cauliflower, in florets	Perforated	100	100	15 - 20	
Beans, green	Perforated	100	100	25 - 30	
Broccoli, in florets	Perforated	100	100	10 - 15	
Fennel, in strips	Perforated	100	100	10 - 15	
Vegetable terrine	Perforated/ wire rack	100	100	50 - 60	in a terrine form
Carrots, in slices	Perforated	100	100	10 - 15	

Food	Cooking container	Temperature in °C	Humidity in %	Cooking time in min.	Remarks
Potatoes, peeled and quartered	Perforated	100	100	20 - 35	
Kohlrabi, in slices	Perforated	100	100	15 - 25	
Leek, in slices	Perforated	100	100	5 - 10	
Jacket potatoes (about 50 g each)	Perforated	100	100	25 - 30	
Jacket potatoes (about 100 g each)	Perforated	100	100	40 - 45	
Brussels sprouts	Perforated	100	100	15 - 20	
Asparagus, green	Perforated	100	100	10 - 15	
Asparagus, white	Perforated	100	100	18 - 25	
Tomatoes, skinned	Perforated	100	100	3 - 4	Cut peel once, place in ice water after steaming.
Sugar snaps	Perforated	100	100	10 - 15	

Vegetables – slow steaming

- "Slow steaming" is the ideal cooking method for delicate vegetables which are inclined to colour and texture deterioration while cooking.
- The gentle steaming of the food extends the period of time in which you can achieve a perfect result.
- Exceptionally, do not preheat the appliance and select the "slow steaming"  mode.


Food	Cooking container	Temperature in °C	Heating mode	Cooking time in min.	Remarks
Thin vegetable strips or slices (1 - 2 mm)	Perforated	100		8 - 10	
Chard	Perforated	90		8	
Pak Choi	Perforated	90		7	
Spinach	Perforated	90		7	
Courgette flowers	Perforated	90		8	
Sugar snaps	Perforated	100		10	














 
 
Fish – steaming

- Steaming does not dry out fish and its intrinsic taste and texture are preserved very well.
- For reasons of hygiene, fish and other critical foods should have a core temperature of at least 62 - 65°C after cooking. This is also the ideal cooking point.
- Do not salt fish until after cooking it. This preserves the natural aroma and less water is extracted from the fish.
- When using the perforated cooking container: you can grease it lightly if fish should stick to it too easily.
- Insert the unperforated cooking container in the first level from below to avoid soiling of the oven interior with intensively smelling fish juice.
- In the case of fillets with skin: place the fish with its skin side pointing upward to preserve its structure and aroma.


Food	Cooking container	Temperature in °C	Humidity in %	Cooking time in min.	Remarks
Dorade, whole (700 g)	Unperforated	90 - 100	100	20 - 25	
Fish dumplings (20 - 40 g)	Unperforated	90 - 100	100	5 - 10	Line the unperforated cooking container with baking paper
Lobster, cooked, peeled, regenerating	Perforated	70 - 80	100	10 - 12	
Carp, blue, whole (1.5 kg)	Unperforated	90 - 100	100	40 - 50	in brine
Salmon fillet (300 g each)	Perforated	90 - 100	100	12 - 15	
Salmon, whole (2.5 kg)	Perforated	100	100	70 - 80	
Mussels (1.5 kg)	Perforated	100	100	8 - 12	The mussels are done once the shells have opened.
Hake, whole (800 g)	Perforated	90 - 100	100	20 - 25	
Monkfish fillet (300 g each)	Glass dish/ wire rack	180 - 200	100	10 - 12	in juice
Sea bass, whole (400 g)	Perforated	90 - 100	100	15 - 20	







Fish – slow steaming

- Delicate fish is gently prepared at 80 und 90 °C during "slow steaming". This is the ideal cooking method for juicy and tender fish which easily becomes overcooked and falls apart.
- The gentle steaming of the food extends the period of time in which you can achieve a perfect result.
- Exceptionally, do not preheat the appliance and select the "slow steaming"  mode.
- The data for the various fish types refers to fillets.
- In the case of fillets with skin: place the fish with its skin side pointing upward to preserve its structure and aroma.
- Serve on preheated cookware.

Food	Cooking container	Temperature in °C	Humidity in %	Cooking time in min.	Remarks
Oysters (10 oysters)	Unperforated	80 - 90		2 - 5	in brine
Tilapia (150 g each)	Perforated	80 - 90		10 - 12	
Bream (200 g each)	Perforated	80 - 90		12 - 15	
Fish terrine	Wire rack	70 - 80		50 - 90	in terrine form
Trout, whole (250 g each)	Perforated	80 - 90		12 - 15	
Halibut (300 g each)	Perforated	80 - 90		12 - 15	
Scallops (6 scallops)	Unperforated	80 - 90		4 - 8	
Cod (250 g each)	Perforated	80 - 90		12 - 15	
Red snapper (200 g each)	Perforated	80 - 90		12 - 15	
Ocean perch (120 g each)	Perforated	80 - 90		10 - 12	
Plaice (150 g each)	Perforated	80 - 90		8 - 10	
Rolled sole fillets (80 - 150 g each)	Perforated	80 - 90		12 - 15	
Turbot (300 g each)	Perforated	80 - 90		12 - 15	
Sea bass (150 g each)	Perforated	80 - 90		10 - 12	
Pike-perch (250 g each)	Perforated	80 - 90		12 - 15	

Meat/poultry – low-temperature steaming

- Vigorously browned meat matures over a longer time at a lower temperature. As a result, the meat evenly becomes gentle pink and extraordinarily juicy apart from a very thin edge. And it is neither necessary to turn the meat nor pour juice over it.
- The cooking times specified are only a recommendation and depend very much on the initial temperature of the food and the length of time it is browned.
- Take meat out of the fridge one hour before preparing it.
- For hygienic reasons, sear the meat briefly at a high temperature in the pan from all sides before cooking it. As a result, a crust is produced that prevents leaking of the meat juice and ensures a typical roast aroma.
- Season carefully: slow maturing of the meat boosts all aromas.
- Venison and horse meat tastes stronger after low-temperature steaming than when prepared by classical methods.
- Use the "low-temperature steaming" mode .
- Please note that you cannot achieve any core temperatures above the cooking compartment's temperature. As a rule of thumb: the set oven temperature should be 10-15°C above the desired core temperature.
- You can reduce the temperature to 60°C towards the end of the cooking time. Thus, you can prolong the cooking time (for example, if guests arrive late). If you want to stop the cooking process, the interior temperature must not be higher than the desired core temperature. Thus, large pieces can stay in the oven for 1 - 1.5 hours, while small pieces can stay there for 30 - 45 minutes.
- Serve food on preheated cookware.

Food	Cooking container	Temperature in °C	Heating mode	Cooking time in min.	Remarks
Duck breast, medium-rare (350 g each)	Unperforated	70 - 80		40 - 60	
Entrecôte, medium-rare (350 g each)	Unperforated	70 - 80		20 - 40	
Leg of lamb, without bones, tied, medium-rare (1.5 kg)	Unperforated	70 - 80		150 - 180	
Roast beef, medium-rare (1 - 1.5 kg)	Unperforated	70 - 80		120 - 180	
Medallions of pork, well-done (70 g)	Unperforated	80		30 - 40	
Beefsteaks, medium-rare (200 g)	Unperforated	70 - 80		20 - 40	

Meat/sausages – heating up

Food	Cooking container	Temperature in °C	Humidity in %	Cooking time in Min.	Remarks
Smoked pork chop, sliced	Unperforated	100	100	15 - 20	
Boiled sausages (e.g. Lyoner, white sausage)	Unperforated	85 - 90	100	10 - 20	

Poultry – Steaming

Food	Cooking container	Temperature in °C	Humidity in %	Cooking time in min.	Remarks
Chicken breast, stuffed, steamed (200 g each)	Perforated	100	100	10 - 15	
Turkey breast fillet, steamed (300 g each)	Perforated	100	100	12 - 15	
Spring chicken, quail, pigeon (300 g)	Perforated	100	100	25 - 30	

Side dishes

Observe the manufacturer's recommendations.

Food	Cooking container	Temperature in °C	Humidity in %	Cooking time in min.	Remarks
Basmati rice (250 g + 500 ml of water)	Unperforated	100	100	20 - 25	
Cous-cous (250 g + 250 ml of water)	Unperforated	100	100	5 - 10	
Dumplings (90 g each)	Perforated/ unperforated	95 - 100	100	20 - 25	
Long grain rice (250 g + 500 ml of water)	Unperforated	100	100	25 - 30	
Rice (250 g + 375 ml of water)	Unperforated	100	100	30 - 40	
Lentils (250 g + 500 ml of water)	Unperforated	100	100	25 - 35	
Fresh pasta, cooled	Perforated	100	100	5 - 7	
Fresh pasta, with filling, cooled	Perforated	100	100	7 - 10	
White beans, pre-soaked (250 g + 1 l of water)	Unperforated	100	100	55 - 65	


Desserts

Food	Cooking container	Temperature in °C	Humidity in %	Cooking time in min.	Remarks
Crème Brûlée (130 g each)	Perforated	90 - 95	100	35 - 40	in soufflé dishes, covered with heat-resistant cling film
Yeast dumplings (100 g each)	Unperforated	100	100	20 - 30	Leave yeast dumplings to rise for 30 min. before steaming (see section entitled <i>Dough proofing</i>).
Flan/Crème Caramel (130 g each)	Perforated	90 - 95	100	25 - 30	in soufflé dishes, covered with heat-resistant cling film
Compote	Unperforated	100	100	5 - 15	e.g. apples, pears, rhubarb Add sugar, vanilla sugar, cinnamon or lemon juice to taste.
Milk rice (250 g of rice + 625 ml of milk)	Unperforated	100	100	35 - 45	Add fruit, sugar or cinnamon to taste.

Miscellaneous


Food	Cooking container	Temperature in °C	Humidity in %	Cooking time in min.	Remarks
Disinfecting (e.g. baby bottles, jam jars)	Wire rack	100	100	20 - 25	
Eggs, size M (5 eggs)	Perforated	100	100	8 - 15	
Cooked-egg garnish (500 g)	Glass mould, wire rack	90	100	25 - 30	Cover with heat-resistant transparent film
Semolina dumplings	Unperforated	90 - 95	100	8 - 10	

Regenerating (reheating)

- In the steam oven, you can generate the optimum climate for heating ready-cooked meals without them drying out. Thus, taste and quality are preserved, and meals taste like freshly prepared.
- Use the "Regenerating" mode  to do this.
- The data refers to portions for one person. You can also warm up large quantities in the unperforated cooking container. The specified times are lengthened.


Food	Cooking container	Temperature in °C	Cooking time in min.	Remarks
Vegetables	Plate, wire rack	90 - 100	7 - 10	
Starch-based side dishes	Plate, wire rack	100	10 - 12	e.g. pasta, potatoes, rice; baked or deep fried food such as french fries or croquettes are not suitable

Raising dough

- The steam oven offers the ideal climate for raising dough and dough mixtures or dough pieces without drying them out.
- Use the "Dough proofing" mode  to do this.
- It is not necessary to cover the bowl with a moist cloth. Raising only takes half as much time as it used to.
- The specified dough proofing time is a recommendation only. Raise dough until its volume has doubled.

Food	Cooking container	Temperature in °C	Cooking time in min.	Remarks
Dough mixture	Bowl/wire rack	38	25 - 45	e.g. yeast dough, baking ferment and sour dough

Defrosting

- In the steam oven you can gently and evenly defrost deep frozen food faster than at room temperature.
- Use the "Defrosting" mode * to do this.
- The specified defrosting times are only a recommendation. The time it takes to defrost depends on the size and weight of the frozen food: freeze your food flatly or individually. This shortens the defrosting time.
- Remove the packaging before defrosting.
- Defrost only the quantity you need for preparation.
- Remember: once defrosted, food will not keep for as long and spoils more quickly than fresh food. Immediately process defrosted food and cook it thoroughly.
- After half of the defrosting time, turn meat or fish over. Separate frozen pieces of food such as berries or bits of meat. It is not necessary to fully defrost fish. It will be sufficiently thawed if the tissue is soft enough to absorb the spices.






 
 
Health risk!

When defrosting food from animal sources, you must remove the liquid that escapes during defrosting. It must never come into contact with other food.

Bacteria could be transferred.

Slide the unperforated cooking container underneath the food. Pour away the collected thawing liquid from meat and poultry. Then clean the sink and rinse with plenty of water. Clean the cooking container in hot soapy solution or in a dishwasher.

After defrosting, operate the steam oven for 15 minutes using Hot air at 180°C.

Food	Cooking container	Temperature in °C	Heating mode	Cooking time in min.	Remarks
Berries (300 g)	Perforated	40 - 45	* 	3 - 4	
Roast (1,000 g)	Perforated	40 - 45	* 	45 - 60*	
Fish fillet (150 g each)	Perforated	40 - 45	* 	5 - 10*	
Vegetables (400 g)	Perforated	40 - 45	* 	5 - 7	
Goulash (600 g)	Perforated	45 - 50	* 	30 - 45*	
Chicken (1,000 g)	Perforated	45 - 50	* 	45 - 60*	
Chicken leg (400 g each)	Perforated	45 - 50	* 	20 - 30*	

* You should add some extra time for this dish: switch off the appliance after the defrosting time has elapsed and leave dishes in the closed appliance for another 10 - 15 minutes so that they can thaw completely to their interior.

Preserving

- In the steam oven, you can preserve fruit and vegetables without much effort.
- Preserve food which is as fresh as possible. When foods are stored for a relatively long period, their vitamin content is reduced and they ferment and spoil more easily.
- Use only fruit and vegetables that are in perfect state.
- The steam oven is not suitable for preserving meat.
- Check and thoroughly clean preserving jars, rubber rings, clamps and springs.
- Disinfect rinsed jars before preserving in your steam oven at 100 °C and 100% humidity for 20-25 minutes.
- Place the jars in the perforated cooking container. They must not be in contact with each other.
- After the specified cooking time, open the appliance door. Do not remove the preserving jars from the appliance until they have completely cooled down.

Food	Cooking container	Temperature in °C	Humidity in %	Cooking time in min.	Remarks
Fruit and vegetables (in closed 0.75 l preserving jars)	Perforated	100	100	35 - 40	
Beans and peas (in closed 0.75 l preserving jars)	Perforated	100	100	120	

Extracting juice (soft fruit)

- You can effortlessly and cleanly extract berry juice in the steam oven.
- Place the berries in the perforated cooking container and slide it into the third level from below. Slide in the unperforated cooking container one level below it to collect the juice.
- Leave the berries in the appliance until no more juice appears.
- Finally, place the berries in a cloth and squeeze out the rest of the juice.

Food	Cooking container	Temperature in °C	Humidity in %	Cooking time in min.	Remarks
Berries	Perforated + unperforated	100	100	60 - 120	

Preparing yoghurt

- You can prepare your own yoghurt in the steam oven.
- Heat up pasteurized milk to 90°C on the cooktop to avoid disturbing the yoghurt cultures. Long-life milk (UHT milk) does not need heating. (Note: if you produce yoghurt with cold milk, this will prolong the maturation time.)
- Important! Allow the milk to cool to 40°C in a water bath to avoid destroying the yoghurt cultures.
- Stir natural yoghurt with declared yoghurt cultures into the milk (1 - 2 teaspoons of yoghurt for every 100 ml).
- In the case of yoghurt ferment, pay attention to the notes on the packaging.
- Pour the yoghurt into rinsed jars.
- You can disinfect the rinsed jars in your steam oven at 100°C and 100% humidity for 20 - 25 minutes before pouring in the yoghurt. Make sure you allow the jars and the oven interior to cool down before you pour the yoghurt into the jars and place the jars in the appliance.
- After preparing it, place the yoghurt in the fridge.
- To get firm yoghurt, add skimmed milk powder (1 - 2 tablespoons per liter) to the milk before heating it.

Food	Cooking container	Temperature in °C	Humidity in %	Cooking time in min.	Remarks
Yoghurt mixture (in sealed jars)	unperforated	45	100	240 - 360	

Preparing bulky food

- You can remove the side slide-in rails to prepare bulky food.
- To do this, undo the knurled nuts on the front of the slide-in rails and pull out the rails toward you (see section entitled *Removing slide-in rails*).
- Place the wire rack directly on the bottom of the cooking compartment and then place the food on the rack. Do not place the food directly on the bottom of the cooking compartment.

Gaggenau Hausgeräte GmbH
Carl-Wery-Straße 34
D-81739 München
www.gaggenau.com

GAGGENAU



9000796240 en (921221)