


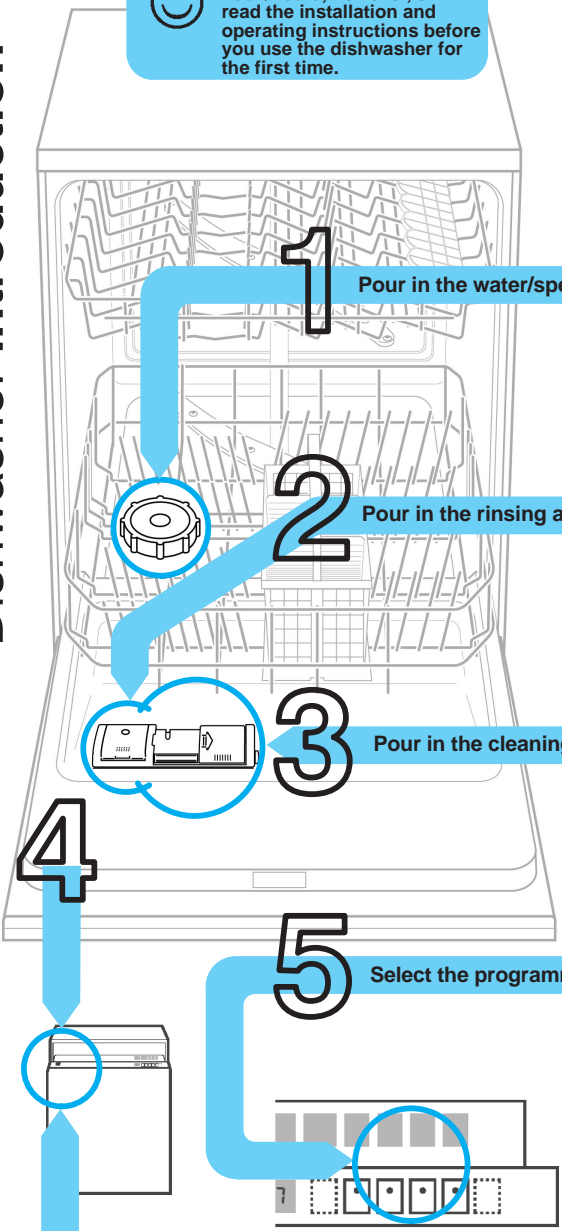


Quick and easy:
everything you need to know
about your dishwasher...
**You should, however, still
read the installation and
operating instructions before
you use the dishwasher for
the first time.**



Inserting the water softening system *

Enter the hardness value ...

 ask your
water supplier



* only necessary before the first rinse or
if the water hardness has changed

Read off the setpoint value ...

°dH	°fH	°Clarke	mmol/l	
0 - 3	0 - 6	0 - 4	0 - 0,6	H0
4 - 6	7 - 11	5 - 8	0,7 - 1,1	H1
7 - 9	12 - 16	9 - 11	1,2 - 1,6	H2
10 - 12	17 - 21	12 - 15	1,7 - 2,1	H3
13 - 16	22 - 29	16 - 20	2,2 - 2,9	H4
17 - 21	30 - 37	21 - 26	3,0 - 3,7	H5
22 - 30	38 - 54	27 - 38	3,8 - 5,4	H6
31 - 50	55 - 89	39 - 62	5,5 - 8,9	H7

Quick procedure ...

and enter it as shown below ...

Press and hold
the ECO button **+** and the on/off
button

The ECO indicator lamp
and the setpoint value 4
flash


Hold the ECO button until
the required value appears

The required setpoint
value appears instead
of "4"

Press the on/off button

The setpoint value
is stored


Dissolves limescale (not required for set value 0!)

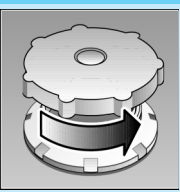


Unscrew
the lid.



Only before using
the dishwasher
for the first time
pour approx. 1 l /
2 pt water into the
salt opening.

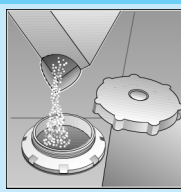

Pour in max.
1.5 kg / 3 lb 5 oz
salt (never deter-
gent!)

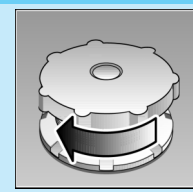

Screw on the
lid. Switch on
dishwasher
immediately.


Cleaning the appliance...




Press the
marking,
Lift the
lid



Always refill when the level indicator is clear.

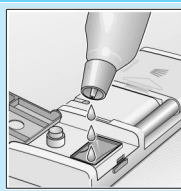


Pour in
the rinsing
agent

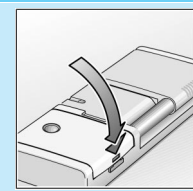


Close the
lid.
CLICK


Little dirt, little cleaning agent

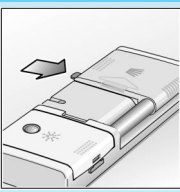

Warning,
combination
products are not
suitable for all
programmes,
follow manufac-
turer's instructions.

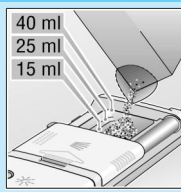

Pour in the
cleaning agent

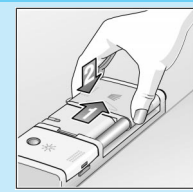

Push the lid
too, press.
PLOP

Quick, economical or intensive ...

Programme overview

This overview lists the max. possible number of
programmes. The programmes supplied with your
appliance are indicated on the fascia.

The programme data are values measured in the
laboratory in compliance with Standard EN 50242.
Deviations in practice are possible.

	Intensive 70°	Auto 55° /65°	Eco 50°	Gentle 40°	Quick 45°	Prerinse
Duration in minutes	112	95-145	140	72	30	19
Electricity consumption in kWh	1,60	1,15-1,50	1,05	0,80	0,80	0,10
Water consumption in litres	21	11-19	14	15	10	4
with Aquasensor	18	—	—	12	—	—

Additional programmes **

Flexibility ...



Soaking

... of utensils in
the bottom
basket,
programme starts
automatically, 5 g
of extra detergent
on the open door!



Turbo

... shorter
programme
running time for
programmes
above 50 °C



Top basket washing

... Utensils are washed
in the top basket only.



Bottom basket washing

... Utensils are washed
in the bottom basket only.



Timer programming

... switch on,
immediately press timer
programming button:
start of programme is
delayed in 1-hour steps.

** some models

7

Switch on the appliance the dishwasher starts...

Press the on/off switch, the cycle time
for the programme selected appears

Switch off the appliance that's it...


Press the on/off switch when
the indicator shows 0 (programme end)

6


Maintenance and care

Strainers ...


Check, if required, clean

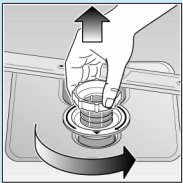


Rotate filter cylinder, remove filter system ...

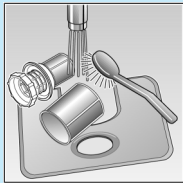

For perfect rinsing results ...
rinse under flowing water ...

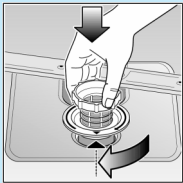

Insert ...

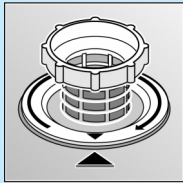


Screw in filter system **NOTE MARK!**

Cleaning the waste-water pump *


- * With some models
- Ladle out water and remove filters
- Unscrew cover (Torx T20)
- Check area of fan impeller for foreign objects
- Screw in cover and insert filters

Spray arms ...


Remove blockages/deposits

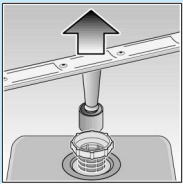


Pull lower arm upwards ...

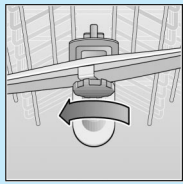


Unscrew upper arm ...

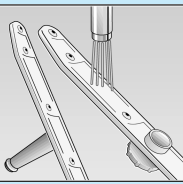


Clean spray nozzles under flowing water (perhaps with toothpick) ...

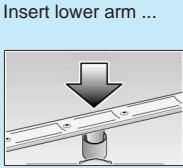

Insert lower arm ...


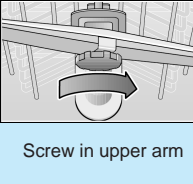


Screw in upper arm

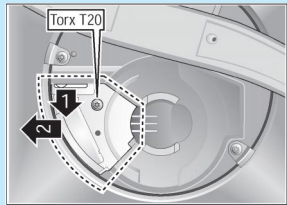

Eliminating minor faults yourself ...

 
... Self-help pays!

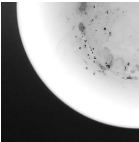Fault	Possible Cause	Remedy	Fault	Possible Cause	Remedy
Residual water in the device	Waste-water pump blocked Programme not yet ended	<ul style="list-style-type: none">▶ Clean waste-water pump (see above).▶ Switch on appliance and close or terminate programme (see Terminating the programme).	Dishes not clean Sand or grainy residues on dishes	Utensils are situated too close to each other or on top of each other Too little cleaning product  Unsuitable programme selected Spray nozzles blocked Filters dirty, not installed securely Spray arms blocked	<ul style="list-style-type: none">▶ Spread out the utensils, avoid contact between the utensils.▶ Follow manufacturer's specifications (detergent).▶ Select more intensive programme.▶ Clean spray arms (see above).▶ Clean the strainers (see above).▶ Arrange the utensils so that the spray arms can rotate freely.
Device does not work/stops	Supply fitting not open Supply hose kinked Supply fitting jammed or calcified 	<ul style="list-style-type: none">▶ Open supply fitting.▶ Lay supply hose without kinks.▶ 1. Unscrew water connection.▶ 2. Clean filter in the water connection.▶ 3. Flow rate must be min. 9 l/min when the water inlet is open.▶ If the flow rate is less, replace the supply fitting.	Stains and streaks	Rinse aid dosage too high / too low	<ul style="list-style-type: none">▶ Streaks: Reduce dosage.▶ Water or limescale stains: Increase dosage.
Plastic parts / parts of dishes discoloured	Too little cleaning product Discoloration caused by food colourings (tomato sauce)	<ul style="list-style-type: none">▶ Follow manufacturer's specifications (detergent).▶ Discoloration is quite safe; fades after subsequent rinse cycles.	Milky residues on dishes (can be removed)	Water softening system incorrectly set; no special salt	<ul style="list-style-type: none">▶ Set water softening system correctly.▶ Refill with special salt.
Cutlery rusty	Cutlery not rust-proof Hard knife blades are more susceptible Extraneous rust	<ul style="list-style-type: none">▶ Use dishwasher-proof cutlery.▶ Never wash rusting parts in the appliance.	Milky film, glasses cloudy / dull (cannot be removed)	Glasses not dishwasher-proof.	<ul style="list-style-type: none">▶ Use dishwasher-proof glasses.▶ Use glass-friendly cleaning products.

Further advice can be found in the instruction manual

Stopping the programme ...

Press and hold the two reset buttons simultaneously for approximately 3 seconds while the programme is running (RESET)

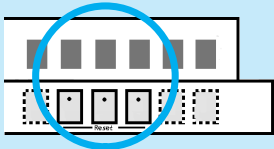

"0" appears

The programme will stop after 1 minute



Switch off the appliance.

Loading the dishwasher correctly ...

Arrange dishwasher-proof utensils (having removed any ash, wax, grease, ink, sticky labels; remove, large remnants of jam, dairy products and food) according to the operating instructions and check that the spray arms can rotate freely.