



Quick and easy: everything you need to know about your dishwasher...
You should, however, still read the installation and operating instructions before you use the dishwasher for the first time.

Inserting the water softening system *

 
Quick procedure ...

Enter the hardness value ...

Read off the setpoint value ...

and enter it as shown below ...

ask your water supplier



* only necessary before the first rinse or if the water hardness has changed

°dH	°fH	°Clarke	mmol/l	HD
0 - 3	0 - 6	0 - 4	0 - 0,6	HD
4 - 6	7 - 11	5 - 8	0,7 - 1,1	HD
7 - 9	12 - 16	9 - 11	1,2 - 1,6	HD
10 - 12	17 - 21	12 - 15	1,7 - 2,1	HD
13 - 16	22 - 29	16 - 20	2,2 - 2,9	HD
17 - 21	30 - 37	21 - 26	3,0 - 3,7	HD
22 - 30	38 - 54	27 - 38	3,8 - 5,4	HD
31 - 50	55 - 89	39 - 62	5,5 - 8,9	HD

Press and hold the ECO button **+** and the on/off button


The ECO indicator lamp and the setpoint value 4 flash

Hold the ECO button until the required value appears

The required setpoint value appears instead of "4"


Press the on/off button

The setpoint value is stored

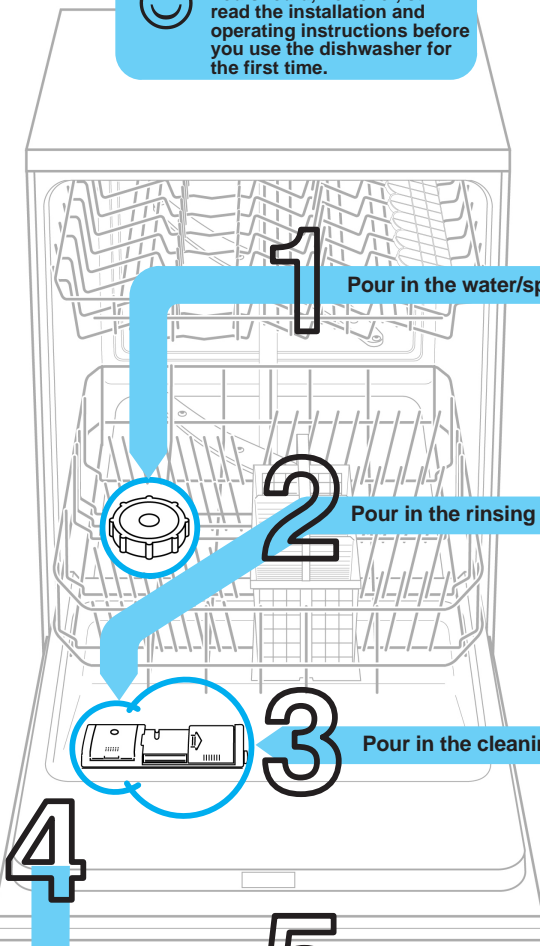


1 Pour in the water/special salt


Dissolves limescale (not required for set value 0!)

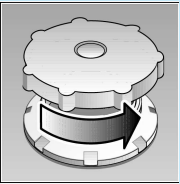


Unscrew the lid.

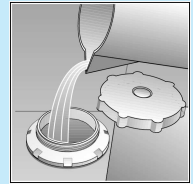

Only before using the dishwasher for the first time pour approx. 1 l / 2 pt water into the salt opening.

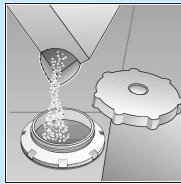

Pour in max. 1.5 kg / 3 lb 5 oz salt (never detergent!)

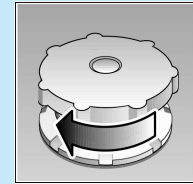

Screw on the lid. Switch on dishwasher immediately.

2 Pour in the rinsing agent


Cleaning the appliance...




Press the marking, Lift the lid



Always refill when the level indicator is clear.

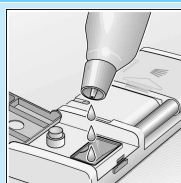


Pour in the rinsing agent

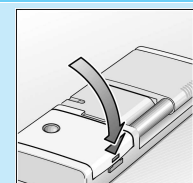


Close the lid. CLICK

3 Pour in the cleaning agent


Little dirt, little cleaning agent

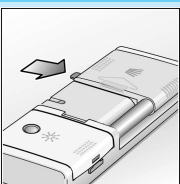

Warning,
 combination products are not suitable for all programmes, follow manufacturer's instructions.

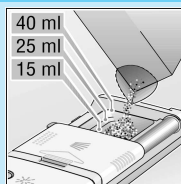

Pour in the cleaning agent

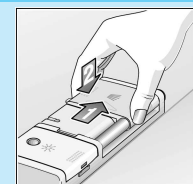

Push the lid too, press. PLOP

5 Select the programme

Quick, economical or intensive ...

Programme overview

This overview lists the max. possible number of programmes. The programmes supplied with your appliance are indicated on the fascia.

The programme data are values measured in the laboratory in compliance with Standard EN 50242. Deviations in practice are possible.

	Intensive 70°	Auto 55° /65°	Eco 50°	Gentle 40°	Quick 45°	Prerinse
Duration in minutes	135	85-140	140	72	30	19
Electricity consumption in kWh	1,60	1,05-1,60	1,05	0,80	0,70	0,05
Water consumption in litres	16	-	12	14	10	4
with Aquasensor	13	10-17	-	11	-	-

7 Switch on the appliance the dishwasher starts...

Press the on/off switch, the cycle time for the programme selected appears

Switch off the appliance that's it...

Press the on/off switch when the indicator shows 0 (programme end)

Additional programmes **

Flexibility ...

Soaking
 ... of utensils in the bottom basket, programme starts automatically, 5 g of extra detergent on the open door!

Turbo
 ... shorter programme running time for programmes above 50 °C

Top basket washing
 ... Utensils are washed in the top basket only.

Bottom basket washing
 ... Utensils are washed in the bottom basket only.


Timer programming
 ... switch on, immediately press timer programming button: start of programme is delayed in 1-hour steps.

** some models


Maintenance and care

Strainers ...
Check, if required, clean


Rotate filter cylinder, remove filter system ...

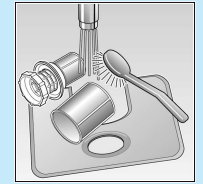

For perfect rinsing results ...
rinse under flowing water ...

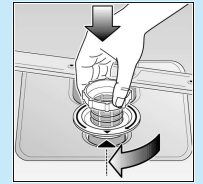

Insert ...

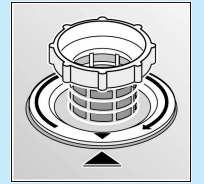


Screw in filter system **NOTE MARK!**


Cleaning the waste-water pump *
* With some models
– Ladle out water and remove filters
– Unscrew cover (Torx T20)
– Check area of fan impeller for foreign objects
– Screw in cover and insert filters

Spray arms ...
Remove blockages/deposits


Pull lower arm upwards ...

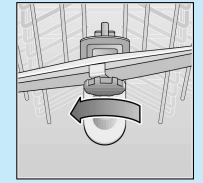


Unscrew upper arm ...

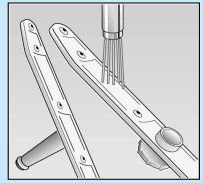

Clean spray nozzles under flowing water (perhaps with toothpick) ...

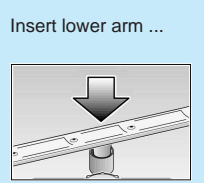

Insert lower arm ...
Screw in upper arm

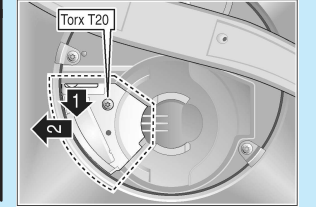

Eliminating minor faults yourself ...

... Self-help pays!


Fault	Possible Cause	Remedy
Residual water in the device	Waste-water pump blocked Programme not yet ended	▶ Clean waste-water pump (see above). ▶ Switch on appliance and close or terminate programme (see Terminating the programme).
Device does not work/stops Check water supply Display lights up	Supply fitting not open Supply hose kinked Supply fitting jammed or calcified	▶ Open supply fitting. ▶ Lay supply hose without kinks. ▶ 1. Unscrew water connection. ▶ 2. Clean filter in the water connection. ▶ 3. Flow rate must be min. 9 l/min when the water inlet is open. ▶ If the flow rate is less, replace the supply fitting.
Plastic parts / parts of dishes discoloured	Too little cleaning product Discoloration caused by food colourings (tomato sauce)	▶ Follow manufacturer's specifications (detergent). ▶ Discoloration is quite safe; fades after subsequent rinse cycles.
Cutlery rusty	Cutlery not rust-proof Hard knife blades are more susceptible Extraneous rust	▶ Use dishwasher-proof cutlery. ▶ Never wash rusting parts in the appliance.

Fault	Possible Cause	Remedy
Dishes not clean Sand or grainy residues on dishes	Utensils are situated too close to each other or on top of each other Too little cleaning product Unsuitable programme selected Spray nozzles blocked Filters dirty, not installed securely Spray arms blocked	▶ Spread out the utensils, avoid contact between the utensils. ▶ Follow manufacturer's specifications (detergent). ▶ Select more intensive programme. ▶ Clean spray arms (see above). ▶ Clean the strainers (see above). ▶ Arrange the utensils so that the spray arms can rotate freely.
Stains and streaks	Rinse aid dosage too high / too low	▶ Streaks: Reduce dosage. ▶ Water or limescale stains: Increase dosage.
Milky residues on dishes (can be removed)	Water softening system incorrectly set; no special salt	▶ Set water softening system correctly. ▶ Refill with special salt.
Milky film, glasses cloudy / dull (cannot be removed)	Glasses not dishwasher-proof.	▶ Use dishwasher-proof glasses. ▶ Use glass-friendly cleaning products.

Further advice can be found in the instruction manual

Stopping the programme ...

Press and hold the two reset buttons simultaneously for approximately 3 seconds while the programme is running (RESET)

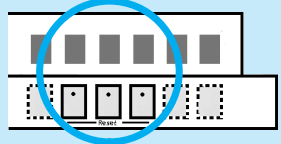

▶ "0" appears
▶ The programme will stop after 1 minute

▶ Switch off the appliance.

Loading the dishwasher correctly ...

Arrange dishwasher-proof utensils (having removed any ash, wax, grease, ink, sticky labels; remove, large remnants of jam, dairy products and food) according to the operating instructions and check that the spray arms can rotate freely.