


VI 482

Hob

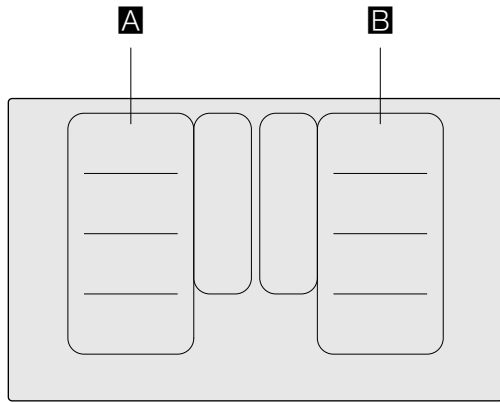

| | | i_2^* | b^* |
|--------------|--|---------|---------|
| A / B | | 2.200 W | 3.700 W |
| | | 3.300 W | 3.700 W |
| | | 2.600 W | 3.700 W |
| | | 3.300 W | 3.700 W |

* IEC 60335-2-6

Table of contents

| | |
|---------------------------------------|-----------|
| Intended use | 4 |
| Important safety information | 5 |
| Causes of damage | 6 |
| Overview | 6 |
| Protecting the environment | 7 |
| Energy-saving advice | 7 |
| Environmentally-friendly disposal | 7 |
| Cooking with induction | 7 |
| Advantages of induction cooking | 7 |
| Cookware | 7 |
| Getting to know your appliance | 9 |
| The control panel | 9 |
| Control knob | 10 |
| The hotplates | 10 |
| Residual heat indicator | 10 |
| Special accessories | 10 |
| Operating the appliance | 11 |
| Applying hotplate settings | 11 |
| Chef's recommendations | 11 |
| Flexible cooking zone | 13 |
| Advice on using cookware | 13 |
| As two independent hotplates | 13 |
| As a single hotplate | 13 |
| FlexPlus cooking zone | 14 |
| Notes regarding cookware | 14 |
| Activation | 14 |
| Deactivating | 14 |
| Timer functions | 15 |
| The kitchen timer | 15 |
| Stopwatch function | 15 |
| PowerBoost function | 16 |
| Activating | 16 |
| Deactivating | 16 |
| Frying sensor | 16 |
| Advantages when frying | 16 |
| Frying pans for the frying sensor | 16 |
| Temperature settings | 17 |
| Table | 17 |
| Setting procedure | 19 |

| | |
|---|-----------|
| Locking the control panel for cleaning | 20 |
| Automatic safety switch-off function | 20 |
| Basic settings | 21 |
| To access the basic settings: | 22 |
| Suitability test of tableware | 23 |
| Cleaning | 24 |
| Hob | 24 |
| Hob surround | 24 |
| Control knob | 24 |
| FAQ | 25 |
| What to do in the event of a fault | 26 |
| Demo mode | 27 |
| After-sales service | 27 |
| Product number (E no.) and production number (FD no.) | 27 |

Additional information on products, accessories, replacement parts and services can be found at www.gaggenau.com and in the online shop www.gaggenau.com/zz/store

⚠ Intended use

Read these instructions carefully. Please keep the instruction and installation manual, as well as the appliance certificate, in a safe place for later use or for subsequent owners.

Check the appliance after removing it from the packaging. If it has suffered any damage in transport, do not connect the appliance, contact the Technical Assistance Service and provide written notification of the damage caused, otherwise you will lose your right to any type of compensation.

This appliance must be installed according to the installation instructions included.

This appliance is intended for private domestic use and the household environment only. The appliance must only be used for the preparation of food and beverages. The cooking process must be supervised. A short cooking process must be supervised without interruption. Only use the appliance in enclosed spaces.

This appliance is intended for use up to a maximum height of 4000 metres above sea level.

Do not use covers. These can cause accidents, due to overheating, catching fire or materials shattering, for example.

Do not use inappropriate child safety shields or hob guards. These can cause accidents.

This appliance is not intended for operation with an external clock timer or a remote control.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with, on, or around the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

We advise that you exercise caution using or standing near an induction hob while it is in operation, if you wear a pacemaker or a similar medical device. Consult your doctor or the device manufacturer concerning its conformity or any possible incompatibilities,

⚠ Important safety information

Risk of fire!

- Hot oil and fat can ignite very quickly. Never leave hot fat or oil unattended. Never use water to put out burning oil or fat. Switch off the hotplate. Extinguish flames carefully using a lid, fire blanket or something similar.
- The hotplates become very hot. Never place combustible items on the hob. Never place objects on the hob.
- The appliance gets hot. Do not keep combustible objects or aerosol cans in drawers directly underneath the hob.
- The hob switches off automatically and can no longer be operated. It may switch on unintentionally at a later point. Switch off the circuit breaker in the fuse box. Contact the after-sales service.

Risk of burns!

- The hotplates and surrounding area (particularly the hob surround, if fitted) become very hot. Never touch the hot surfaces. Keep children at a safe distance.
- The hotplate heats up but the display does not work. Switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Metal objects on the hob quickly become very hot. Never place metal objects (such as knives, forks, spoons and lids) on the hob.
- Always switch the hob off using the controls after each use. Do not wait until the hob turns off automatically after the pan is removed.

Risk of electric shock!

- Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Cracks or fractures in the glass ceramic may cause electric shocks. Switch off the circuit breaker in the fuse box. Contact the after-sales service.

Malfunction risk!

The hob is equipped with a fan in the lower section. If there is a drawer under the hob it should not be used to store small objects or paper, since they could damage the fan or interfere with the cooling if they are sucked into it.

There should be a minimum of 2 cm between the contents of the drawer and fan intake.

Risk of injury!

- When cooking in a bain marie, the hob and cooking container could shatter due to overheating. The cooking container in the bain marie must not directly touch the bottom of the water-filled pot. Only use heat-resistant cookware.
- Saucepans may suddenly jump due to liquid between the pan base and the hotplate. Always keep the hotplate and saucepan bases dry.

Causes of damage

Caution!

- Rough pan bases may scratch the hob.
- Avoid leaving empty pots and pans on the hotplate. Doing so may cause damage.
- Do not place hot pans on the control panel, the indicator area, or the hob frame. Doing so may cause damage.
- Hard or pointed objects dropped on the hob may damage it.
- Aluminium foil and plastic containers will melt if placed on the hotplate while it is hot. The use of laminated sheeting is not recommended on the hob.

Overview

The table below lists the commonest kinds of damage:

| Damage | Cause | Remedy |
|----------------|---------------------------------------|---|
| Stains | Food boiling over | Remove any food that has boiled over immediately with a glass scraper |
| | Unsuitable cleaning agents | Only use cleaning agents that are suitable for this type of hob |
| Scratches | Salt, sugar and sand | Do not use the hob as a work surface or storage space |
| | Rough pan bases can scratch the hob | Inspect the cookware |
| Discolouration | Unsuitable cleaning agents | Only use cleaning agents that are suitable for this type of hob |
| | Wear caused by cookware | Lift pots and pans when moving them. |
| Blistering | Sugar, food with a high sugar content | Remove any food that has boiled over immediately with a glass scraper |

Protecting the environment

In this section, you can find information about saving energy and disposing of the appliance.

Energy-saving advice

- Always use the correct lid for each pan. Cooking without a lid uses a lot more energy. Use a glass lid to provide visibility and avoid having to lift the lid.
- Use pans with flat bases. Bases that are not flat use a lot more energy.
- The diameter of the pan base must match the size of the hotplate. Please note: pan manufacturers usually provide the diameter for the top of the pan, which is usually larger than the diameter of the pan base.
- Use a small pan for small amounts of food. A large pan which is not full uses a lot of energy.
- Use little water when cooking. This saves energy and preserves all the vitamins and minerals in vegetables.
- Select the lowest power level to maintain cooking. If the power level is too high, energy is wasted.

Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

Cooking with induction

Advantages of induction cooking

Induction cooking is very different from traditional cooking methods, as heat builds up directly in the item of cookware. This offers numerous advantages:

- Saves time when boiling and frying.
- Saves energy.
- Easier to care for and clean. Spilled food does not burn on as quickly.
- Heat control and safety – the hob increases or decreases the heat supply as soon as the user changes the setting. The induction hotplate stops the heat supply as soon as the cookware is removed from the hotplate, without having to switch it off first.


Cookware

Only use ferromagnetic cookware for induction cooking, such as:

- Cookware made from enamelled steel
- Cookware made from cast iron
- Special induction-compatible cookware made from stainless steel.

You can check whether the cookware is suitable for induction cooking. → "Suitability test of tableware"

To achieve a good cooking result, the ferromagnetic area on the base of the pan should match the size of the hotplate. If a hotplate does not detect an item of cookware, try placing it on another hotplate with a smaller diameter.

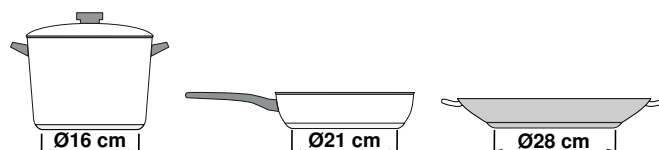


If the only hotplate being used is the Flex cooking zone, larger cookware that is particularly suited to this zone can be used. You can find further information on positioning the cookware in the section entitled → "Flexible cooking zone".




Some induction cookware does not have a fully ferromagnetic base:

- If the base of the cookware is only partially ferromagnetic, only the area that is ferromagnetic will heat up. This may mean that heat will not be distributed evenly. The non-ferromagnetic area may not heat up to a sufficient temperature for cooking.

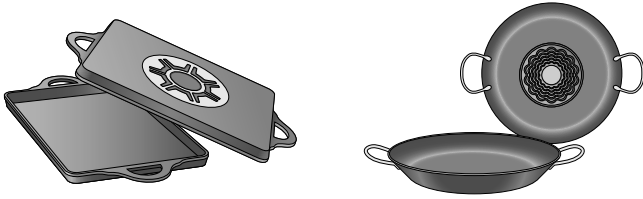

- The ferromagnetic area will also be reduced if the material from which the base of the cookware is made contains aluminium, for example. This may mean that the cookware will not become sufficiently hot or even that it will not be detected.

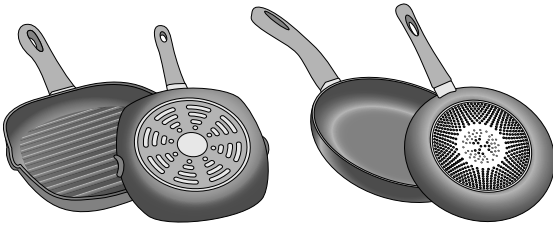

Unsuitable pans


Never use diffuser hobs or pans made from:

- common thin steel
- glass
- earthenware
- copper
- aluminium

Properties of the base of the cookware

The material(s) from which the base of the cookware is made can affect the cooking result. Using pots and pans made from materials that distribute heat evenly through them, such as stainless-steel pans with a three-layer base, saves time and energy.

Use cookware with a flat base; if the base of the cookware is uneven, this may impair the heat supply.

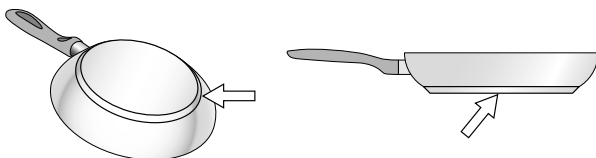

No cookware on hotplate/cookware of an unsuitable size

If no cookware is placed on the selected hotplate, if the cookware is made of an unsuitable material or if it is not the right size for the hotplate, the hotplate indicator will start to flash. To stop the indicator flashing, place suitable cookware on the hotplate. If it is left flashing for more than 9 minutes, the hotplate will automatically switch off.

Empty pans or those with a thin base

Do not heat empty pans, nor use pans with a thin base. The hob is equipped with an internal safety system. However, an empty pan may heat up so quickly that the "automatic switch off" function may not have time to react and the pan may reach very high temperatures. The base of the pan could melt and damage the glass on the hob. In this case, do not touch the pan and switch the hotplate off. If it fails to work after it has cooled down, please contact the Technical Assistance Service.


Pan detection

Each hotplate has a lower limit for pan detection. This depends on the diameter of the ferromagnetic area of the cookware and the material from which its base is made. For this reason, you should always use the hotplate that best matches the diameter of the base of the pan.







Getting to know your appliance

You can find information on the dimensions and power of the hotplates in → Page 2

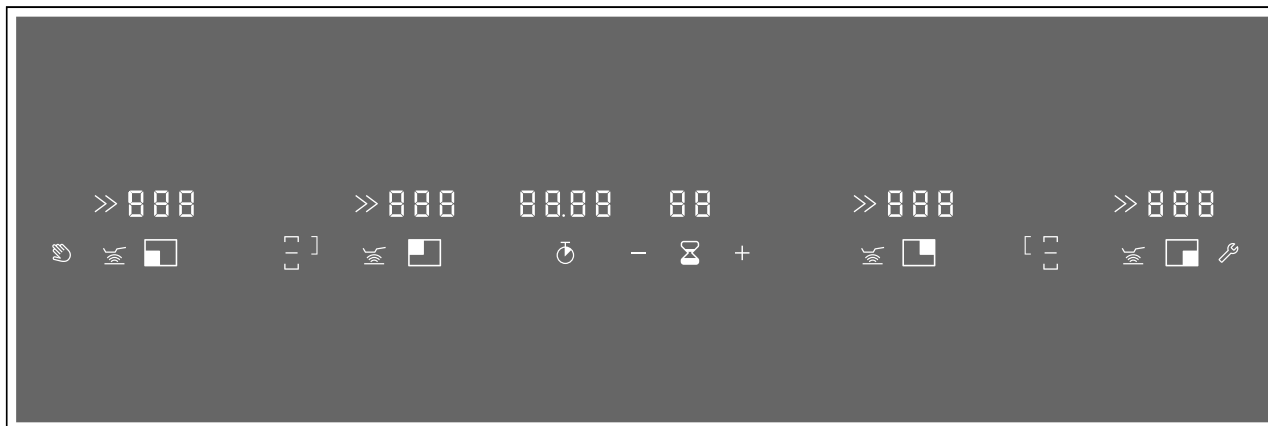











The control panel



Controls

| | |
|--|-------------------------------------|
|  | Lock the control panel for cleaning |
|  | Frying sensor |
|  | Basic settings |
|  | Select settings |
|  | Stopwatch |
|  | Short-term timer |

Indicators/symbols

| | |
|---|-------------------------------------|
|  | Operating status |
|  | Heat settings |
|  | Residual heat |
|  | Short-term timer |
|  | Stopwatch |
|  | Hotplate |
|  | PowerBoost function |
|  | FlexZone activated |
|  | FlexZone deactivated |
|  | FlexPlus cooking zone |
|  | Frying sensor |
|  | Frying sensor temperature indicator |

Controls


When the hob heats up, the symbols for the controls available at this time light up.

Touch a symbol to activate the function it represents. An audible confirmation signal will sound.

Notes

- The corresponding symbols for the controls will light up, depending on whether they are available. The controls that are available will be lit white. When a function is selected, they turn orange.
- Always keep the control panel clean and dry. Moisture reduces their effectiveness.
- Do not place hot cookware anywhere other than the front hotplate, and never on the control panel. There is a risk that the control panel's electronics will overheat.

Control knob

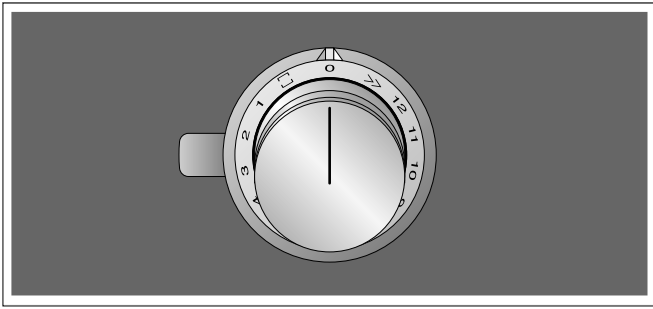

You can use the control knobs to select the heat setting, the PowerBoost function and the Flex cooking zone.

| | |
|----|-----------------------------|
| 1 | Lowest heat setting |
| 12 | Highest heat setting |
| >> | PowerBoost function |
| ☐ | Flex cooking zone activated |

The control knobs have an illuminated ring with an illuminated symbol for each function. The illuminated ring changes colour when particular functions or processes are activated.

The hotplates

| Hotplate | | |
|----------|-----------------------|---|
| ☐ | Single-ring hot-plate | Use cookware that is a suitable size |
| ☐ | FlexZone | See the section entitled → "Flexible cooking zone" |
| ☐ / ☐ | FlexPlus cooking zone | The FlexPlus cooking zones always switch on in conjunction with either the right-hand or the left-hand FlexZone. See section entitled → "FlexPlus cooking zone" |

Only use cookware that is suitable for use with induction hobs
– see section entitled → "Cooking with induction"

Residual heat indicator

The hob has a residual heat indicator for each hotplate. This indicates that the hotplate is still hot. Do not touch the hotplate while the residual heat indicator is still lit or immediately after it goes out.

The following will be shown depending on the amount of residual heat:

- **H**: High temperature
- **h**: Low temperature

and the illuminated ring around the control knob will flash.

If the cookware is removed from the hotplate while cooking is in progress, the heat setting indicator will flash and the control knob will be lit orange.

Turn the control knob to position 0.

If the hotplate is switched off, the residual heat indicator will be lit and the illuminated ring around the control knob will flash. Even after the hob has been switched off, the residual heat indicator will remain lit as long as the hotplate is still warm.

Special accessories

You can order the following accessories via your specialist dealer:

| | |
|------------|--|
| VA 440 010 | Stainless steel appliance cover |
| VA 420 000 | Connection strip for combination with other Vario 400 appliances for flush installation |
| VA 420 001 | Connection strip for combination with other Vario 400 appliances for flush installation with appliance cover/extension |
| VA 420 010 | Connection strip for combination with other Vario 400 appliances for surface installation |
| VA 420 011 | Connection strip for combination with other Vario 400 appliances for surface installation with appliance cover/extension |
| VA 450 400 | Appliance extension, 38 cm |

Only use the accessories as specified. The manufacturer accepts no liability if these accessories are used incorrectly.

Operating the appliance

This chapter explains how to set a hotplate. The table shows heat settings and cooking times for various meals.


Applying hotplate settings

Use the control knob to select the heat setting you require.

| | |
|-----------------|-----------------|
| 0 | Hotplate off. |
| Heat setting 1 | Lowest setting |
| Heat setting 12 | Highest setting |

Selecting a heat setting

Push in the control knob and turn it to the heat setting you require.

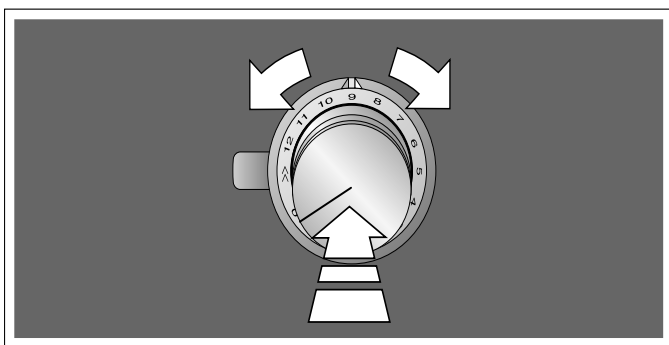

The selected heat setting will be lit on the hotplate display. The illuminated ring around the control knob will be lit.

Switching off a hotplate

Turn the control knob to position 0.

The residual heat indicator will be lit and the illuminated ring around the control knob will flash until the hotplate has cooled down.

Note: If there is no cookware on the hotplate or if the cookware is not detected, the selected heat setting will flash and the illuminated ring around the control knob will be lit orange. After approximately 9 minutes, the hotplate will switch off.

In this case, the illuminated ring around the control knob will flash. Turn the control knob back to position 0; the illuminated ring will stop flashing.

Chef's recommendations

Recommendations

- When heating up puree, cream soups and thick sauces, stir occasionally.
- For preheating, select a heat setting between 10 and 12.
- When cooking with the lid on, reduce the heat as soon as you see steam escaping. The cooking result is not affected by the steam escaping.
- After cooking, keep the lid on the cookware until you serve the food.
- To cook with the pressure cooker, follow the manufacturer's instructions.
- Do not cook food for too long, otherwise nutrients will be lost. The short-term timer can be used to set the optimum cooking time.
- For a healthier result, ensure that the oil does not smoke.
- To brown food, fry it in small batches.
- Cookware may reach high temperatures while the food is cooking. Use oven gloves.
- You can find recommendations for energy-efficient cooking in the section entitled → "Protecting the environment"

Cooking table

The table shows which heat setting is suitable for each type of food. The cooking time may vary depending on the type, weight, thickness and quality of the food.

| Heat setting | Cooking methods | Examples |
|--------------|----------------------------------|--|
| 11 - 12 | Pre-heating | Water |
| | Searing | Meat |
| | Heating | Fat/oil, liquids |
| | Bringing to the boil | Soups, sauces |
| | Blanching | Vegetables |
| 7 - 10 | Frying | Meat, potatoes |
| 6 - 8 | Frying | Fish |
| 8 - 9 | Frying | Flour-based and/or egg-based dishes, e.g. pancakes |
| | Cooking with the lid off | Pasta, liquids |
| 7 - 8 | Browning | Flour, onions |
| | Shallow frying | Almonds, breadcrumbs |
| | Frying | Bacon |
| | Reducing | Meat stock, sauces |
| 6 - 7 | Ongoing cooking with the lid off | Potato dumplings, vegetable soups, stews, poached eggs |
| 5 - 6 | Ongoing cooking with the lid off | Scalded sausages |
| 6 - 7 | Steaming | Vegetables, potatoes, fish |
| | Stewing | Vegetables, fruit, fish |
| | Braising | Beef olives, minced meat hot dogs, vegetables |
| 3 - 4 | Braising | Goulash |
| 4 - 5 | Cooking with the lid on | Soups, sauces |
| 3 - 4 | Defrosting | Frozen products |
| | Cooking with the lid on | Rice, pulses, vegetables |
| | Thickening | Egg-based dishes, e.g. omelette |
| 1 - 2 | Heating/keeping warm | Soup, vegetables in sauce |
| 1 | Heating/keeping warm | Stew, e.g. lentil stew |
| | Melting | Butter, chocolate |

Flexible cooking zone


You can use each flex zone as a single hotplate or as two independent hotplates, as required.

It consists of four inductors that work independently of each other. If using the flexible cooking zone, only the area that is covered by cookware is activated.


Advice on using cookware

To ensure that the cookware is detected and heat is distributed evenly, correctly centre the cookware:


As a single hotplate



Diameter smaller than or equal to 13 cm
Place the cookware on one of the four positions that can be seen in the illustration.




Diameter greater than 13 cm
Place the cookware on one of the three positions that can be seen in the illustration.



If the cookware takes up more than one hotplate, place it starting on the upper or lower edge of the flexible cooking zone.

As two independent hotplates

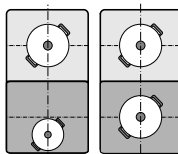

The front and rear hotplates each have two inductors and can be used independently of each other. Select the required heat setting for each of the hotplates. Use only one item of cookware on each hotplate.

As two independent hotplates

The flexible cooking zone is used like two independent hotplates.



Activating

See the section entitled → "Operating the appliance"

As a single hotplate

Using the entire cooking zone by connecting both hotplates.

Linking the two hotplates


- 1 Set down the cookware. Turn one of the control knobs to position .
- 2 Use the other control knob to select the heat setting. The  indicator will be lit. The heat setting will be lit on the displays for the two hotplates.

The Flex cooking zone has now been activated.

Changing the heat setting

To alter the heat setting, use the same control knob you used to select the original heat setting.


Adding new cookware

Set down the new cookware. Turn the control knob that was used to select the Flex cooking zone to position 0 and then back to position .

The cookware will be detected and the heat setting that was previously selected will be retained.

Note: If the cookware is moved to the hotplate being used or lifted up, the hotplate begins an automatic search and the heat setting selected previously is retained.

Unlinking the two hotplates

Turn the control knob that was used to select the Flex cooking zone to position 0. The  indicator will be lit.

The Flex cooking zone has now been deactivated. The two hotplates will now function independently.

Note: If you switch the hob off and then subsequently switch it on again, the flexible cooking zone is converted back to two independent hotplates.

FlexPlus cooking zone

The hob has two FlexPlus cooking zones which are located between the two flexible cooking zones and which switch on in conjunction with the right- or left-hand flexible cooking zone. This means that larger cooking vessels can be used and better cooking results can be achieved.

Each FlexPlus cooking zone always switches on in conjunction with the right- or left-hand flexible cooking zone. It is not possible to switch them on independently of one another.


Notes regarding cookware

The cookware should be positioned centrally for good thermal detection and distribution.


The cookware should cover the side hotplate and the FlexPlus cooking zone.

Depending on the size of the cookware, the flexible cooking zone can be activated as two independent hotplates or as one hotplate:


Set down the cookware

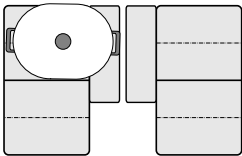

Elongated cookware:
Activate the flexible cooking zone as two independent hotplates or as one hotplate.

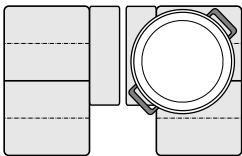


Large round cookware:
Activate the flexible cooking zone as a single hotplate.

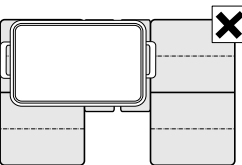

The cookware must not cover both FlexPlus cooking zones at the same time.

Activation

- 1 Set down the cookware on the hotplate and make sure that it also covers the FlexPlus cooking zone.
- 2 Select the hotplate and the required heat setting. The hotplate and FlexPlus cooking zone indicators light up.

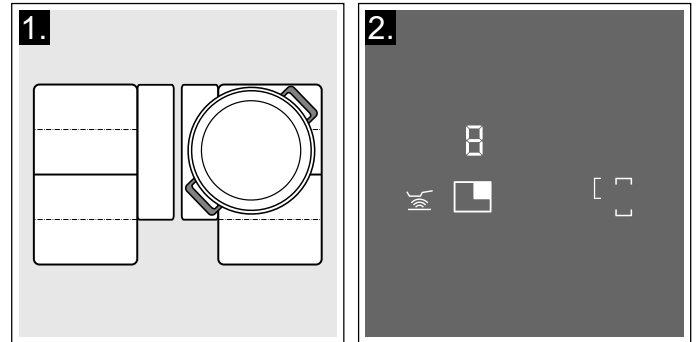

The flexible cooking zone is activated.

Deactivating

Remove the cookware from the hotplate. The displays go out.

This deactivates the FlexPlus cooking zone.

Timer functions

Your hob has two timer functions:

- Short-term timer
- Stopwatch


The kitchen timer

You can use the kitchen timer to set a time of up to 99 minutes.

This functions independently from the hotplates and from other settings. This function does not automatically switch off a hotplate.

Setting procedure

- 1 Touch the ⌚ symbol; **00** and the **-** and **+** symbols will light up on the short-term timer display.
- 2 Set the required cooking time using the **-** and **+** symbols within the next 10 seconds.

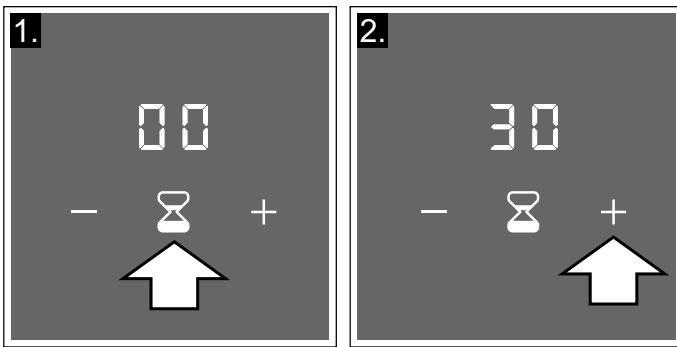

Note: If you press and hold the **-** or **+** symbol, you can set the cooking time more quickly.

- 3 Touch the ⌚ symbol again to confirm the selected cooking time.
The time will now start to elapse.

Note: If you do not confirm the setting within 10 seconds, the short-term timer will start automatically.

Changing or cancelling the cooking time

- 1 Touch the ⌚ symbol.
- 2 Alter the cooking time using the **-** and **+** symbols or set it to **00**.
- 3 Touch the ⌚ symbol to confirm the cooking time.

Once the cooking time has elapsed

An audible signal will sound. **00** will flash on the short-term timer display.

Touch the ⌚ symbol; the indicators will go out and the signal tone will cease.

Stopwatch function

The stopwatch function displays the time that has elapsed since activation.

This functions independently from the hotplates and from other settings. This function does not automatically switch off a hotplate.

Activating

- 1 Select a heat setting. The ⌚ indicator will be lit.
- 2 Touch the ⌚ symbol. **00.00** will be lit on the stopwatch display.

The time will now start to elapse.

Stopping the stopwatch

Touch the ⌚ symbol to stop the stopwatch. The stopwatch indicators will remain lit.

Touch the ⌚ symbol again to restart the stopwatch.

Deactivating


Press and hold the ⌚ symbol for a few seconds. This will stop the stopwatch, and the stopwatch indicators will go out.

This function has now been deactivated.

PowerBoost function

The PowerBoost function enables you to heat up large volumes of water faster than when using heat setting 12.


This function is available for all hotplates, provided the other hotplate in the same group is not in use. Otherwise, P and 12 will flash on the display for the selected hotplate; the 12 heat setting will then be set automatically without activating this function. In this case, turn the control knob to position 0.

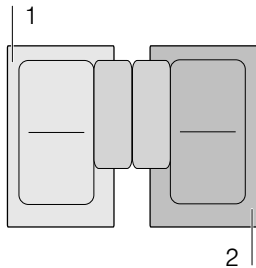

Note: The PowerBoost function can also be activated in the flexible area if the cooking zone is being used as a single hotplate.

Activating

Push in the control knob and turn it to position >>. The P and >> indicators will light up.

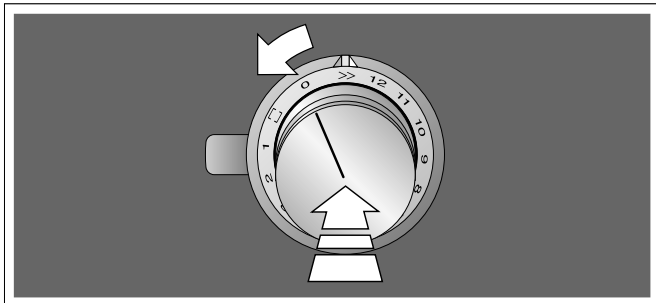

The function has now been activated.

Deactivating

Turn the control knob to the heat setting you require. P and >> will go out and the heat setting you have selected will be lit.

This function has now been deactivated.

Note: In certain circumstances, the PowerBoost function may switch itself off automatically in order to protect the electronic elements inside the hob. In this case, heat setting 12 will automatically be set. Turn the control knob to position 0 or whichever heat setting you require.

Frying sensor

This function maintains the appropriate temperature in the frying pan when you are frying food.

Advantages when frying

- The hotplate only heats up if this is required to maintain the temperature. This saves energy and prevents the oil or fat from overheating.
- The roasting function reports when the empty frying pan has reached the optimum temperature for adding oil and then for adding the food.

Notes

- Do not place a lid on the pan. Otherwise, the function does not activate correctly. You can use a splash guard to prevent splashes of grease.
- Use suitable oil or fat for frying. If butter, margarine, extra virgin olive oil or lard is used, set heat setting 1 or 2.
- Never leave a frying pan, with or without food, unattended when it is being heated.
- If the hotplate is a higher temperature than the cookware or vice versa, the frying sensor will not be activated correctly.

Frying pans for the frying sensor

Frying pans specifically suited to use with the frying sensor are available. This optional accessory can be purchased separately from specialist retailers or through our technical after-sales service. Always quote the relevant reference number.

- GP900001 15 cm frying pan.
- GP900002 19 cm frying pan.
- GP900003 21 cm frying pan.
- GP900004 28 cm frying pan. Only recommended for the FlexPlus cooking zone.

These frying pans have a non-stick coating so that you require only a small amount of oil to fry food.

Notes

- The frying sensor has been configured specifically for this type of frying pan.
- Ensure that the diameter of the base of the frying pan corresponds to the size of the hotplate. Place the frying pan in the centre of the hotplate.
- The frying sensor may not activate on the Flex cooking zone if the frying pan does not match the size of the hotplate or if it is positioned incorrectly. See the section entitled → "Flexible cooking zone"
- Other types of frying pan may overheat. They may reach a temperature above or below the selected temperature setting. Select the lowest temperature setting to begin with and change it if necessary.

Temperature settings

| Temperature setting | Suitable for |
|---------------------|---|
| 1 Very low | Preparing and reducing sauces, stewing vegetables and frying food in extra virgin olive oil, butter or margarine. |
| 2 Low | Frying food in extra virgin olive oil, butter or margarine, e.g. omelettes. |
| 3 Low - medium | Frying fish and thick food such as meatballs and sausages. |
| 4 Medium - high | Frying steaks (medium or well done), frozen breaded products, thin food such as escalopes, strips of meat and vegetables. |
| 5 High | Frying food at high temperatures, e.g. rare steaks (bloody), potato fritters and fried potatoes. |

Table

The table shows which heat setting is suitable for each type of food. The roasting time may vary depending on the type, weight, size and quality of the food.

The set heat setting varies depending on the frying pan that is used.

Preheat the empty pan; add oil and food after the acoustic signal has sounded.

| | Temperature setting | Total frying time after the signal tone sounds (min) |
|---|---------------------|--|
| Meat | | |
| Escalope, plain or breaded | 4 | 6 - 10 |
| Fillet | 4 | 6 - 10 |
| Chop* | 3 | 10 - 15 |
| Cordon bleu, Wiener schnitzel* | 4 | 10 - 15 |
| Steak, rare (3 cm thick) | 5 | 6 - 8 |
| Steak, medium or well done (3 cm thick) | 4 | 8 - 12 |
| Poultry breast (2 cm thick)* | 3 | 10 - 20 |
| Sausages, pre-boiled or raw* | 3 | 8 - 20 |
| Hamburgers, meatballs, stuffed meatballs* | 3 | 6 - 30 |
| Meat loaf | 2 | 6 - 9 |
| Strips of meat, gyros | 4 | 7 - 12 |
| Minced meat | 4 | 6 - 10 |
| Bacon | 2 | 5 - 8 |
| Fish | | |
| Fried whole fish, e.g. trout | 3 | 10 - 20 |
| Fish fillet, plain or breaded | 3 - 4 | 10 - 20 |
| Scampi, prawns | 4 | 4 - 8 |

* Turn several times.

** Total cooking time per portion. Fry one after the other.

| | Tempera- ture setting | Total frying time after the signal tone sounds (min) |
|---|--------------------------|---|
| Egg-based dishes | | |
| Pancakes** | 5 | - |
| Omelette** | 2 | 3 - 6 |
| Fried egg | 2 - 4 | 2 - 6 |
| Scrambled egg | 2 | 4 - 9 |
| Shredded raisin pancake | 3 | 10 - 15 |
| French toast** | 3 | 4 - 8 |
| Potatoes | | |
| Fried potatoes (made from unpeeled boiled potatoes) | 5 | 6 - 12 |
| Fried potatoes (made from raw potatoes) | 4 | 15 - 25 |
| Potato rösti** | 5 | 2,5 - 3,5 |
| Swiss rösti | 1 | 50 - 55 |
| Glazed potatoes | 3 | 15 - 20 |
| Vegetables | | |
| Garlic, onions | 1 - 2 | 2 - 10 |
| Courgettes, aubergines | 3 | 4 - 12 |
| Peppers, green asparagus | 3 | 4 - 15 |
| Vegetables sautéed in oil, e.g. courgettes, green peppers | 1 | 10 - 20 |
| Mushrooms | 4 | 10 - 15 |
| Glazed vegetables | 3 | 6 - 10 |
| Frozen products | | |
| Escalope | 4 | 15 - 20 |
| Cordon bleu* | 4 | 10 - 30 |
| Poultry breast* | 4 | 10 - 30 |
| Chicken nuggets | 4 | 10 - 15 |
| Gyros, kebab | 3 | 5 - 10 |
| Fish fillet, plain or breaded | 3 | 10 - 20 |
| Fish fingers | 4 | 8 - 12 |
| French fries | 5 | 4 - 6 |
| Pan-fried dishes, e.g. fried vegetables with chicken | 3 | 6 - 10 |
| Spring rolls | 4 | 10 - 30 |
| Camembert/cheese | 3 | 10 - 15 |
| Sauces | | |
| Tomato sauce with vegetables | 1 | 25 - 35 |
| Béchamel sauce | 1 | 10 - 20 |
| Cheese sauce, e.g. Gorgonzola sauce | 1 | 10 - 20 |
| Reducing sauces, e.g. tomato sauce, bolognese sauce | 1 | 25 - 35 |
| Sweet sauces, e.g. orange sauce | 1 | 15 - 25 |

* Turn several times.

** Total cooking time per portion. Fry one after the other.

| | Temperature setting | Total frying time after the signal tone sounds (min) |
|--|---------------------|--|
| Miscellaneous | | |
| Camembert/cheese | 3 | 7 - 10 |
| Dried instant meals to which water is added, e.g. pasta dishes | 1 | 5 - 10 |
| Croutons | 3 | 6 - 10 |
| Almonds/hazelnuts/walnuts/pine nuts | 4 | 3 - 15 |


* Turn several times.


** Total cooking time per portion. Fry one after the other.

Setting procedure

Select the appropriate temperature setting from the table. Place the empty frying pan on the hotplate.




- 1 Use the control knob to select the temperature setting you require. Temperature settings 1 to 5 are available for this function; see temperature settings table.

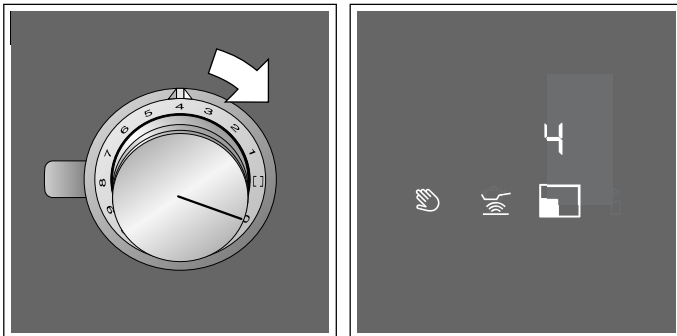

- 2 Touch the  symbol; it will be lit orange. **A** and the temperature setting you have selected will be lit.



The function has now been activated.

The ,  or  temperature indicator and the temperature setting you have selected will remain lit until the frying temperature has been reached. An audible signal will then sound and the temperature indicator will go out.

- 3 Once the frying temperature has been reached, add the fat and then the food to the pan.

Notes


- If a temperature setting above 5 is selected, setting **5** will automatically be set. In this case, turn the control knob to position 5.
- Turn the food so that it does not burn.


Switching off the frying sensor

Turn the control knob that was used to select the temperature to position 0. The hotplate will switch off and the residual heat indicator will appear.

Locking the control panel for cleaning

Wiping over the control panel while the hob is switched on may alter the settings. To avoid doing this, you can use the hob's "Lock control panel for cleaning" function.

To switch on: Touch the  symbol. An audible signal will sound. The indicators for the active functions will flash. The control panel will be locked for 10 minutes. You will now be able to clean the surface of the control panel without altering the settings.

To switch off: Touch the  symbol again within the next 10 minutes.

If the function is not deactivated within these 10 minutes, the hob will switch itself off.

Notes

- The locking function does not affect the control knobs. The hob can be switched off at any time.
- While the locking function is active, the power supply to the hob is disconnected. The hotplates may still be hot.

Automatic safety switch-off function

For your protection, the appliance features a safety switch-off function. Depending on which heat setting has been selected, the hotplate's heating element will be deactivated if no further action is performed within a set time after selecting the heat setting.

| Heat setting | Deactivated after |
|-----------------|-------------------|
| <i>1</i> | 10 hours |
| <i>2 to 4</i> | 5 hours |
| <i>5 to 7</i> | 4 hours |
| <i>8</i> | 3 hours |
| <i>9 to 10</i> | 2 hours |
| <i>11 to 12</i> | 1 hour |

| Frying sensor temperature setting | Deactivated after |
|-----------------------------------|-------------------|
| <i>1 to 5</i> | 3 hours |

An audible signal will indicate when this time has elapsed. The control knob is active and the illuminated ring around it will flash. *FB* will be lit on the hotplate display.

Turn the control knob to position 0. The appliance can now be switched back on as usual.

Basic settings

The appliance has various basic settings. These basic settings can be altered to suit your individual requirements.

| Indica- tor/sym- bol | Function |
|----------------------------|--|
| | Signal tones |
| | <i>00</i> All signal tones activated.* |
| <i>c 1</i> | <i>0FF</i> Only audible fault signal activated. |
| | Power management function: Limit the total power of the hob (watts) |
| | <i>0FF</i> Deactivated.* |
| | <i>1000</i> Lowest setting |
| | <i>1500</i> |
| | <i>2000</i> |
| | ... |
| <i>c 2</i> | <i>9500</i> Highest setting on the hob |
| | Check cookware; cooking results |
| | <i>0</i> Not suitable |
| | <i>!</i> Not perfect |
| <i>c 3</i> | <i>2</i> Suitable |
| | Restore to standard settings |
| | <i>0FF</i> Individual settings.* |
| <i>c 4</i> | <i>00</i> Restore factory settings. |

* Factory settings

To access the basic settings:

The hob must be off.


- 1 Push in one of the control knobs and turn it anti-clockwise to position >>.
- 2 Turn the control knob clockwise to position 1.
- 3 Turn the control knob anti-clockwise to position 0. The 🔑 symbol will be lit. The illuminated ring around the control knob will be lit yellow.
- 4 Touch the 🔑 symbol. The displays show the product information.

| Product information | Display screen |
|----------------------------------|----------------|
| After-sales service index (ASSI) | 01 |
| Production number | Fd |
| Production number 1 | 95. |
| Production number 2 | 05 |

- 5 Press the 🔑 symbol again to call up the basic settings. c 1 and 00 will light up by default on the displays.



- 6 Touch the 🔑 symbol repeatedly until the required function is displayed.
- 7 Then use the + and - symbols to select the required setting.

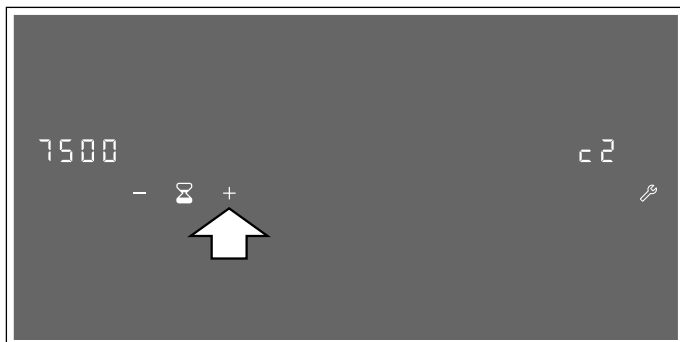

- 8 Touch the 🔑 symbol for at least 4 seconds.

The settings have been saved.

Exiting the basic settings menu

- 1 Turn the control knob anti-clockwise to position >>.
- 2 Turn the control knob clockwise to position 1.
- 3 Turn the control knob anti-clockwise to position 0.

The 🔑 symbol and the illuminated ring around the control knob will go out.

Suitability test of tableware


This function can be used to check the speed and quality of the cooking process depending on the cookware.

The result is a reference value and depends on the properties of the cookware and the hotplate being used.

- 1 Fill the pan with approximately 200 ml water and place it at room temperature in the middle of the hotplate that most closely matches the diameter of the pan base.
- 2 Go to the basic settings and select the **3** setting. **OFF** will be lit.
- 3 Touch the **+** or **-** symbol. **ON** will be lit. A signal tone will sound and the hotplate indicators will be lit.

The function has now been activated.

ON will be lit. After a few seconds, the hotplate displays will show the results for the quality and speed of the cooking process.

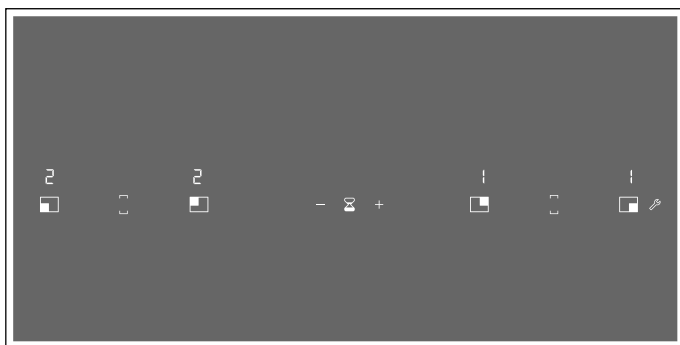

Check the result using the following table:

Result

- | | |
|----------|--|
| 0 | The cookware is not suitable for the hotplate and will therefore not heat up.* |
| 1 | The cookware is taking longer to heat up than expected and the cooking process is not going as well as it should.* |
| 2 | The cookware is heating up correctly and the cooking process is going well. |

* If there is a smaller hotplate available, test the cookware again on the smaller hotplate.

To activate the function again, select the **+** or **-** symbol.

Notes

- Do not use the wok or wok accessories with this function.
- The Flex cooking zone is set to function as a single hotplate; only test one item of cookware at a time on it.
- If the diameter of the hotplate that is used is much smaller than the diameter of the cookware, only the middle of the cookware can be expected to heat up. This may result in the cooking results not being as good as expected or being less than satisfactory.
- You can find information on this function in the section entitled → "Basic settings"
- You can find information on the type, size and positioning of the cookware in the sections entitled → "Cooking with induction" and → "Flexible cooking zone".

Cleaning

Suitable maintenance and cleaning products can be purchased from the after-sales service or in our e-Shop.

Hob

Cleaning

Always clean the hob after cooking. This will prevent food deposits from becoming burned on. Only clean the hob after the residual heat indicator has gone out.

Clean the hob with a damp dish cloth and dry it with a cloth or towel to prevent limescale build-up.

Only use cleaning agents that are suitable for this type of hob. Observe the manufacturer's instructions on the product packaging.

Never use:

- Undiluted washing-up liquid
- Cleaning agents designed for dishwashers
- Abrasive cleaners
- Harsh cleaning agents, such as oven spray and limescale remover
- Scouring pads
- High-pressure cleaners or steam jet cleaners

Stubborn dirt is best removed with a glass scraper, available from retailers. Observe the manufacturer's instructions.

You can obtain a suitable glass scraper from customer services or through our online shop.

Using a special sponge for cleaning glass-ceramic hobs achieves a great cleaning result.

Potential marks

| | |
|-------------------------------|---|
| Limescale and water marks | Clean the hob as soon as it has cooled down. You can use a cleaning agent suitable for glass-ceramic hobs.* |
| Sugar, rice starch or plastic | Clean immediately. Use a glass scraper. Caution: Risk of burns.* |

* Then clean with a damp dish cloth and dry with a cloth or towel.

Note: Do not use any cleaning agents while the hob is still hot. This may mark the surface. Make sure that any residue left by cleaning agents is removed.

Hob surround

To prevent damage to the hob surround, observe the following instructions:

- Only use warm soapy water
- Wash new dish cloths thoroughly before use.
- Do not use harsh or abrasive cleaning agents.
- Do not use a glass scraper or sharp objects.

Control knob

Only use warm detergent solution. Do not use harsh or abrasive cleaning products. Do not use a glass scraper, as this may damage the control knob.

Lemon and vinegar are not suitable for cleaning the control knob, as this may cause dull patches to appear on the knob.

FAQ

Noises

Why can I hear noises while I'm cooking?

Noises may be generated while using the hob depending on the characteristics of the base of the cookware. These noises are normal for induction technology. They do not indicate a defect.

Possible noises:

A low humming noise of the kind a transformer makes:

Occurs when cooking at a high heat setting. The noise disappears or becomes quieter when the heat setting is reduced.

Low whistling noise:

Occurs when the cookware is empty. The noise disappears when water or food is added to the cookware.

Crackling:

Occurs when using cookware made from layers of different material or when using cookware of different sizes and different materials at the same time. The volume of the noise may vary depending on the quantity of food being cooked and the cooking method.

High-pitched whistling noises:

May occur if two hotplates are used at the highest heat setting at the same time. The whistling noises disappear or become quieter when the heat setting is reduced.

Fan noise:

The hob is equipped with a fan that automatically switches on at high temperatures. The fan may continue to run even after you have switched off the hob if the temperature detected is still too high.

Cookware

Which types of cookware can be used with an induction hob?

You can find information on which types of cookware can be used with an induction hob in the section entitled → "Cooking with induction".

Why is the hotplate not heating up and why is the heat setting flashing?

The cookware is on a different hotplate to the one that has been switched on.

Check that you have switched on the correct hotplate.

The cookware is too small for the hotplate that is switched on or it is not suitable for induction cooking.

Check that the cookware is suitable for induction cooking and that it is placed on the hotplate that best corresponds to its size. You can find information on the type, size and positioning of the cookware in the sections entitled → "Cooking with induction" and → "Flexible cooking zone".

Why is it taking so long for the cookware to heat up or why is it not heating up sufficiently despite being on a high heat setting?

The cookware is too small for the hotplate that is switched on or it is not suitable for induction cooking.

Check that the cookware is suitable for induction cooking and that it is placed on the hotplate that best corresponds to its size. You can find information on the type, size and positioning of the cookware in the sections entitled → "Cooking with induction" and → "Flexible cooking zone".

Cleaning

How do I clean the hob?

Optimal results can be achieved with cleaning products specifically for use on glass-ceramic surfaces. Do not use harsh or abrasive cleaning products, dishwasher detergents (concentrates) or floorcloths.

You can find more information on cleaning and caring for your hob in the section entitled → "Cleaning"

What to do in the event of a fault

Usually, faults are small matters that are easy to eliminate. Please read the information in the table before calling the after-sales service.

| Indicator/symbol | Possible cause | Remedial action |
|---|--|---|
| None | The power supply has been disconnected. The appliance has not been connected as shown in the circuit diagram. Electronic fault. | Use other electrical appliances to check whether a short circuit has occurred in the power supply. Check that the appliance has been connected as shown in the circuit diagram. If the fault cannot be rectified, inform the technical after-sales service. |
| An audible signal will sound. | The control panel is wet or an object is covering it. | Dry the control panel or remove the object. |
| The hotplate has been switched off. The illuminated ring on the control knob is flashing. | The control knob has not been turned for an extended period. The automatic safety switch-off function has been activated. The appliance is too hot. | Turn the control knob to position 0. Switch the hotplate back on. Read the fault message on the control panel. |
| The hotplate indicator is flashing. | The cookware is not being detected. Make sure that the cookware is suitable for use with an induction hob. | Make sure that the diameter of the base of the cookware corresponds to the size of the hotplate. Turn the control knob to position 0. Switch the hotplate back on. |
| <i>F2</i> | The electronics have overheated and have switched off the corresponding hotplate. | Remove any cookware from the hob. Once the fault code goes out, the hotplate has cooled down sufficiently. Turn the control knob to position 0. Then select the heat setting as usual. |
| <i>F4</i> | The electronics have overheated and all the hotplates have been switched off. | |
| <i>F5</i> + heat setting and signal tone | There is hot cookware on/near the control panel. There is a risk that the electronics will overheat. | Remove the cookware. The fault code will go out shortly afterwards. You can resume cooking. |
| <i>F5</i> and signal tone | There is hot cookware on/near the control panel. To protect the electronics, the hotplate has been switched off. | Remove the cookware. Wait a few seconds. When the fault code on the display goes out, you can resume cooking. |
| <i>F1</i> / <i>F6</i> | The hotplate has overheated and has been switched off to protect the work surface. | Wait until the electronics have cooled down sufficiently before switching the hotplate on again. |
| <i>F8</i> | The hotplate has been operating continuously for an extended period. | The automatic safety switch-off function has been activated. See the section entitled → "Automatic safety switch-off function" |
| <i>F9</i> | The FlexPlus cooking zone will not activate. | Touch any touch control to check the fault code. You can use the remaining hotplates to cook as usual. Contact the technical after-sales service. |
| <i>E9000</i> <i>E90 10</i> | The operating voltage is incorrect/outside of the normal operating range. | Contact your electricity supplier. |
| <i>U400</i> | The hob is not connected properly. | Disconnect the hob from the power supply. Check that it has been connected as shown in the circuit diagram. |

Do not place hot cookware on the control panel.

Note: If the fault code is not listed in the table, disconnect the hob from the power supply, and wait 30 seconds before reconnecting it. If this code is displayed again, contact the technical after-sales service and specify which fault code has appeared.

Demo mode

If *dE ON* is displayed, demo mode has been activated. The appliance will not heat up. Disconnect the appliance from the power supply. Wait 30 seconds before reconnecting it. Then deactivate demo mode within 3 minutes as follows:

- 1 Turn one of the control knobs anti-clockwise to position *>>*.
- 2 Turn the same control knob clockwise to position 1.
- 3 Turn the same control knob anti-clockwise to position 0.
The illuminated ring around the control knob will be lit yellow.
- 4 Turn the same control knob clockwise to position 1. *ON* will be lit and the illuminated ring will be green. Wait 5 seconds. *OFF* will be lit and the illuminated ring will turn yellow.

Demo mode has now been deactivated.

After-sales service

Our after-sales service is there for you if your appliance needs to be repaired. We will always find an appropriate solution, also in order to avoid after-sales personnel having to make unnecessary visits.

Product number (E no.) and production number (FD no.)

Please quote the E number (product number) and FD number (production number) of your appliance when contacting the after-sales service.

The rating plate bearing these numbers can be found:

- On the appliance certificate.
- On the underside of the hob.

The product number (E no.) can also be found on the glass-ceramic hob. You can check the after-sales service index (KI) and production number (FD no.) by going to the basic settings. Refer to the section entitled → "Basic settings" to find out how to do this.

Please note that a visit from an after-sales service engineer is not free of charge in the event that the appliance has been misused, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

To book an engineer visit and product advice

GB 0344 892 8988
Calls charged at local or mobile rate.

IE 01450 2655
0.03 € per minute at peak.
Off peak 0.0088 € per minute.

AU 1300 368 339

NZ 09 477 0492

Trust the expertise of the manufacturer, and rest assured that the repair will be carried out by trained service technicians using original spare parts for your domestic appliance.

Gaggenau Hausgeräte GmbH
Carl-Wery-Straße 34
81739 München
GERMANY
www.gaggenau.com

GAGGENAU



9001195986 en (970907)