
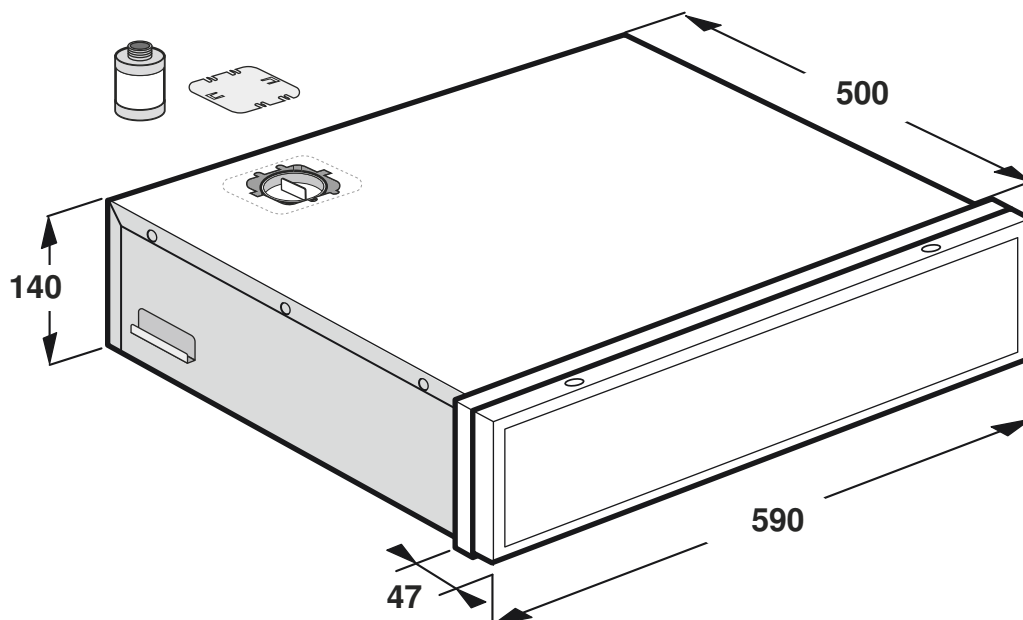
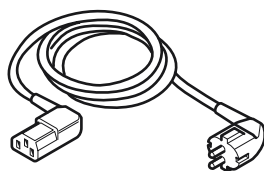

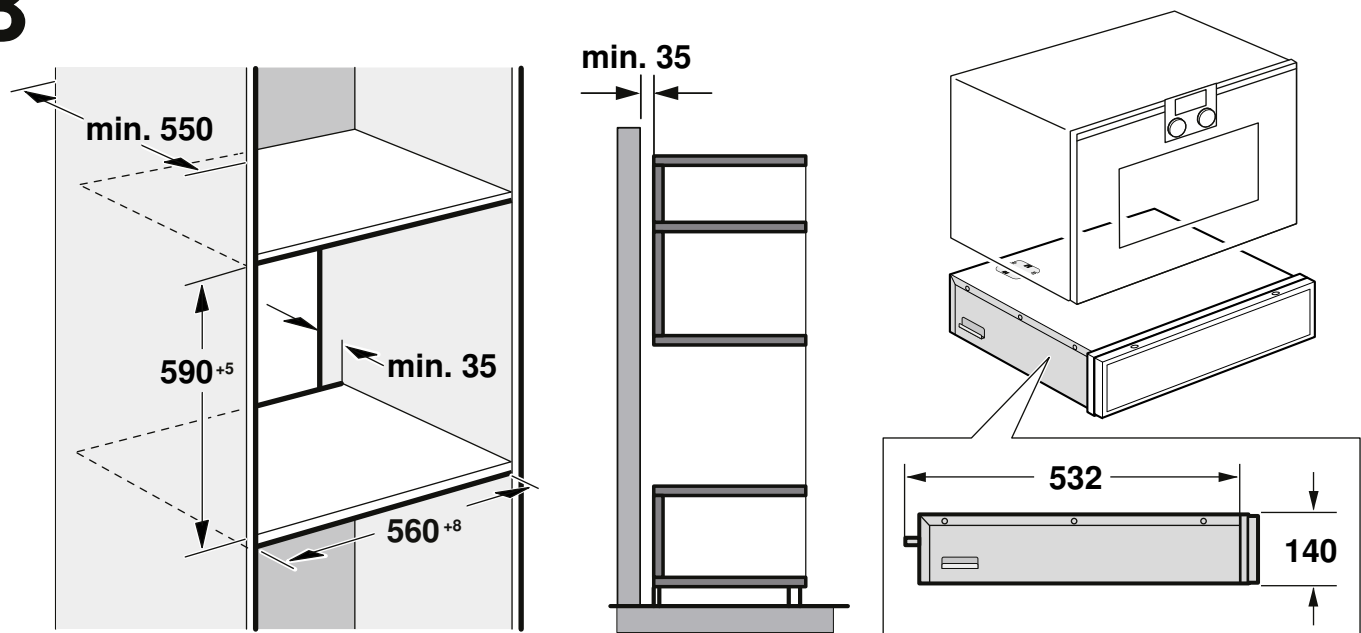
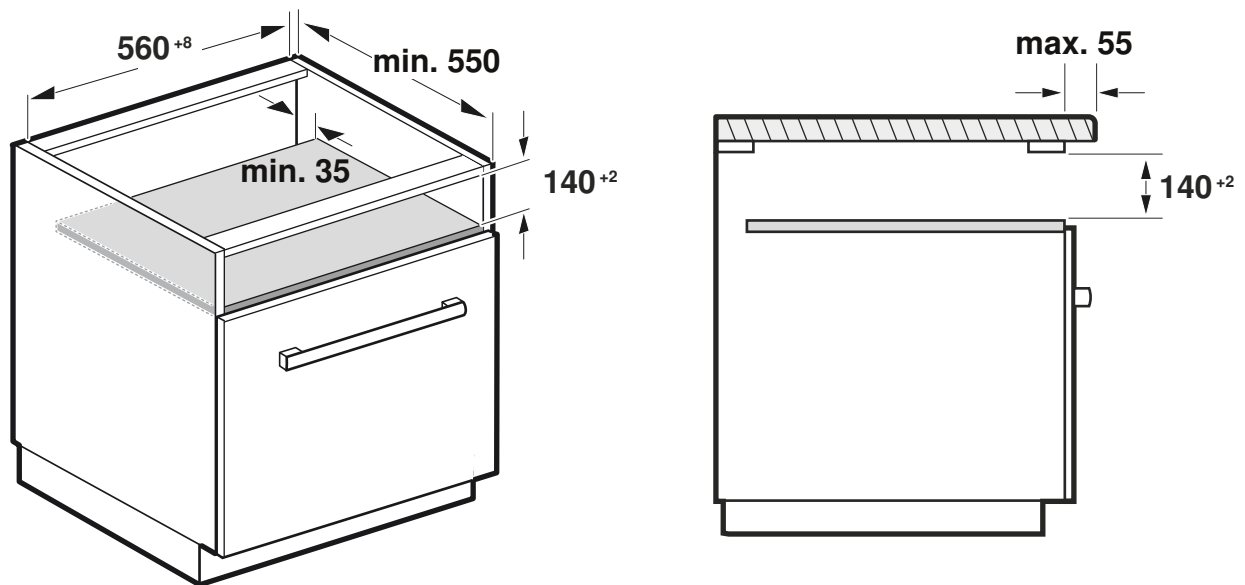



**A**

B**C**


1a

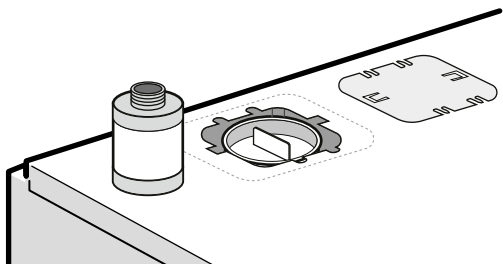


1b

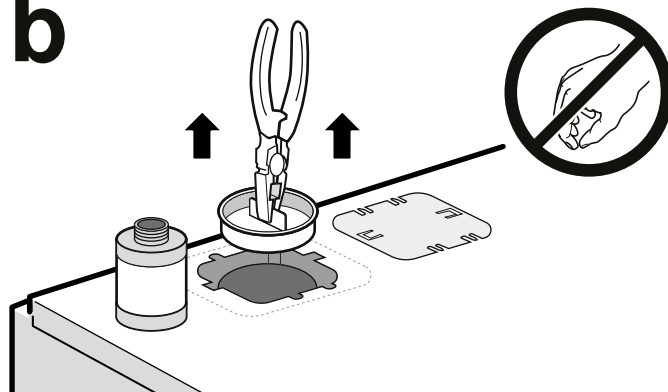


1c

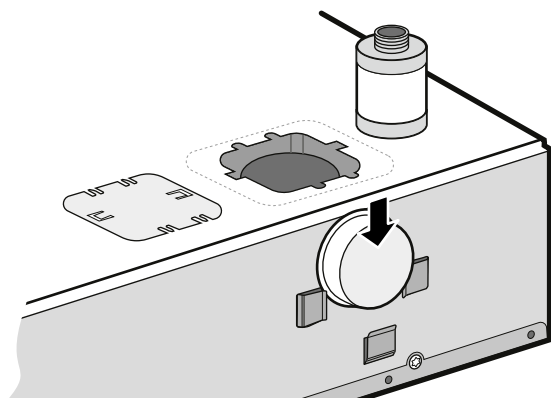


1d

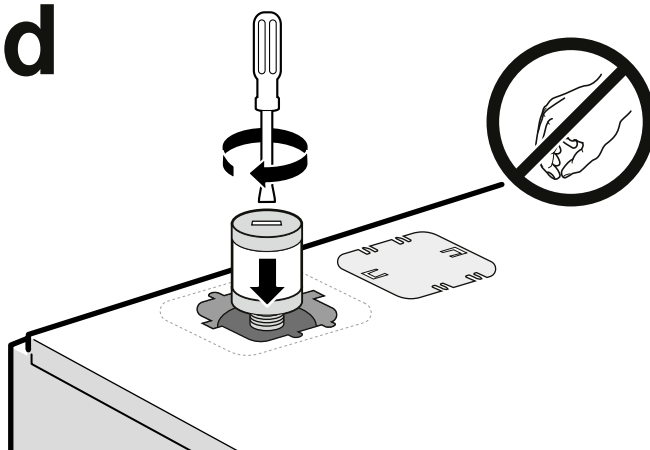

1e

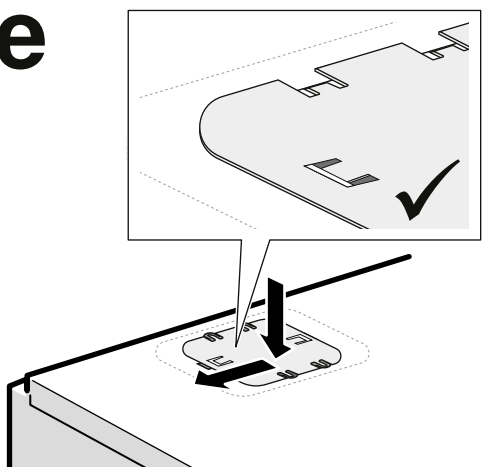


1f

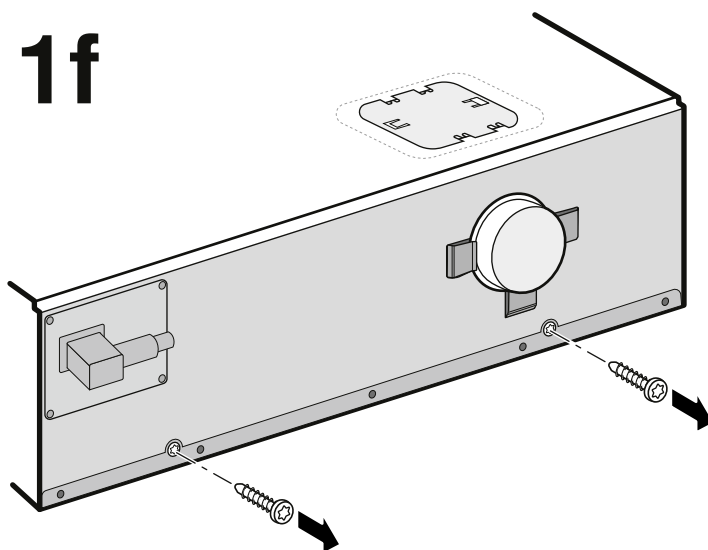


2a


2 x




4 x

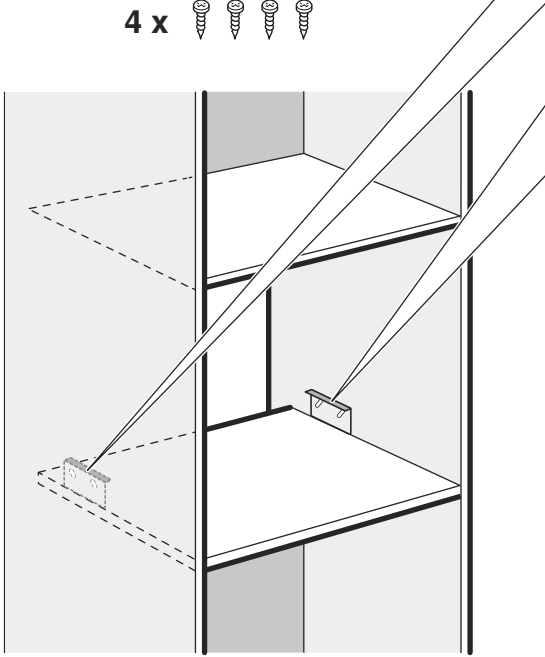


2b

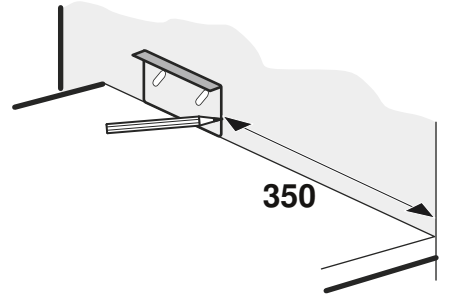

2c


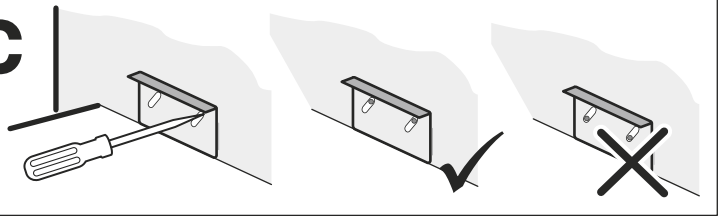


2d

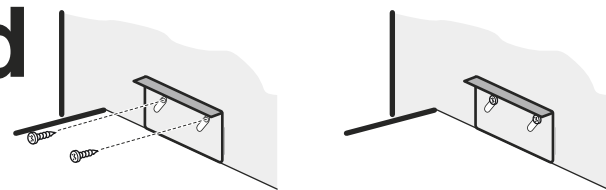


3a


4 x

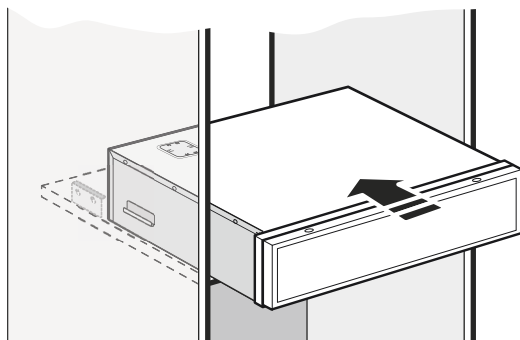


3b

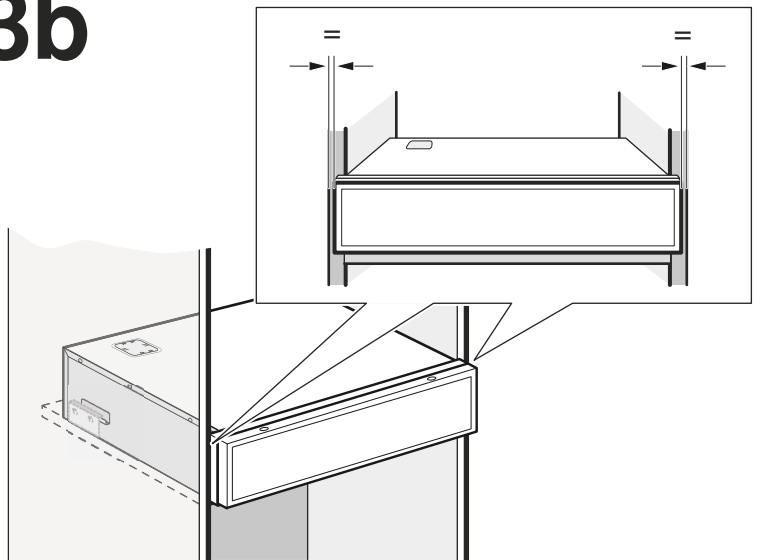

3c

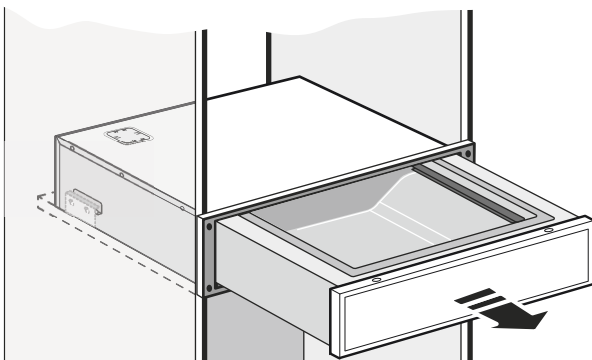

3d

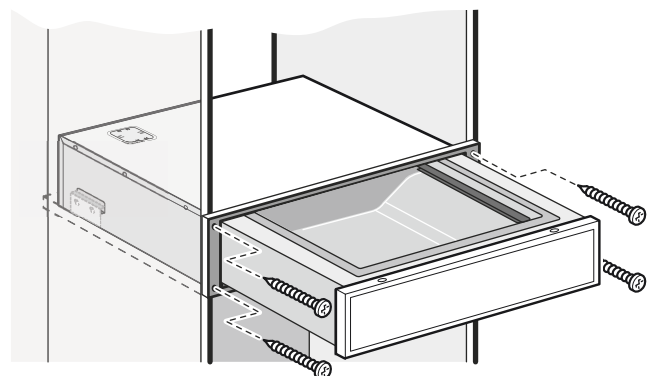

Notes on the installation instructions

Read these instructions carefully. Only then will you be able to install the appliance safely and correctly. Retain the instruction manual and assembly instructions for future use or for subsequent owners.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged during transport.

Dispose of the packaging in an environmentally friendly manner.

Keep the packaging material away from children.

Please observe

Electrical connection

The appliance must only be connected to a properly installed protective contact socket. The installation of the socket or replacement of the connecting cable must only be carried out by a qualified electrician in accordance with current regulations.

The appliance must only be connected with the power cable provided. Connect the power cable to the back of the appliance. Power cables with various plug types are available from our after-sales service.

Do not use multi-plug adapters, power strips or extension leads. There is a risk of fire in the event of overloading.

If the plug is no longer accessible subsequent to installation, an all-pole disconnecting device must be present on the installation side with a contact gap of at least 3 mm.

Fitted units

Do not install the appliance behind the door of a unit.

Read the information in the installation instructions for the appliance you want to combine with the drawer.

When installing below the worktop

If the worktop overlaps with the furniture cavity by too much, this may lead to collisions with the glass cover in the vacuum-sealing drawer. Observe the maximum possible dimension.

Before the installation – Fig. 1

Notes

- A pump that contains oil is installed in the appliance. If the incline is too great, this oil may flow out of the pump. Do not tip the appliance or upend it.
- Use a suitable tool to remove the transport locks and install the oil filter.
- Do not move the appliance if the transport locks for the pump are not installed. The oil from the vacuum pump may leak out when it is tipped or tilted, and may damage the appliance. When uninstalling the appliance, re-attach the transport locks before moving it.

1. Carefully lift the appliance out of the packaging.
2. Remove the transport lock for the pump from the top of the appliance.
The transport lock can be secured to the rear of the appliance for future use.
3. Install the oil filter.
4. Place the lid into the opening and move it to the left.
5. Remove the transport lock screws.

Using the appliance – Image 2 and 3

Caution!

If there is no tilt protection, the appliance will tip when the drawer is open. Only open the drawer if the tilt protection is installed.

Procedure

1. Install the tilt protection.
2. Connect the appliance.
3. Move the appliance into the unit.

Note: Ensure that the power cable is not pinched or kinked.

4. Centre the appliance.
5. Carefully open the drawer. Check whether the tilt protection has been guaranteed.
6. Screw the appliance into place.

نکاتی در مورد دستورالعمل‌های نصب

این راهنما را با دقت مطالعه کنید. تنها پس از مطالعه دقیق این راهنما، شما قادر به نصب صحیح و ایمن دستگاه خود خواهید بود. دفترچه‌های راهنمای استفاده و نصب را جهت استفاده‌های آتی یا برای مالکان بعدی حفظ کنید.

پس از باز کردن بسته بندی، دستگاه را از نظر آسیب‌های احتمالی بررسی کنید. چنانچه دستگاه در هنگام حمل و نقل آسیب دیده است، از اتصال آن به برق خودداری کنید.

مواد بسته‌بندی دستگاه را بر اساس اصول و موازین زیست محیطی دور بیندازید. مواد بسته‌بندی را دور از دسترس کودکان نگه دارید.

لطفاً در نظر داشته باشید

اتصال به برق

دستگاه فقط باید به یک پریز برق دارای محافظ که به شکل صحیح نصب شده است، متصل شود. نصب پریز یا تعویض کابل اتصال باید تنها توسط یک متخصص تعلیم دیده و با رعایت مقررات مربوطه صورت گیرد.

دستگاه باید تنها توسط کابل برق ارائه شده به برق متصل شود. کابل برق را به پشت دستگاه وصل کنید.

کابل‌های برق جایگزین را می‌توانید از مرکز خدمات پس از فروش ما تهیه کنید. از چند دوشاخه، سه راهی برق یا کابل رابط استفاده نکنید. بار اضافه الکتریکی خطر آتش‌سوزی به همراه دارد.

در صورتی که پریز برق بعد از نصب دستگاه دیگر در دسترس نباشد، باید یک کلید قطع جریان برای تمام قطب‌ها تعبیه شود که بعد از قطع جریان بین دو انتهای سیم حداقل 3 میلی‌متر فاصله بیندازد.

کابینت‌های مناسب

دستگاه را پشت درب یک کابینت نصب نکنید.

اطلاعات مندرج در راهنمای نصب دستگاهی را که می‌خواهید با کشو ترکیب کنید، مورد توجه قرار دهید.

نصب زیر صفحه کار

اگر سطح کار همپوشانی زیادی با فضای داخل کابینت دارد، این امر ممکن است به تصادم با درپوش شیشه‌ای کشوی وکیوم آب بندی بیانجامد. حداکثر ابعاد ممکن را رعایت کنید.

قبل از نصب – شکل 1

توجه

- یک پمپ محتوی روغن داخل دستگاه نصب شده است. اگر شیب دستگاه زیاد شود، این روغن ممکن است از پمپ بیرون بریزد. دستگاه را خم نکنید یا عمود قرار دهید.
- با استفاده از یک ابزار مناسب قفل‌های حمل و نقل را باز کنید و فیلتر روغن را نصب کنید.
- اگر قفل‌های حمل و نقل پمپ نصب نشده‌اند، دستگاه را جابجا نکنید. روغن داخل پمپ وکیوم ممکن است در صورت خم شدن با کج شدن دستگاه به بیرون نشت کند، و ممکن است به دستگاه آسیب برساند. هنگام باز کردن دستگاه از محل نصب، قبل از جابجا کردن آن قفل‌های حمل و نقل را دوباره ببندید.
- 1. دستگاه را با احتیاط از داخل بسته‌بندی بلند کنید و بیرون بیاورید.
- 2. قفل حمل و نقل پمپ را از قسمت بالای دستگاه باز کنید.
- 3. قفل حمل و نقل را برای استفاده در آینده می‌توان در پشت دستگاه بست.
- 3. فیلتر روغن را نصب کنید.
- 4. درپوش را روی دهانه قرار دهید و به سمت چپ ببرید.
- 5. پیچ‌های قفل حمل و نقل را باز کنید.

استفاده از دستگاه – شکل 2 و 3

احتیاط!

اگر هیچ حفاظی در برابر کج شدن وجود نداشته باشد، دستگاه هنگام باز بودن کشو برمی‌گردد. کشو را تنها زمانی باز کنید که محافظ کج شدن نصب شده باشد.

روش کار

1. محافظ کج شدن را نصب کنید.
 2. دستگاه را وصل کنید.
 3. دستگاه را به داخل کابینت ببرید.
- توجه:** مطمئن شوید کابل برق له نشده باشد یا پیچ نخورده باشد.
4. دستگاه را در مرکز قرار دهید.
 5. کشو را با احتیاط باز کنید. بررسی کنید که محافظ کج شدن به شکل صحیح کار می‌کند.
 6. دستگاه را در محل خود پیچ کنید.

