

The following must be noted

The appliance must not be fitted above a steamer, combination steam oven or a dishwasher.

Electrical connection

The appliance is ready to be plugged in and must only be connected to a protective contact socket that has been installed according to the regulations. Only a qualified electrician may install a socket and they must take the appropriate regulations into account when doing so. The fuse protection must be rated at 10 amperes minimum (L or B circuit breakers). The mains voltage must correspond to the voltage specified on the rating plate.

The appliance must only be connected with the power cable provided. Connect the power cable to the back of the appliance (listen for the click).

Connecting cables with different types of plugs are available from the after-sales service.

Do not use multiple plugs, power strips or extension leads. Overloading may result in a risk of fire.

If the plug is no longer accessible following installation, an all-pin disconnecting device must be present on the installation side, with a contact gap of at least 3 mm.

Fitted units

The installation cabinet must not have a back panel behind the appliance. Minimum installation height: 850 mm.

Ventilation slots and intakes must not be covered.

For appliances with additional plug adapters - minimum installation depth 340 mm

Appliance in a wall-hanging unit - Fig. 1A

Appliance in a tall unit - Fig.1B

Do not install the appliance behind a decorative panel, as this puts the appliance at risk of overheating.

Installing the oven - Fig. 2

Note: Do not trap or kink the mains lead.

موارد زیر باید مورد توجه قرار گیرند

دستگاه نباید بالای یک بخار پز، فر ترکیبی یا ماشین ظرفشویی نصب شود.

اتصال به برق

دستگاه آماده اتصال به برق است و تنها باید به یک پریز برق دارای محافظ که با رعایت مقررات نصب شده است، متصل گردد. تنها یک متخصص واجد شرایط مجاز است، نسبت به نصب پریز ضمن رعایت مقررات مربوطه، اقدام نماید. توان محافظتی فیوز باید حداقل 10 آمپر باشد (کلید قطع جریان L یا B). ولتاژ برق باید با ولتاژ مندرج بر روی برجسب یا صفحه مشخصات مطابقت داشته باشد.

دستگاه باید تنها توسط کابل برق ارائه شده به برق متصل شود. کابل برق را به پشت دستگاه وصل کنید (به صدای جا افتادن آن گوش کنید).

کابل‌های اتصال برق با دوشاخه‌های گوناگون در مرکز خدمات پس از فروش ما قابل تهیه است.

از سه راهی برق، کابل تقسیم یا کابل رابط استفاده نکنید. بار اضافه الکتریکی خطر آتش‌سوزی به همراه دارد.

در صورتی که پریز برق بعد از نصب دستگاه دیگر در دسترس نباشد، باید یک کلید قطع جریان برای تمام قطب‌ها تعبیه شود که بعد از قطع جریان بین دو انتهای سیم حداقل 3 میلی‌متر فاصله بیندازد.

کابینت‌های مناسب

کابینت محل نصب نباید دارای دیواره عقبی در پشت دستگاه باشد. حداقل ارتفاع نصب: 850 میلی‌متر.

شیرها و ورودی‌های تهویه نباید مسدود شوند.

برای دستگاه‌های دارای مبدل اضافی دوشاخه - حداقل عمق نصب 340 میلی‌متر

دستگاه داخل کابینت دیواری - شکل 1A

دستگاه داخل کابینت ایستاده - شکل 1B




دستگاه را در پشت صفحات تزئینی نصب نکنید زیرا خطر گرم شدن بیش از حد آن وجود دارد.

نصب کردن فر - شکل 2


توجه: مراقب باشید کابل برق به جایی گیر نکند یا گره نخورد.

2

C

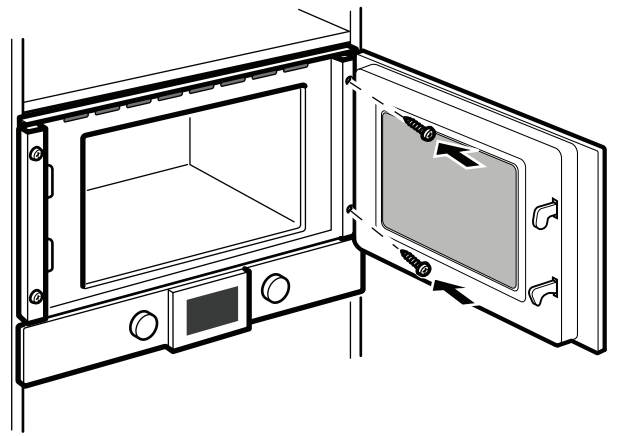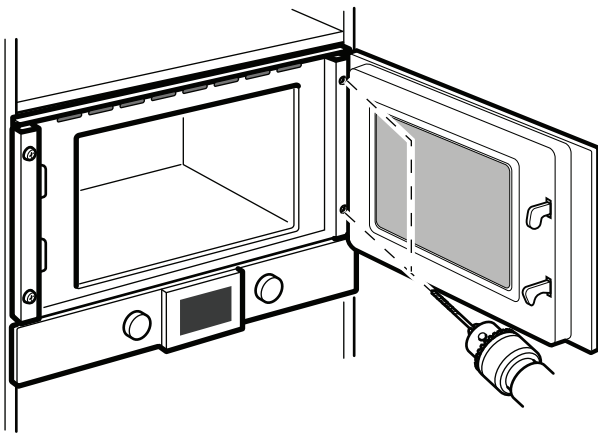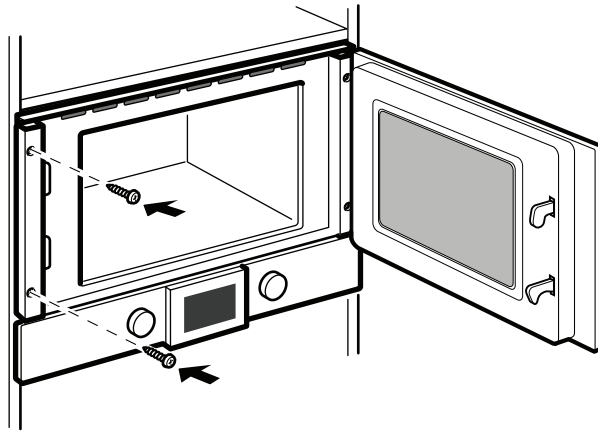


D

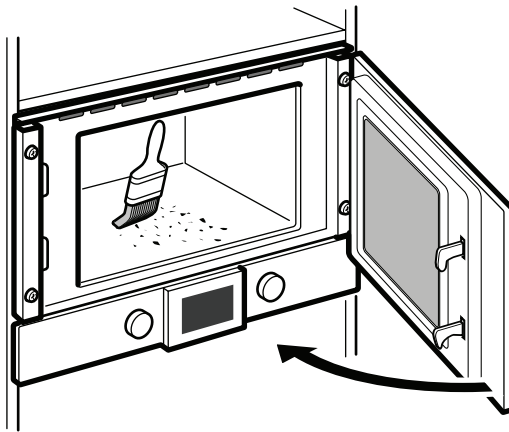


2

A

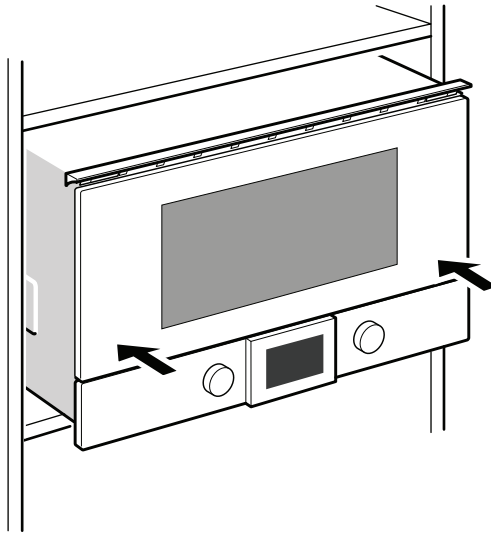

B

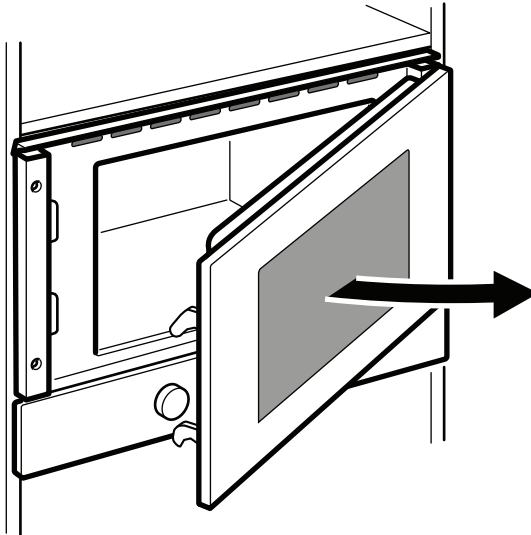

1

