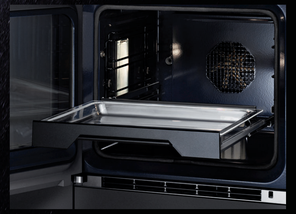

Versatile and practical. The fully extendable pull-out system allows safe and convenient access to your oven interior during broiling, baking, rotisserie cooking or preparation of food in Gaggenau's Gastronorm roaster. The roaster, made of cast aluminum with a non-stick surface, can also be used on Gaggenau's induction cooktops and Combi-steam ovens. Due to its unique design, the lid also serves as a casserole dish or as a piece of cookware.

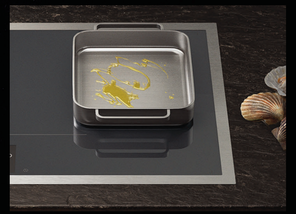

From cooktop to Teppan Yaki. With these unique Gaggenau accessories, available in two different sizes, induction cooktops can easily be converted into a Teppan Yaki. Inspired by the Japanese cuisine, "teppanyaki" style cooking is a healthy and exciting way to prepare a delicate course.

Traditional baking just like in a professional brick oven. The Gaggenau baking stone fits in all Gaggenau ovens and can be used to perfectly prepare Tarte flambée, pizza and bread. A separate heating element heats the solid stone from underneath to temperatures up to 550 °F – creating a crispy base for baked goods. Now your pastries can rival the Danish, your pizza, the Neapolitans, and your baguette, the French.

The difference is Gaggenau.

www.gaggenau.com/us

VG 010 020 US

The tools of a culinary artist

Introducing the Gaggenau accessory line

GAGGENAU

To cook a perfect dish, you need more than a good recipe.

Optimized cooking routines ease preparation and allow you to focus on your creative talents. Inspired by the streamlined workflow of a professional kitchen, Gaggenau has developed accessories that enhance the appliances and, in the end, a home chef's masterpiece. Let the artistry begin.

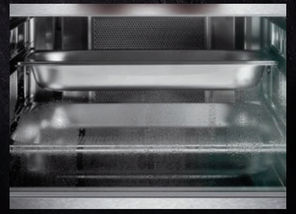

Exclusively for our in-home chefs. Gaggenau offers the versatility of the catering-standard Gastronorm system as a flexible solution for use in private homes. Using this system, dishes are prepared, cooked, kept fresh or warm, or reheated in pan sizes which conform to valid global standards. Gaggenau's Gastronorm accessories include stainless steel pans and covers, non-stick pans, a cast aluminum roaster and Teppan Yaki griddles.

Optional accessories for ovens.

For use with 24" BOP 250/251 and BO 450/451 ovens.

BA 016 165
Pull-out system
Enameled cast-iron frame and fully extendable telescopic rails, pyrolytic-safe.

BA 026 115
Baking tray
Enameled
½" deep.

BA 036 165
Wire rack
Chromium-plated
Offset rack, no opening, with feet.

BA 056 115
Heating element
Necessary accessory for baking stone BA 056 133.

BA 056 133
Baking stone
Includes support and pizza peel.

BS 020 002
Pizza peel
Additional set of 2.

GN 340 230
Gastronorm roaster
Non-stick cast-aluminum
4" deep, with 2 ½" lid, GN ⅔.

BA 226 105
Broil pan
Enameled
1" deep.

BA 046 115
Glass tray
1" deep.

For use with 30" BO 480/481 ovens and BX 480/481 double ovens.

BA 018 165
Pull-out system
Enameled cast-iron frame and fully extendable telescopic rails, pyrolytic-safe.

BA 028 115
Baking tray
Enameled
1" deep.

BA 038 165
Wire rack
Chromium-plated
Offset rack, no opening, with feet.

BA 058 115
Heating element
Necessary accessory for baking stone BA 058 133.



BA 068 133
Baking stone
Includes support and pizza peel.

BS 020 002
Pizza peel
Additional set of 2.

GN 340 230
Gastronorm roaster
Non-stick cast-aluminum
4" deep, with 2 ½" lid, GN ⅔.

Part# 687055 ▾
Broil pan
Enameled
With feet and rotisserie spit attachment,
1" deep.

▾ Parts can be purchased via the Gaggenau eshop at gaggenau.com/us

Optional accessories for Combi-steam ovens.

For use with 24" BSP 250/251, BS 470/471, BS 474/475 and 30" BS 484/485 and BS 464/465 Combi-steam ovens.

GN 114 230
Gastronorm pan, unperforated
Stainless steel
1 ½" deep, GN ⅔ full tray size.

GN 124 230
Gastronorm pan, perforated
Stainless steel
1 ½" deep, GN ⅔ full tray size.

GN 144 230
Gastronorm pan, unperforated
Non-stick coating
1 ½" deep, GN ⅔ full tray size.

GN 154 230
Gastronorm pan, perforated
Non-stick coating
1 ½" deep, GN ⅔ full tray size.

GN 410 230
Gastronorm lid
Stainless steel
1 ½" deep, GN ⅔ full tray size.

GN 340 230
Gastronorm roaster
Non-stick cast-aluminum
4" deep, with 2 ½" lid, GN ⅔.

BA 080 670
Vacuuming bags, small
7 ⅞" x 11 ⅞", 100 pcs.
For use with the vacuuming drawers DV 461/463.

GN 114 130
Gastronorm pan, unperforated
Stainless steel
1 ½" deep, GN ⅓ half tray size.

GN 124 130
Gastronorm pan, perforated
Stainless steel
1 ½" deep, GN ⅓ half tray size.

GN 144 130
Gastronorm pan, unperforated
Non-stick coating
1 ½" deep, GN ⅓ half tray size.

GN 154 130
Gastronorm pan, perforated
Non-stick coating
1 ½" deep, GN ⅓ half tray size.

GN 410 130
Gastronorm lid
Stainless steel
1 ½" deep, GN ⅓ half tray size.

GR 220 046
Wire rack
Chromium-plated
Without opening, with feet.

BA 080 680
Vacuuming bags, large
9 ⅞" x 13 ⅞", 100 pcs.
For use with the vacuuming drawers DV 461/463.

Optional accessories for 36" EB 333 oven.

BA 090 100
Stainless steel knobs with black coating, set of 2.

BA 018 165
Pull-out system
Fully extendable telescopic rails and enameled cast iron frame.

BA 028 115
Baking tray, enameled
1" deep.

BA 038 165
Wire rack, chromium-plated,
for use with 30" oven.
Offset rack, no opening, with feet.

BA 058 115
Heating element for baking stone and Gastronorm roaster.

BA 058 133
Baking stone
Incl. (heating element must be ordered separately). Not in combination with pull-out system.

BS 020 002
Pizza peel, set of 2.

GN 340 230
Gastronorm roaster
Non-stick cast-aluminum
4" deep, with 2 ½" lid, GN ⅔.

Optional accessories for Vario cooktops.

GP 900 001
Sensor frying pan
Stainless steel, non-stick coating
For ø 6" cooking zone.
For use with VI 422 ,VI 492 and CI 282/292 flex induction cooktops.

GP 900 002
Sensor frying pan
Stainless steel, non-stick coating
For ø 7" cooking zone.
For use with VI 422 ,VI 492 and CI 282/292 flex induction cooktops.

GP 900 003
Sensor frying pan
Stainless steel, non-stick coating
For ø 8" cooking zone.
For use with VI 414 and CI 282/292 flex induction cooktops.

GP 900 004
Sensor frying pan
Stainless steel, non-stick coating
For ø 11" cooking zone.
For use with VI 422, VI 492, VI 414 and CI 282/292 flex induction cooktops.

WP 400 001
Wok pan
Multiple-layered material
With round bottom and handle,
ø 14 ⅜", 5.3 quarts, height 3 ⅛".
For use with VG 231 gas cooktop, VI 414 induction wok cooktop, VI 491/VI 492 cooktops.

WZ 400 001
Wok support ring for wok pan
For use with 400 series VI 414 induction wok and VI 492 cooktop.

AM 060 000
Griddle plate
Cast iron
For use with 200 series VR 230 electric grill.

VA 461 000
Cast-iron griddle plate
Enameled
For simultaneous frying and grilling on two separate surfaces
Half size. One half-size griddle comes with the grill.
For use with 400 series VR 414 electric grill.

VA 461 001
Cast-iron griddle plate
Enameled
For simultaneous frying and grilling on two separate surfaces
Full size.
For use with 400 series VR 414 electric grill.

Optional accessories for cooktops.

For use with gas cooktops.

WP 400 001
Wok pan
Multiple-layered material With round bottom and handle, ø 14 ⅜", 5.3 quarts, height 3 ⅛".
For use on center wok burner of VG 295, VG 491 gas cooktops, VG 231 gas cooktop and VG 415.

For use with induction and flex induction cooktops.

GP 900 001
Sensor frying pan
Stainless steel, non-stick coating
For ø 6" cooking zone.
For use with VI 422 & VI 492 and CI 282/292 flex induction cooktops.

GP 900 002
Sensor frying pan
Stainless steel, non-stick coating
For ø 7" cooking zone.
For use with VI 422 & VI 492 and CI 282/292 flex induction cooktops.

GP 900 003
Sensor frying pan
Stainless steel, non-stick coating
For ø 8" cooking zone.
For use with VI 422 & VI 492 and CI 282/292 flex induction cooktops.

For use with electric cooktops.

GP 900 001
Frying pan
Stainless steel, non-stick coating
For ø 6" cooking zone.

GP 900 003
Frying pan
Stainless steel, non-stick coating
For ø 8" cooking zone.

GP 900 004
Sensor frying pan
Stainless steel, non-stick coating
For ø 11" cooking zone.
For use with VI 414 and CI 282/292 flex induction cooktops.

GN 340 230
Gastronorm roaster
Non-stick cast-aluminum
4" deep, with 2 ½" lid, GN ⅔.
For use with CX 482/492.

Optional accessories for cooktops.

For use with induction and flex induction cooktops.

GN 232 230
Teppan Yaki
Multi-ply material
13" x 14", GN ⅔.
For use with CX 482/492.

CA 051 300
Teppan Yaki made of multi ply material,
13" x 14", GN ⅔.
For use with CI 282/292 flex induction cooktops only.

GN 232 110
Teppan Yaki
Multi-ply material
13" x 21", GN ½.
For use with CX 482/492.

CA 230 100
Stainless steel knobs with black coating
For CI 282/292 flex induction cooktops.

CA 060 600
Cooking sensor for temperature regulation with pots.
For use with CX 482/492 and CI 282/292 flex induction cooktops.

Optional accessories for refrigeration.

For use with 18" wine storage unit RW 414.

RA 492 160
Removable shelf with oak wood frame.
Suitable for decanters and open bottles.



RA 493 060
Presenter in oak wood and aluminum in anthracite for single bottle display.
1 piece.

RA 491 161
Fully extendable bottle trays with hidden telescopic rails in oak wood and solid aluminum in anthracite.



RA 498 140
Bottle support in oak wood for convenient storage of bottles on the division plate.

RA 430 000
Screw hole cover set. 8 pieces.

For use with 24" wine storage unit RW 466.

RA 492 660
Removable shelf with oak wood frame.
Suitable for decanters and open bottles.



RA 493 060
Presenter in oak wood and aluminum in anthracite for single bottle display.
1 piece.

RA 491 661
Fully extendable bottle trays with hidden telescopic rails in oak wood and solid aluminum in anthracite.



RA 498 640
Bottle support in oak wood for convenient storage of bottles on the division plate.

RA 430 000
Screw hole cover set. 8 pieces.

For use with refrigerators RC462/472/492, RB472/492 and RY492.

RA 430 100
Storage container with transparent lid, anthracite.



Optional accessories for dishwashers.

DA 042 030
Sterling silver cutlery cassette.
Aluminum silver care cassette to protect corrosion of silver cutlery.
Easy placement of cartridge in the cutlery basket.
W x H x D in inches:
2 ⅛" x 8 ⅝" x 1 ⅝".

DA 043 000
Holder for long-stemmed glasses.
Offers safe positioning for up to four long-stemmed glasses during the wash cycle and ensures optimal cleaning results. For positioning in the lower rack.

DA 043 060
Glassware basket.
Special glass basket to prevent tipping of cups or long stemmed glasses in 24" deep dishwashers.
W x H x D in inches:
19 ⅛" x 13 ⅜" x 10 ⅛".
Only for use with DF 250/251 761