


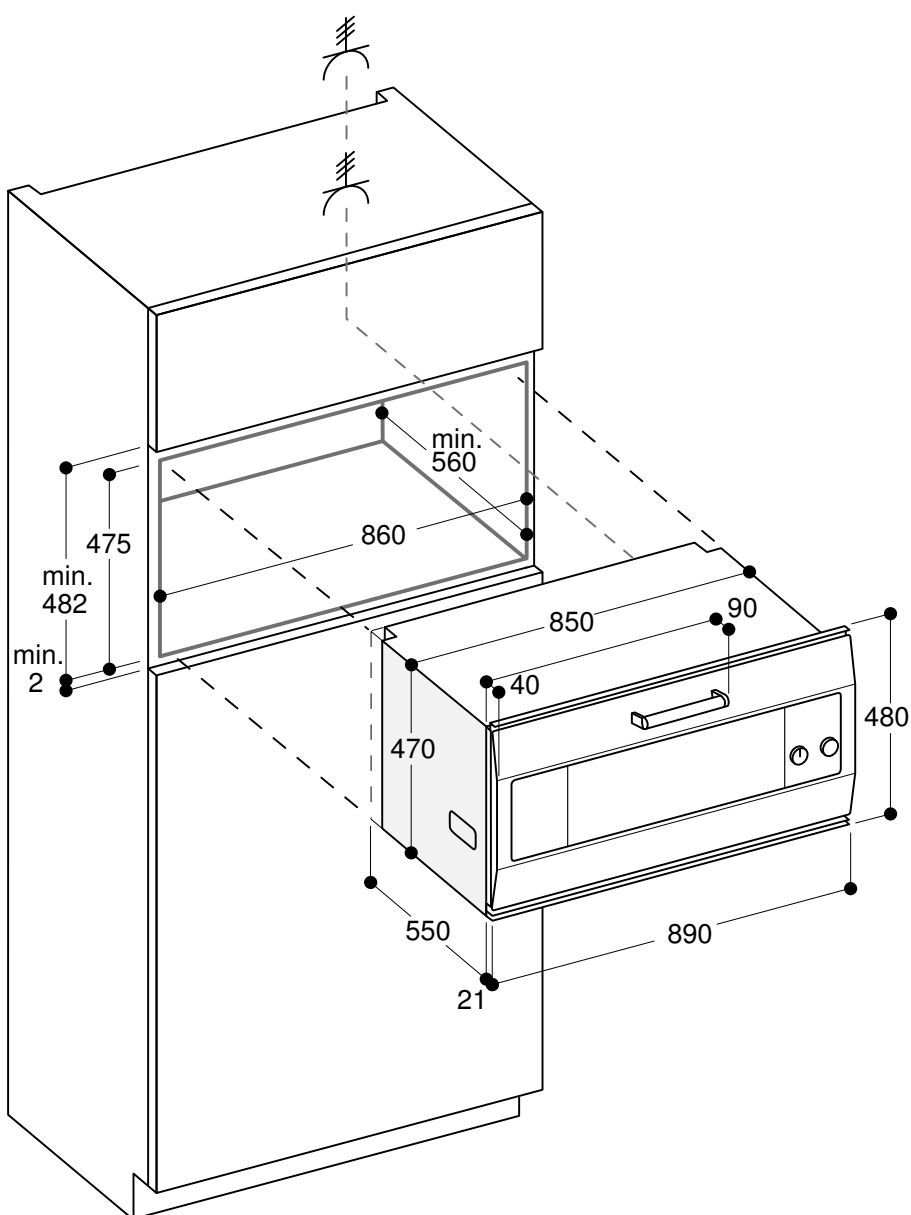

Important notes

△ Risk of injury!

The appliance is heavy. To move the appliance, 2 people are required. Use only suitable tools and equipment.

- Read these instructions carefully and keep them in a safe place. Safety during use can only be ensured if the appliance is fitted correctly according to these installation instructions. The installer is responsible for ensuring that the appliance operates perfectly at the point of installation.
- Only allow a licenced professional to connect the appliance.
- The appliance must be disconnected from the power supply during all installation work.
- Wear protective gloves to prevent injury from cuts. Parts that are accessible during installation may have sharp edges.
- Check the appliance for any transport damage before installation.
- Do not lift the appliance by the door, door handle or lower air vent.
- For installation, currently applicable building regulations and the regulations of the local electricity supplier must be observed.
- This appliance corresponds to appliance class 3 for installation in a kitchen unit according to the installation drawing. Observe the minimum distances.

Preparing kitchen units

Fitted units must be heat-resistant up to 90 °C, and adjacent unit fronts up to 70 °C.

The mains socket must be located outside of the built-in niche.

Any cut-outs that need to be made in the units should be made before the appliance is installed. Remove any shavings, as they may prevent the electrical components from working properly.

Secure any unsecured units to the wall using a standard bracket.

Do not fit the appliance too high up; it must be possible for accessories to be removed easily.

Electrical connection

Ensure that there is sufficient fuse protection for the household wiring. The voltage and frequency of the appliance must match the electrical wiring (see rating plate).

The appliance corresponds to protection class 1 and must only be operated with a protective earth connection.

Fuse protection by means of B- or C-type circuit breakers is required.

The wiring must have an all-pole isolating switch with a contact gap of at least 3 mm. This must still be accessible once the appliance has been installed.

Appliance without power cable: Only connect as shown in the connection diagram. If necessary, fit the copper bridges supplied. The appliance may be damaged if it is not connected correctly.

Power cable: Type H05 VV-F or a higher rating. The yellow/green wire for the PE connection must be 10 mm longer than the other wires for the appliance.

Fitting the appliance

1. Push the appliance all the way into the built-in unit.
Do not kink or trap the power cable, or route it over sharp edges.
2. Remove the transport securing device from the door. Centre the appliance.
There must be an air gap of 2 mm between the appliance and adjacent unit fronts.
3. Using a spirit level, position the appliance so that it is perfectly level.
4. Secure the appliance at the top on both sides using the screws provided.

Removal

1. Disconnect the appliance from the power supply.
2. Undo the securing screws.
3. Lift the appliance slightly and pull it out completely.

중요 정보

△ 부상 위험!

제품이 무겁습니다. 제품을 옮기려면 2 명이 필요합니다. 적절한 도구와 장비만을 사용하십시오.

- 본 설명서를 읽고 숙지하고, 안전한 곳에 보관하십시오. 사용 중 안전은 본 설치 설명서에 따라 제품을 올바르게 설치할 경우에만 보장됩니다. 설치자는 설치 장소에서 제품의 완벽한 작동을 보장할 책임이 있습니다.
- 허가를 받은 전문기사만 제품을 연결할 수 있습니다.
- 설치 작업 중에는 제품에서 전원을 차단해야 합니다.
- 부상 방지를 위해 보호장갑을 착용하십시오. 설치 작업 중 가장자리가 날카로운 부품에 닿을 수 있습니다.
- 설치 전에 배송 과정에서 손상된 부분이 있는지 확인하십시오.
- 문, 문 손잡이 또는 하단 환기구를 잡고 제품을 들지 마십시오.
- 설치 시 관련 건물 규정과 현지 전기공급업체의 규정을 반드시 준수하십시오.
- 본 제품은 설치 도면에 따른 주방 구조물 내 설치를 위한 제품 등급 3 을 준수합니다. 최소 거리를 유지하십시오.

부엌 구조물 준비

구조물은 최대 90 °C, 주변 장치는 최대 70 °C 의 내열 성능을 가져야 합니다.

메인소켓은 빌트인 니치 외부에 위치해야 합니다.

장치에서 이루어져야 하는 컷아웃은 제품을 설치하기 전에 해야 합니다. 세이빙은 전기 구성품의 제대로 된 작동을 막을 수 있으므로 제거합니다.

표준 브래킷을 사용하여 고정하지 않은 장치를 벽에 고정합니다. 제품을 너무 높이 끼우지 마십시오. 부속품을 쉽게 제거할 수 있어야 합니다.

전기 연결

가정 배선을 위한 퓨즈 보호가 충분한지 확인하십시오. 제품의 전압 및 주파수가 전기 배선과 일치해야 합니다 (명판 참조).

이 제품은 보호 등급 1을 준수하고 보호 접지 연결이 된 상태에서만 작동해야 합니다.

B 또는 C 형 회로 차단기를 사용한 퓨즈 보호가 필요합니다.

배선에 접촉 간극이 최소 3mm 인 전극 절연 스위치가 있어야 하며 제품이 일단 설치되면 여전히 액세스 가능해야 합니다.

전원 케이블이 없는 제품: 도표에 설명된 대로만 연결하십시오. 필요한 경우 제공된 구리 브리지를 끼우십시오. 제품이 제대로 연결되어 있지 않을 경우 손상될 수 있습니다.

전원 케이블: H05 VV-F 이상 등급 유형. PE 연결의 황색 / 녹색 전선이 다른 제품용 전선보다 10mm 더 길어야 합니다.

기기 설치

1. 제품을 빌트인 장치 안으로 완전히 밀어넣습니다.
전원 케이블이 끼이거나 꼬이지 않게 하고, 날카로운 모서리 위로 배선하지 마십시오.
2. 문에서 운반 고정 장치를 제거합니다. 제품을 중심 위치에 놓습니다.
제품과 주변 장치 전면 사이에 2mm 의 간극이 있어야 합니다.
3. 수평계를 사용해 제품 수평을 맞추십시오.
4. 제공된 나사를 사용해 제품을 양측 상단에 고정합니다.

제거

1. 제품을 전원에서 분리하십시오.
2. 고정 나사를 푸십시오.
3. 제품을 살짝 들어올린 다음 밖으로 완전히 빼내십시오.

