



DF270101F

1 x baking tray spray head
1 x stainless steel trim kit

DA041160:
Cutlery Drawer with smooth running rails

DA043000:
Holder for long-stemmed glasses

fully-integrated dishwasher 200 series
60 cm, Variable hinge for special installation situations
DF270101F

Flexible basket system with smooth running rails on all levels
Bright interior lighting
Push-to-open function for perfect integration into handleless furniture fronts
Very quiet: 43 dB

Handling

TFT display indicating remaining or end time, refill for salt and rinsing agent, inflow of water.
Touch key operation.
Information key with use indicators.
Time delay up to 24 hours.
Visual and acoustic end of programme indicator.

Technical Features

Bright interior lighting.
Glass protection with zeolite.
Aqua sensor.
Load sensor.
Automatic detergent function.
Regeneration electronics
Heat exchanger.
speedMatic hydraulic system
Triple filter system.
Soft lock.
Home network integration for digital services (Home Connect) wireless via WiFi.
The use of the Home Connect functionality depends on the Home Connect services, which are not available in every country. For further information please check: home-connect.com.

Programmes

Features

Flexible basket system with smooth running rails on all levels.
Cutlery basket.
Maximum dish sizes (upper/lower basket) 27/25, 24.5/27.5 or 22/31 cm respectively.
12 place setting capacity.
Maximum glass loading capacity 23 wine glasses.

Consumption data

From 9.5 l water.
Noise level 43 dB (re 1 pW).

Planning notes

Height-adjustable feet.
Appliance plinth recess 100 mm (see drawing).
Rear feet adjustable at front.
Door weight up to 11 kg.
Door panel dimension dependent on plinth height of kitchen furniture.
Installation and usage also with furniture handle possible. The push-to-open function remains active.

Connection


Connecting cable pluggable.
Water connection with 3/4" screw joint.
Connection to hot or cold water possible.
Power consumption standby/network 2.0 W.
Time auto-standby/network 2 min.

Left-on-mode duration 0 min.

Please check the user manual for how to switch off the WiFi module.

81.5 cm high dishwasher with flexible hinge

Connection dimensions for a 60 cm wide dishwasher

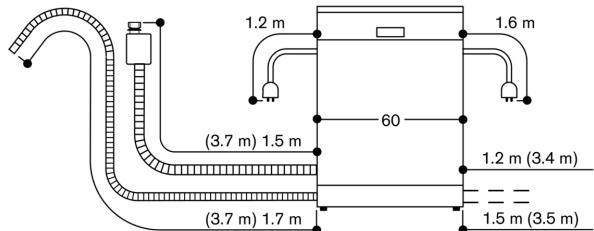

() values with extension kit

