



DF481100F



#### Included accessories

- 1 x baking tray spray head
- 1 x GN container insert
- 1 x holder for long-stemmed glasses
- 1 x stainless steel trim kit

#### Optional accessories

DA041160:

Cutlery Drawer with smooth running rails

DA042030:

Silver polishing cassette

DA043000:

Holder for long-stemmed glasses

DA045061:

3. Basket with smooth running rails

#### Installation accessories

GZ010011:

inlet and outlet hose extension

#### Dishwasher 400 series

60 cm, Variable hinge for special installation situations

DF481100F

Optimal protection for sensitive glassware by low temperature drying with zeolite, elaborated basket design and intelligent water softening 8 programmes with aqua sensor and 4 options, such as Power for cleaning and drying dishes from 57 minutes and Intensive for particularly thorough cleaning in the lower basket

Flexible basket system with smooth running rails on all levels and cushioned closing of the upper and lower basket

Perfectly illuminated interior

Push-to-open function for perfect integration into handleless furniture fronts

Flexible hinge for reduced plinth height as of 50 mm or tall unit installation

Lateral Info-Light

Very quiet: 42 dB

#### Handling

TFT display indicating remaining or end time, refill for salt and rinsing agent, inflow of water.

Touch key operation.

Flexible cycle time reduction, even during an active cycle.

Personalisation function for saving individual combinations of programmes.

Information key with use indicators.

Time delay up to 24 hours.

Visual and acoustic end of programme indicator.

Lateral Info-Light.

#### Technical features

Perfectly illuminated interior.

Glass protection with zeolite.

Aqua sensor.

Load sensor.

Detergent recognition.

Regeneration electronics.

Heat exchanger.

Continuous flow heater.

Triple filter system.

Soft lock.

Aqua stop.

#### Selected digital services (Home Connect)

Programme assistant.

Temporary noise reduction.

Downloadable programmes.

Home network integration for digital services (Home Connect) wireless via WiFi.

The use of the Home Connect functionality depends on the Home Connect services, which are not available in every country. For further information please check: [home-connect.com](http://home-connect.com).

#### Programmes

8 programmes:

Auto 35 °C - 45 °C. Auto 45 °C - 65 °C. Auto

65 °C - 75 °C. Intensive 70 °C. Eco 50 °C.

Night programme. Quick wash 45 °C (35 min.).

Personalisation function (default setting:

Pre-rinse).

4 options:

Intensive. Power. Half Load. Hygiene.

Machine Care.

#### Interior

Flexible basket system with smooth running rails on all levels and cushioned closing of the upper and lower basket.

Upper basket:

Over extension. Optional extra cleaning area by activating additional spray nozzles. Rackmatic with 3 levels, adjustable in height up to 5 cm. 6 folding spines. 4 folding racks for optimal protection of glass.

Lower basket:

8 folding spines. 2 folding racks for optimal protection of glass. Dividable glass support.

Cutlery basket.

Maximum dish sizes (upper/lower basket)

29/28, 26.5/30.5 or 24/34 cm respectively.

12 place setting capacity.

Maximum glass loading capacity 23 wine glasses.

#### Consumption data

Energy efficiency class C at a range of energy efficiency classes from A to G.

From 9.5 l water.

From 0.8 kWh.

Noise level 42 dB (re 1 pW).

#### Planning notes

Height-adjustable feet.

Appliance plinth recess 100 mm (see drawing).

Rear feet adjustable at front.

Door weight up to 11 kg.

Door panel dimension dependent on plinth height of kitchen furniture.

Installation and usage also with furniture handle possible. The push-to-open function remains active.

#### Connection

Total connected load 2000-2400 W.

Connecting cable pluggable.

Water connection with 3/4" screw joint.

Connection to hot or cold water possible.

Power consumption standby/network 2.0 W.

Power consumption left-on-mode 0.5 W.


Power consumption off-mode 0.5 W.

Time auto-standby/network 2 min.

Left-on-mode duration 0 min.

Please check the user manual for how to switch off the WiFi module.

Connection dimensions for a 60 cm wide dishwasher

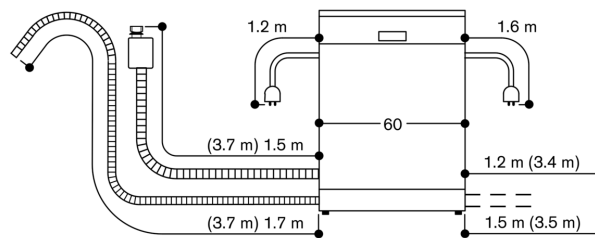

( ) values with extension kit

86.5 cm high dishwasher with flexible hinge

